

Illustrated Parts Manual



10709902 January 2000



ANSI

CONTENTS 4 Maintenance 6 Electrical System Service · · · 10 Capacity Guide 11 Wiring Diagram . . . Wiring Harness 12 General Assembly 14 18 22 24 26 30 32 34 38 Hydraulic System (Pump to Valve) <u>1</u>2 <u>i</u>4 46 Steering Booster Assembly • • • • • • • • • Valve Control Assembly 50255 5255 56 . 60 62 64 66

MAINTENANCE

This machine was checked and tested before shipment, but due to jolts and vibrations during shipment, it should be thoroughly checked upon delivery. A through inspection should be made of all nuts, bolts, and hose connections. Tighten where necessary. All drive wheel lug bolts should be tightened to 100 lbs. torque when the machine is received. They should be retightened after a day or two of use to above torque factor. Check all parts for breakage, and check oil leaks. Oil levels should be replenished if necessary, and should be maintained at check plug levels at all times.

Upon delivery, lubricate all points as shown on the lubrication chart and follow its instructions thereafter. Steering axle spindle bearings check and adjust if necessary.

CARE OF TIRES

For best results in operating a Lull 7C2 High-Lift, be sure to have all tires inflated properly. (When you receive the machine the 14.9-24 tires are carrying 50 lbs. air pressure each; this high pressure in shipping is to eliminate bouncing during transportation.) When working with this machine, lower the traction tires to 45 psi in the left-hand drive tire; change the pressure in the right-hand drive tire to 42 psi. This is the proper pressure under most working conditions. For light loads and soft ground conditions, lower pressures can be used, but reinflate to above for heavy loads. Rear or steering tires should be inflated to at least 50 P.S.I.

CALCIUM-CHLORIDE FILLED TIRES

For an added safety feature in lifting heavy loads to great heights, Lull Engineering Co. insists on 450 lbs. of calcium chloride water solution in each of the driving tires for additional stability and improved traction. Each driving tires is threequarters full with 450 lbs. When the solution comes up to the valve stem when it is on the high side of the tire, this is the proper location when filling.

NOTE: THE WARRANTY ON THE MACHINE IS VOID WITHOUT THE 450 LBS. OF CALCIUM CHLORIDE SOLUTION IN EACH DRIVE TIRE AND 160 LBS. CALCIUM CHLORIDE IN EACH STEERING TIRE.

Special attention should be given to the hydraulic system. It's failure could result in danger to the load and to persons and property in the immediate area. Any oil leak should be repaired and all worn hoses should be replaced. It is essential that these parts are replaced with genuine LULL ENGINEERING CO. parts, and no other.

-6-

CAUTION: DO NOT USE STANDARD HARDWARE STORE PIPES AND FITTINGS. VERY FEW HARDWARE STORES OR PLUMBERS STOCK EXTHA STRONG PIPES OF AAR FITTINGS.

How to fill the hydraulic tank and system: Fill the tank full of hydraulic oil. Then have the operator raise and lower the hoist cylinder; fully extend and retract every cylinder on the entire system slowly. This also includes the steering booster by turning it from extreme right to extreme left position, and back to center. After all cylinders and the hydraulic system are full of oil and collapsed, refill the supply tank to the lower check level plug.

Never run the engine unless the hydraulic tank intake line to the pump is connected and filled with oil.

When hydraulic fluid is added to the system, always pour it thru a micron filter. If a micron filter is not available, use a funnel with a fine wire screen (at least 200 mesh) inserted in the small end.

Be certain that the hydraulic fluid meets the specifications as listed in the lubrication chart.

Never operate the control levers when the engine is not funning. This causes air cavitation above the piston and results in momentary drifting action. If air cavitation should occur, the oil can be replaced by working the control lever until by-pass flutter is heard in full forward or full back position.

Steering booster operating pressures are governed by relief valves. The system operating pressure, checked with the steering knuckles blocked, should not exceed the recommended pressure setting of 1000 psi. These operating pressures should be reduced if it is found that the thrust developed is appreciable greater than that required for normal steering conditions.

Fluctuating pressure or loss of pressure in the system may result from faulty operation of the relief valve. Usually this is caused by a damaged spring, a worn poppet, or by scale, sludge, etc., lodging between the poppet and it's seat.

These parts can be inspected by uncoupling the drag link and ball stud from the steering gear and lowering the booster to clear the drag link. Disassembly may then be accomplished.

Pitman arm stops limit the number of degrees that the pitman arm can move in either direction. Proper adjustment of these stops is important to the prevention of excessive thrust and cramping of the booster. Wheel stops should have 3/16 inch clearance at each wheel when pitman arm is in contact with the stop under operators platform.

NOTE: Company facilities provide for complete valve overhaul on 24 hour basis when sent to the factory.

MAINTENANCE - 7C2-40'

This machine was checked and tested before shipment, but due to jolts and vibrations during shipment, it should be throughly checked upon delivery. A through inspection should be made of all nuts, bolts, and hose connections. Tighten where necessary. All drive wheel lug bolts should be tightened to 100 lbs. torque when the machine is received. They should be retightened after a day or two of use to above torque factor. Check all parts for breakage, and check for oil leaks. Oil levels should be replenished, if necessary, and should be maintained at check plug levels at all times.

Upon delivery, lubricate all points as shown on the lubrication chart and follow its instructions thereafter. Steering axle spindle bearings check and adjust if necessary.

CARE OF TIRES

For the best results in operating a Lull 7C2 High-Lift, be sure to have all tires inflated properly. (When you receive the machine the 14.9-24 tires are carrying 50 lbs. air pressure each; this high pressure in shipping is to eliminate bouncing.)

When working with this machine, lower the traction tires to 35 psi in the left inside tire, and 33 psi in the right inside tire. The outside drive tires should be 16 psi. The two steering tires should be inflated to 50 lbs. This is the proper pressure under most working conditions, lower pressure when working in soft ground or sand but reinflate to above for heavy loads.

CALCIUM-CHLORIDE FILLED TIRES

For an added safety feature in lifting heavy loads to great heights, Lull Engineering Company, Inc. insists on 450 lbs. of calcium chloride water solution in each of the inside driving tires for additional stability and improved traction. Each driving tire is three-quarters full with 450 lbs. When the solution comes up to the valve stem when it is on the high side of the tire, this is the proper location when filling.

NOTE: THE WARRANTY ON THE MACHINE IS VOID WITHOUT THE 450 LBS. OF CALCIUM CHLORIDE SOLUTION IN EACH INSIDE DRIVING TIRE ONLY AND 160 LBS. CALCIUM CHLORIDE IN EACH STEERING TIRE. NO CALCIUM CHLORIDE SOLUTION IN OUTSIDE DRIVE TIRES. WHEN HIGH FLOTATION TIRES ARE INSTALLED ON THE REAR ADD 160 LBS. CALCIUM CHLORIDE SOLUTION AND INFLATE THE TIRES 40 TO 50 PSI.

Special attention should be given to the hydraulic system. Its failure could result in danger to the load and to persons and property in the immediate area. Any oil leak should be repaired and a all worn hoses should be replaced. It is essential that these parts are replaced with genuine LULL ENGINEERING COMPANY, INC. parts and no other. CAUTION: DO NOT USE STANDARD HARDWARE STORE PIPES AND FITTINGS. VERY FEW HARDWARE STORES OR PLUMBERS STOCK EXTRA STRONG PIPES OR AAR FITTINGS.

How to fill the hydraulic tank and system: Fill the tank full of hydraulic oil. Then have the operator raise and lower the hoist cylinder; fully extend and retract every cylinder on the entire system slowly. This also includes the steering booster by turning it from extreme right to extreme left position, and back to center. After all cylinders and the hydraulic system are full of oil and collapsed, refill the supply tank to the lower check level plug.

Never run the engine unless the hydraulic tank intake line to the pump is connected and filled with oil.

When hydraulic fluid is added to the system, always pour it thru a micron filter. If a micron filter is not available, use a funnel with a fine wire screen (at least 200 mesh) inserted in the small end.

Be certain that the hydraulic fluid meets the specifications as listed in the lubrication chart.

Never operate the control levers when the engine is not running. This causes air cavitation above the piston and results in momentary drifting action. If air cavition should occur, the oil can be replaced by working the control lever until bypass flutter is heard in full forward or full back position.

Stearing booster operating pressures are governed by relief values. The system operating pressure, checked with the steering knuckles blocked, should not exceed the recommended pressure setting of 1000 psi. These operating pressures should be reduced if it is found that the thrust developed is appreciable greater than that required for normal steering conditions.

Fluctuating pressure or loss of pressure in the system may result from faulty operation of the relief valve. Usually this is caused by a damaged spring, a worn poppet, or by scale, sludge, etc., lodging between the poppet and its' seat.


These parts can be inspected by uncoupling the drag link and ball stud from the steering gear and lowering the booster to clear the drag link. Disassembly may then be accomplished.

Pitman arm stops limit the number of degrees that the pitman arm can move in either direction. Proper adjustment of these stops is important to the prevention of excessive thrust and cramping of the booster. Wheel stops should have 3/16 inch clearance at each wheel when pitman arm is in contact with the stop under operators platform.


NOTE: Company facilities provide for complete value overhaul on 24 hour basis when sent to the factory.

CAPACITIES - 7C2 MODELS

HYDRAULIC SYSTEM & RESERVIOR 23 GAL.
RADIATOR COOLING SYSTEM 20 QTS.
CRANKCASE
TORQUE CONVERTER 2.5 GAL.
TRANSMISSION
AND DIFFERENTIAL
FUEL TANK
TIRES (CALCIUM CHLORIDE)
STEERING TIRES 150-160 LBS. PER TIRE.
DRIVE TIRES
NOTE: DUAL WHEEL MODELS REQUIRE 450 LBS. ON INNER
DRIVE TIRES ONLY AND 150 to 160 LBS. PER
TIRE IN STEERING TIRES.

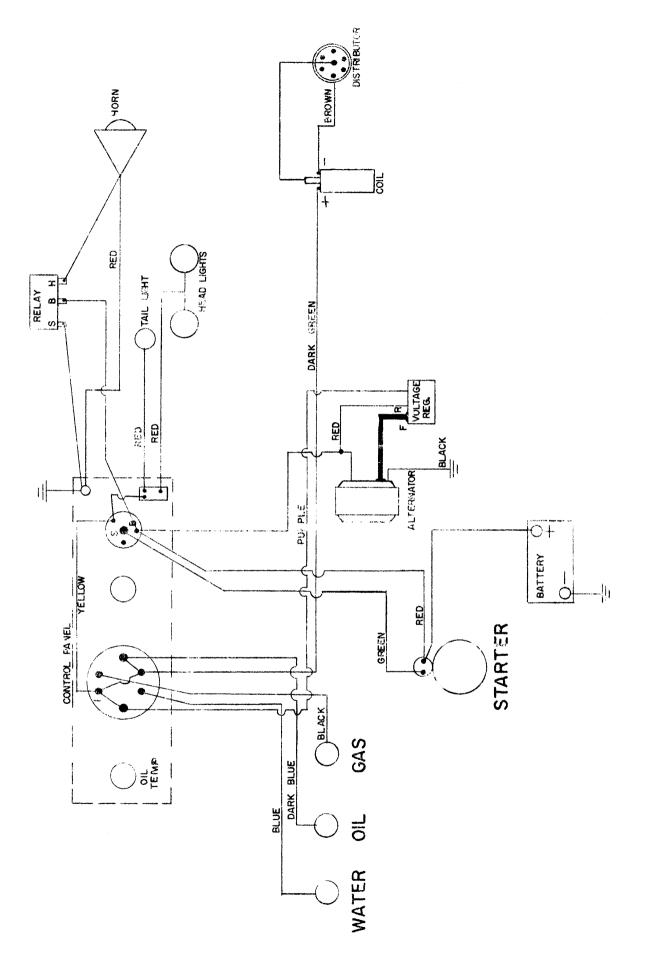


WIRING DIAGRAM NO. 11809 (FOR 7CI & 7C2 MODELS)

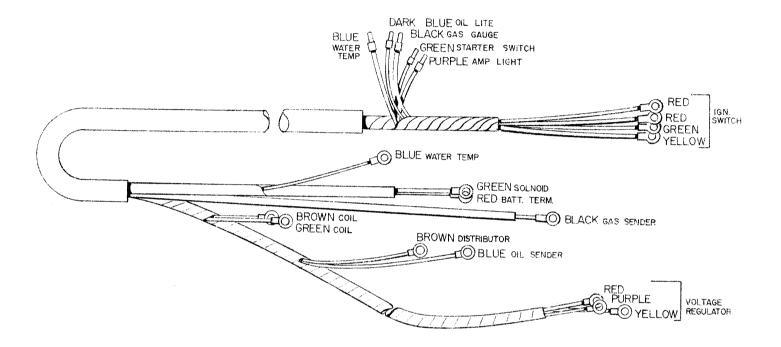

WIRING HARNESS 70 I AND 702 MODELS

ASS'Y NO. 11562

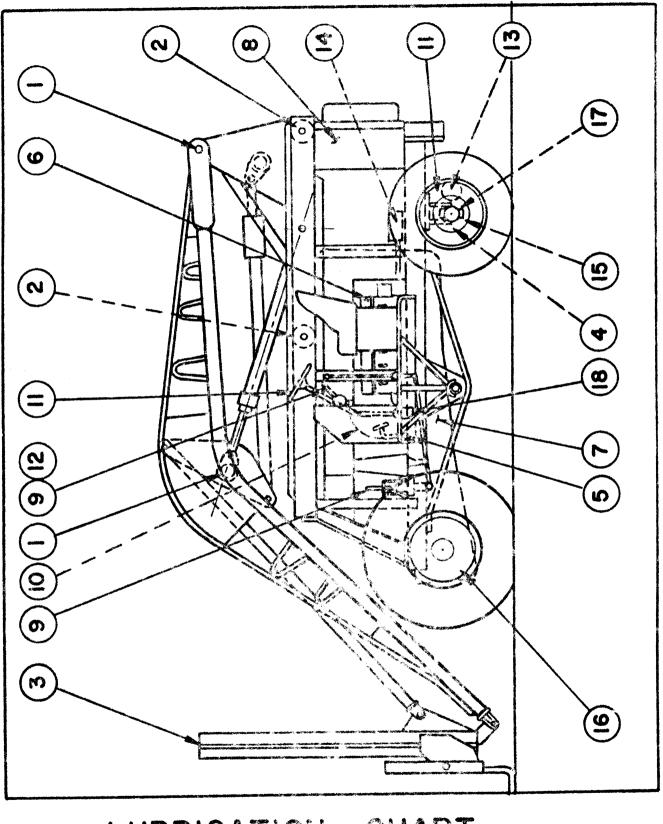

LUBRICATION CHART MODEL "702"

LUBRICATION CHART


MODEL 7C2

1 TEM PART LUBRICANT SERVICE CHANGE 1 Lift Arm, Tilt Linkage Toggle And Cylinder Pivots Super Permalube Grease Daily - - -2 Transverse Frame Rollers Super Permalube Grease Daily -3 Tower Super Permalube Grease Daily ------4 King Pins, Steering Toggles And Pivots Super Permalube Grease Dailv -----5 Brake Pivot Shaft Super Permalube Grease Daily -----Below 32° F. Above 32° F. AMOCO 200 SAE 10W 6 Engine: Dailv 100 Hrs. AMOCO 200 SAE 30 100 Hrs. Daily **Oil Filter Element** 300 Hrs. Air Cleaner: Oil Bath AMOCO 200 SAE 20 Daily As Req. Radiator Perma-Guard Anti-Freeze Daily Yearly Battery Distilled Water Daily -----7 Torque Converter (SEE NOTE) AMOCO Dexron ATF Dailv. 300 Hrs. Torque Converter Filter Element 300 Hrs. 8 Hydraulic Tank Rykon Oil No. 21 Dailv Yearly 9 Shuttle Gear Linkage Super Permalube Grease Weekly -----Shuttle Gear Linkage AMOCO 200 SAE 20 Weekly ------Shift Lever Linkage Super Permalube Grease AMOCO 200 SAE 20 Weekly ----Shift Lever Linkage Weekly - -10 Emergency Brake AMOCO 200 SAE 20 Weekly 11 Rear Steering Super Permalube Grease Weekly 12 Forward & Reverse Controls Super Permalube Grease Weekly 13 Steering Cylinders & Boosters Super Permalube Grease Weeklv 14 Pump Drive Shaft Super Permalube Grease Weekly - - -15 Tie Rod Ends Super Permalube Grease Weekly _ _ _ 16 Transmission & Final Drive Below 32° F. American MP Gear SAE 80 Monthly Yearly Above 32° F. American MP Gear SAE 90 Monthly Yearly 17 Wheel Bearing Repack yearly or every 1000 hrs.with Super Permalube Grease or Equal. Inspect & Adjust 500 Hrs. or 6 Months. 18 Steering Gear American MP Gear SAE 90 Monthly Yearly TIRE PRESSURES - RIGHT FRONT 42# - LEFT FRONT 45# - REAR 50# NOTE: USE AMERICAN OIL COMPANY LUBRICANTS SHOWN OR EQUAL.

CHANGE TORQUE CONVERTER OIL AFTER FIRST 20 HOURS OPERATION ON NEW MACHINES. AFTER THAT CHANGE EVERY 300 HOURS OPERATION. CHANGE CONVERTER OIL FILTER AT SAME INTERVAL.

DRAIN ENGINE BREAK IN OIL AT 20 HOURS. CHANGE OIL FILTER THEN REFILL WITH OIL

E 0 NO. 1026

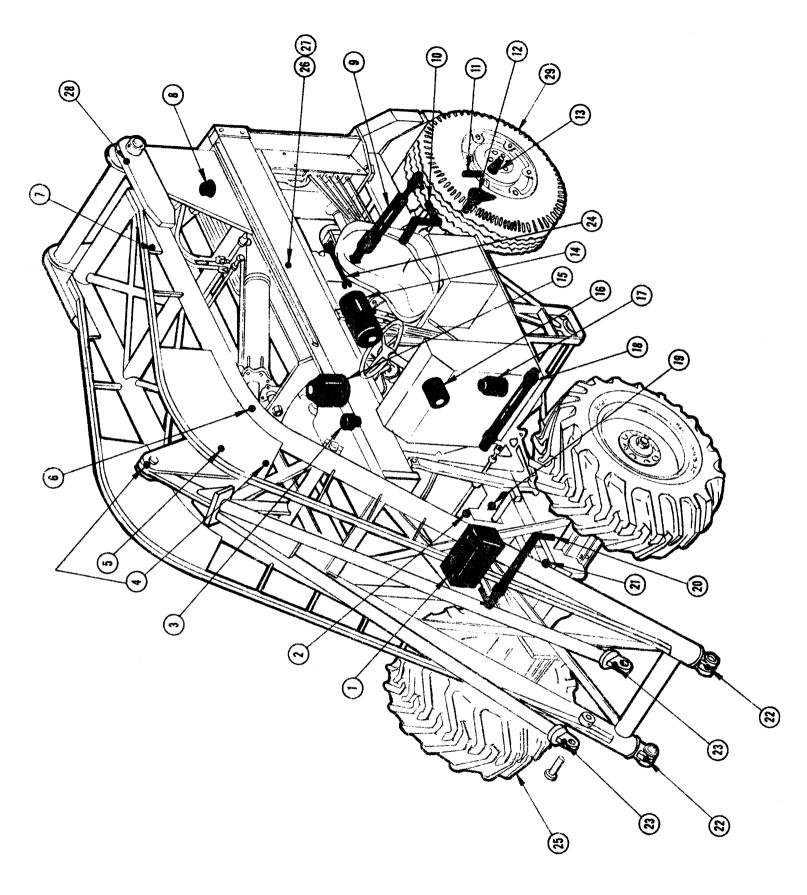


LUBRICATION CHART GUIDE


LUBRICATION CHART


ITEM NO.	PART NAME		NO. OF ZERKS OR TYPE OF LUBRICATION
1 2 3	Battery	Weekly	L Aboro 220F /SAF 20 or
45678	Engine Crank Case	Daily	4 1
9 10 11 12 13	Power Steering Booster Steering Toggles & Pivots King Pins	Weekly Daily	3 6 4 3
14 15	Generator	Weekly	SAE #20 011 (2 Cups)
16	Engine Oil Filter # 104397-A.	300 Hrs	Change Filter, Add 1 Qt. Grank Case Oil.
17 18 19	Steering Gear	Monthly Daily Daily	Fill with SAE 90 11 1 Type "A" Transmission
20 21	Brake Shafts	NOGSTRA	11 SAE 80 or 90 Transmission Oil.
22 23 24 25 26 27	Lift Arm Pin - Front Parallel-O-Gram Arm Pin Pump Drive Shaft Right Drive Tire (Outside) Left Drive Tire (Inside) Left Drive Tire (Inside) Transverse Frame Rollers Transverse Frame	Daily Daily Weekly Weekly Weekly Weekly Weekly Daily	2 2 3 (Hand Gun Only) 16 P.S.I. 33 P.S.I. 16 P.S.I. 35 P.S.I. 4


NOTE: CHANGE TORQUE CONVERTER OIL AFTER FIRST 20 HOURS OPERATION ON NEW MACHINES. AFTER THAT CHANGE EVERY 300 HOURS OPERATION. CHANGE CONVERTER OIL FILTER AT SAME INTERVAL. FILTER # 105234-A.

DRAIN ENGINE BREAK IN OIL AT 20 HRS. CHANGE OIL FILTER THEN REFILL WITH OIL ACCORDING TO ITEM # 3 ABOVE.

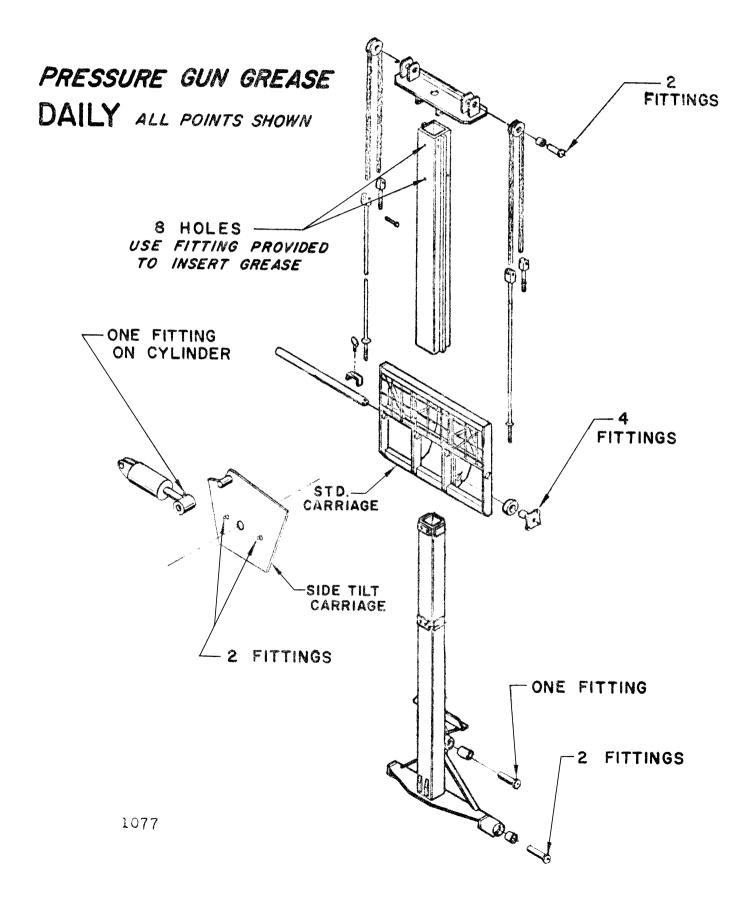

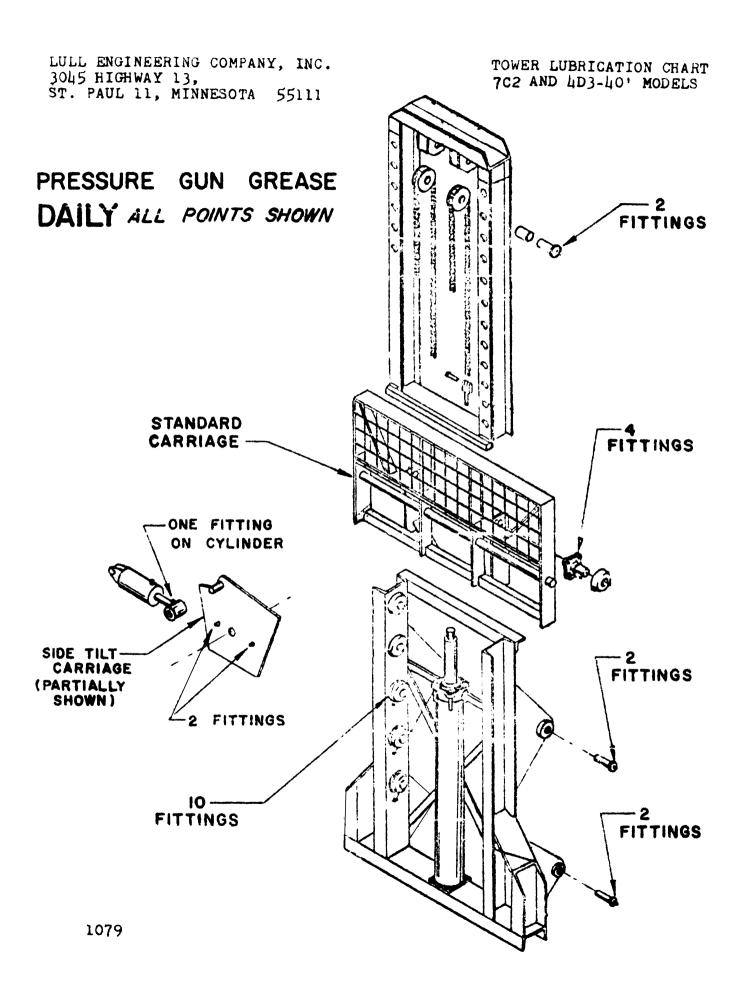

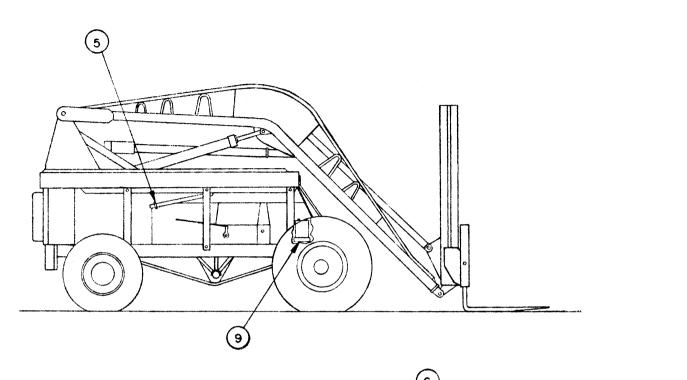


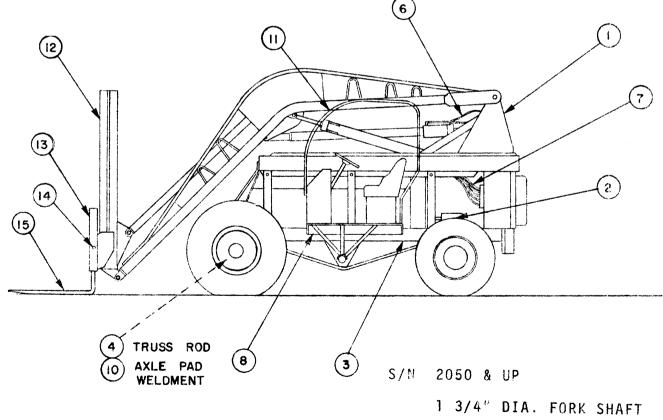

GENERAL ASSEMBLY NO. 11,233-

GENERAL ASSEMBLY 7C2-31' HIGH-LIFT NO. 11,233


ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1		11,229	Loader Assembly (Page 32)	1
2		11,205	Pump & Drive Ass'y (Page 42)	1
3	11,000		Main Frame	1
4	11,300		Truss Rod	1
5	7528		Exhaust Pipe Bracket	1
6	11,313		Hydraulic System (Page 60)	1
7	11,302		Hydraulic System (Pump to Valves) P-38	1
8		11,239	Operator's Platform Ass'y (Page 18)	1
9	11,043		Battery Support	1
10	11,227		Axle Pad Weldment	1
11	11,235		Overhead Guard	1
12		1265	Tower Assembly (Page 66)	1
13	6891		Carriage	1
14	11,369		Shaft	1
15	11,290		Forks	2
16	7840		Headlight Bracket (Optional)	1

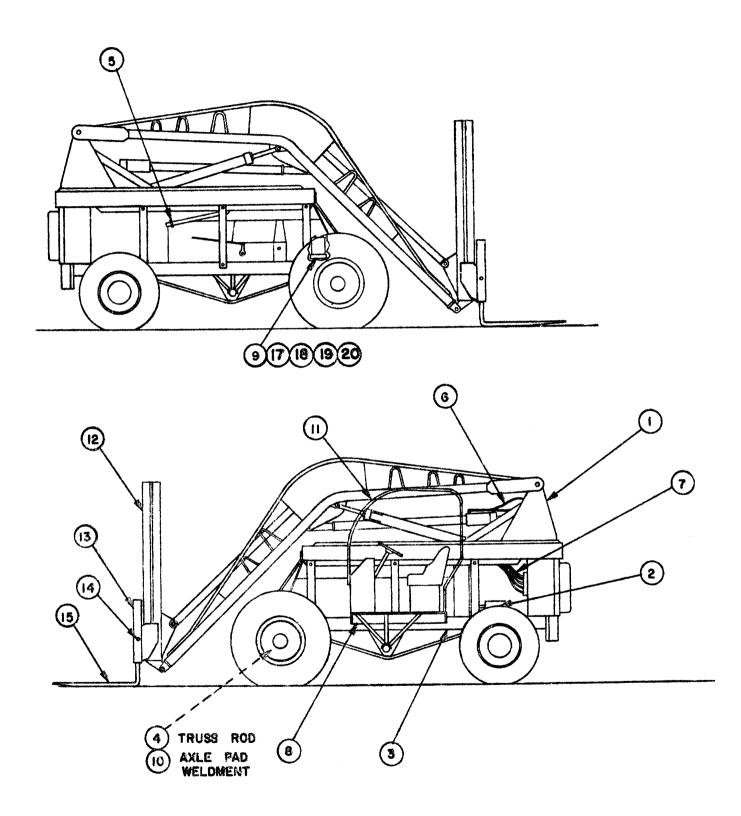

GENERAL ASSEMBLY 7C2-31' HIGH-LIFT NO. 13,483

ITEM	PART	ASSEMBLY	DESCRIPTION	NO.
NO.	NO.	NO.		REQ.
1 2 3 4 5 6	11,000 11,300 7528	11,229 11,205 11,313	Loader Assembly (Page 32) Pump & Drive Ass'y (Page 42) Main Frame Truss Rod Exhaust Pipe Bracket Hydraulic System (Page 60)	
7 8 9	11,043	11,302 13,481	Hydraulic System (Pump to Valve) Pag Operator's Platform Ass'y (Page 18 Battery Support	e 38) 1) 1]
10 11 12	11,227 11,235	1265	Axle Pad Weldment Overhead Guard Tower Assembly (Page 66)	1 1 1
13	6891		Carriage	1
14	11,369		Shaft	1
15	11,290		Forks	2
16	7840		Headlight Bracket (Optional)	1
*17	11,757		Battery Support Ass'y	1
*18	P-13057		Battery	1
*19	P-13040		Cable	1
*20	P-12500		Cable	1


*DIESEL MODELS ONLY

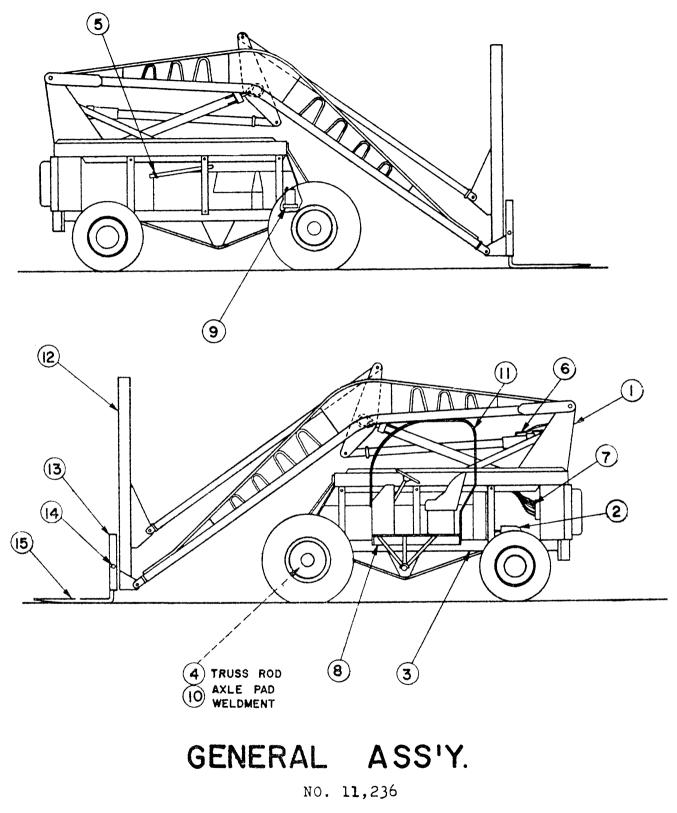

S/N 2050 AND UP

GENERAL ASSEMBLY NO. 11,236


ITEM	PART	DESCRIPTION	RE'Q.
123456 78901121314516	11,237 11,205 11,072 11,300 7528 11,312 11,303 11,240 11,043 11,227 11,235 11,293 11,296 11,378 11,290 7840	Loader Ass'y (Page 32) Pump & Drive Ass'y (Page 42) Main Frame Truss Rod Exhaust Pipe Bracket Hydraulic System (Junction Block to Lift Arm) Hydraulic System (Pump to Valves) Operator's Platform Ass'y (Page 18) Battery Support Axle Pad Weldmant Overhead Guard Ass'y (Page 110) Tower Assembly (Page 66) Carriage Shaft Forks Headlight Bracket (Optional)	11111 1121121

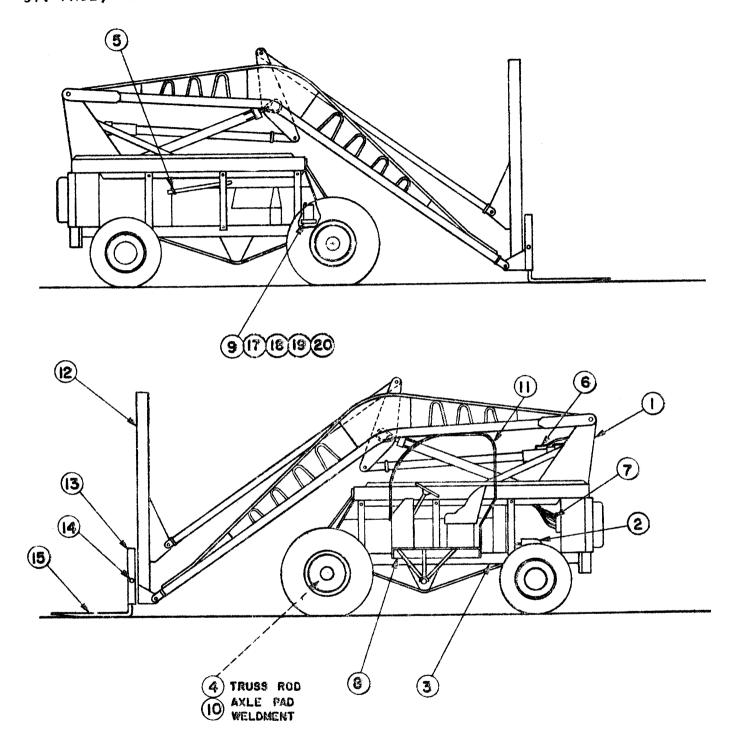

7C2-40'

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1		11,237	Loader Assembly (Page 32)	1
2		11,205	Pump and Drive Ass'y (Page 42)	1
3	11,072		Main Frame	J
4 5	11,300		Truss Rod]
	7528		Exhaust Pipe Bracket	1
6		11,312	Hydraulic System (Page 60)]
/		11,303	Hydraulic System (Pump to Valve) P-38	
8 9	11 040	13,482	Operators Platform Ass'y (Page 18)	1
	11,043		Battery Support	1
10	11,227	11 005	Axle Pad Weldment	2
11		11,235	Overhead Guard Ass'y (Page 110)	1
12	33 967	11,293	Tower Assembly (Page 66)	1
13	11,367		Carriage	1
14	11,363		Shaft	1
15	13,279		Forks	2
16	7840		Headlight Bracket (Optional)	1
*17 *10	11,757		Battery Support Ass'y	l
*18	P-13057		Battery	
*19	P-13040		Cable	ł
*20	P-12500		Cable	1


*DIESEL MODELS ONLY

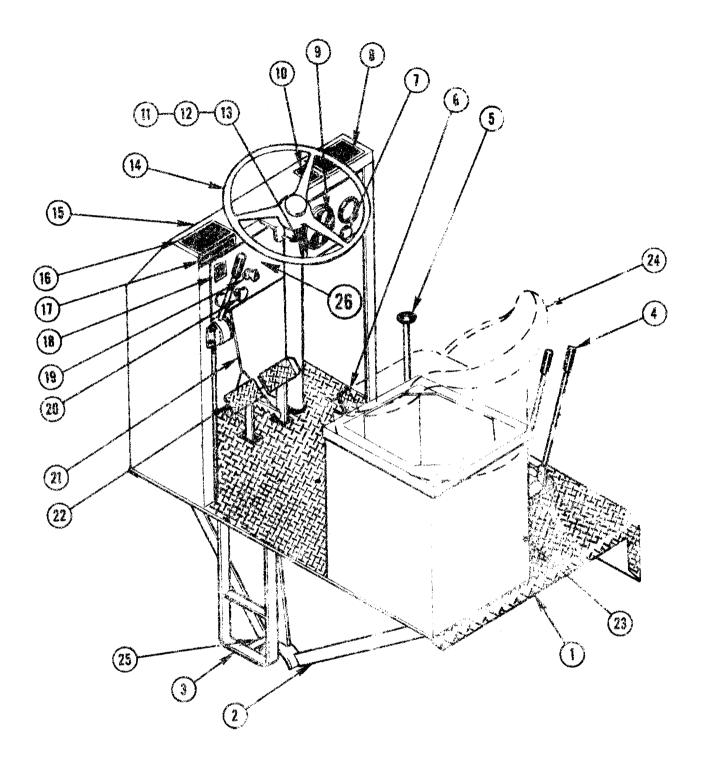

OPERATOR'S PLATFORM ASSEMBLY NO. 11,239

OPERATORS PLATFORM ASS'Y 7C2-31' HIGH-LIFT LOADER NO. 11,239


ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1 2 3 4 5 6 7 10 11 12 13 14	NO. 11,080 11,126 8813 P-10035 7371 P-10036 11.208 7683 7682 P-10074 11,244 11,244 450	NO. 11,262 11,250 11,260 11,260	DESCRIPTION Operator's Platform Platform Support Step Weldment Valve Control Ass'y (Page 50) Shifting Ass'y (Page 34) Accelerator Ass'y (Page 30) Choke Control Hand Lever Control Tag Cluster Gauge Shifting Tag Strap Cover Hour Meter (Optional) Steering Ass'y (Page 22) Instrument Panel Serial Number Tag	
17 18 20 21 22 23 24 25 26	7521 7524 P-10037 P-10007 6952 P-11618 11,193 8638	7597 11,253	Caution Tag Torque Converter Tag Ignition Switch Brake Lock Cable Brake Lock Ass'y (Page 64) Brake & Torque Conv. Ass'y (Page Tool Box & Seat Stand Seat Support Strap Dashboard	1 1 1 26)1 1 1 1

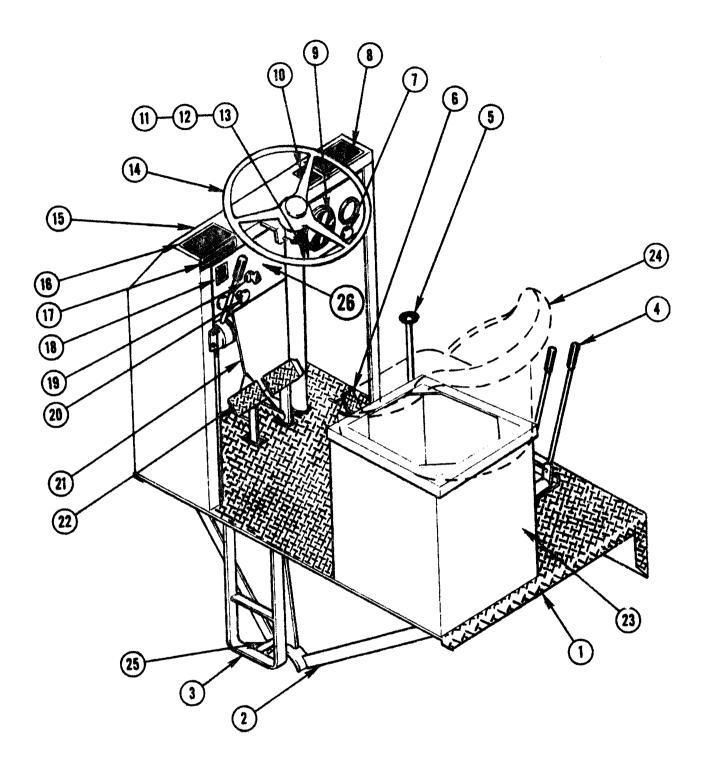

OPERATOR'S PLATFORM ASSEMBLY NO. 11,239



REF.	PART NO.	DESCRIPTION	REQ.
123456789011234567890122222222	11,080 11,126 8813 11,262 11,250 *12,546 P-10035 7371 P-10036 11,208 7683 7682 P-10074 12,327 11,244 450 7521 7524 P-10037 P-10007 7597 11,253 6952 P-11618 11,193 8638	OPERATORS PLATFORM ASSEMBLY NO. 11,239 Operators Platform Platform Support Step Weldment Valve Control Ass'y (Page 50) Shifting Ass'y (Page 30) Choke Control Hand Lever Control Tag Cluster Gauge Shifting Tag Strap Cover Hour Meter (Ontional) Steering Ass'y (Page 22) Instrument Panel Serial Number Tag Caution Tag Torque Converter Tag Ignition Switch Brake Lock Cable Brake Lock Cable Brake Lock Ass'y (Page 64) Brake & Torque Conv. Ass'y (Page 26) Tool Box & Seat Stand Seat Support Strap Dashboard *Start With S/N 2379.	

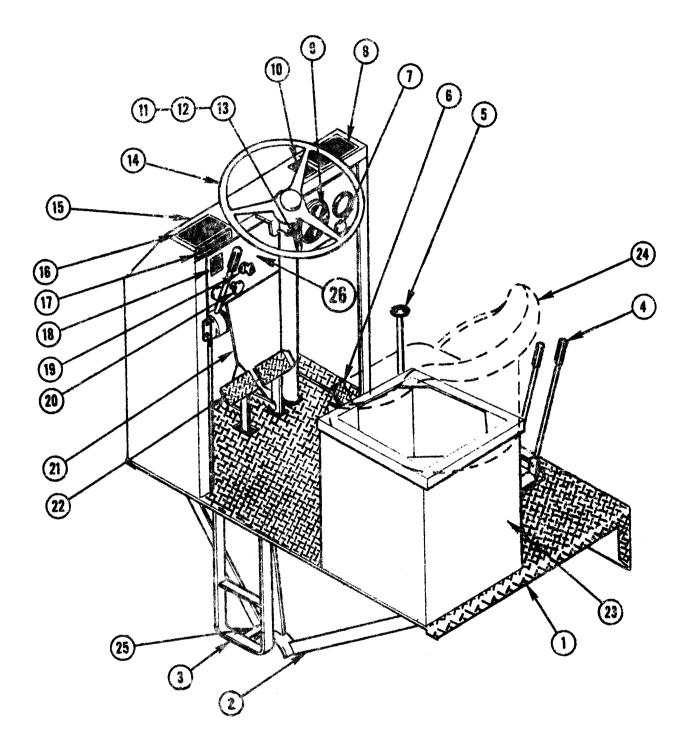


OPERATOR'S PLATFORM ASSEMBLY

NO. 11,239

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1 2 3 *4 5 *6 7	11,080 11,126 8813 P-10035	13,187 11,250 12,546	Operators Platform Platform Support Step Weldment Valve Control Ass'y (Page 50) Shifting Ass'y (Page 34) Accelerator Ass'y (Page 30) Choke Control	7 7 7 7 7 7
7 8 9 10 11 12 13	7371 P-10036 11,208 7683 7682 P-10074		Hand Lever Control Tag Cluster Gauge Shifting Tag Strap Cover Hour Meter (Optional)	
*14 15 16 17 18 19 20	11,244 450 7521 7524 P-10037 P-10007	12,928	Steering Ass'y (Page 22) Instrument Panel Serial Number Tag Caution Tag Torque Converter Tag Ignition Switch Brake Lock Cable	
21 22 23 24 25 26	6952 P-11618 11,193 8638	7597 11,253	Brake Lock Ass'y (Page 64) Brake & Torq. Conv. Ass'y (Page 26 Tool Box & Seat Stand Seat Support Strap Dashboard	1 ;)1 1 1 1 1

*4 Use No. 11,262 Before Serial Number 2456
*6 Use No. 11,260 Thru Serial Number 2378.
*14 Was No. 12,327 Up to Serial Number 2450.

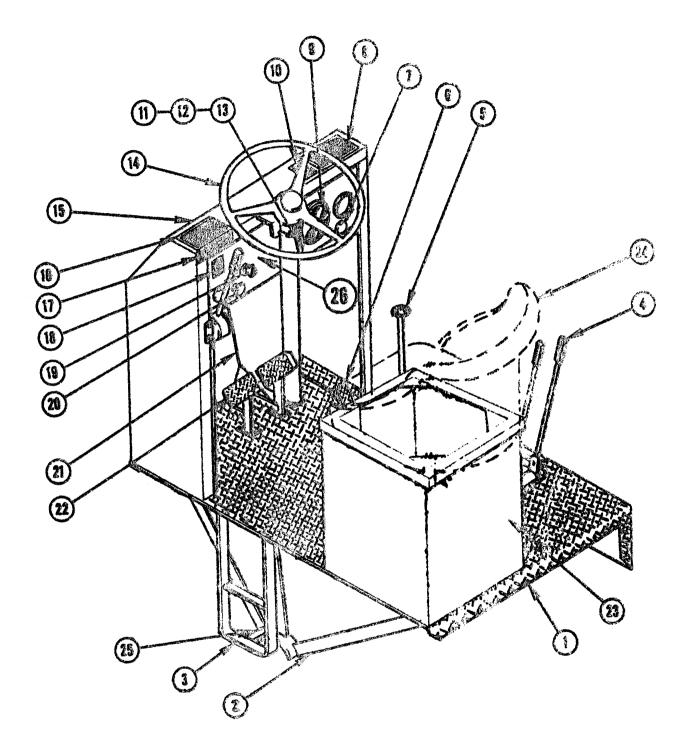


702-31'

LULL ENGINEERING COMPANY INC.OPERATOR'S PLATFORM ASS'Y3045 HIGHWAY 13,NO. 13.481 ST. PAUL, MINNESOTA CENET

ITLM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1 2	11,080 11,126		Operators Platform Platform Support	ן ר
3	8813		Step Weldment	7
4		13,479	Valve Control Ass'y (Page 50)	ļ
2 3 4 5 6 7 8 9 10		11,250	Shifting Ass'y (Page 34) Accelerator Ass'y (Page 30)	 1
с 7	P-10035	12,540	Choke Control	i
8	7371		Hand Lever Control Tag	i
<u>o</u>	P-10036		Cluster Gauge	1
	11,208		Shifting Tag]
11	7683		Strap	-
12 13	7682		Cover Hour Meter	I T
13	P-12631	*14,006	Steering Ass'y (Page 22)	ĩ
15	11,244	141000	Instrument Panel	i
16	450		Serial Number Tag	1
17	7521		Caution Tag	j
18	7524		Torque Converter Tag	1
19 20	P-10037 P-10007		Ignition Switch Brake Lock Cable	1
21	P=10007	7597	Brake Lock Ass'y (Page 64)	1
22		11,253	Brake & Torq. Conv. Ass'y (Page 2	(6) 1
23	6952	-	Tool Box and Seat Stand	1
24	P-11618		Seat	1
25	11,193		Support Strap	1
26	8638		Dashboard	ţ


*NOTE: Use #13,485 Steering Assembly through S/N 2535.

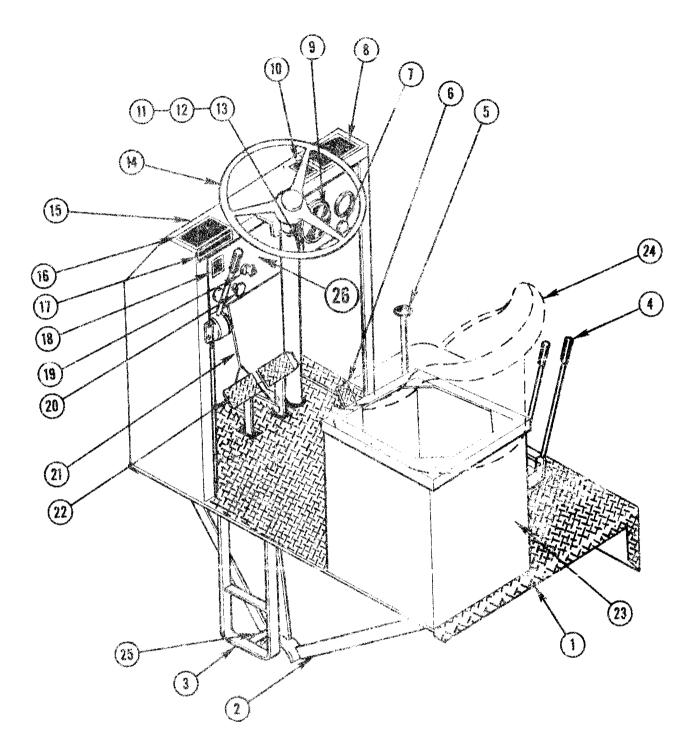

OPERATORS PLATFORM ASSEMBLY

NO. 11,240

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
123456789	11,080 11,126 881 <u>3</u>	11,263 11,251	Operators Platform Platform Support Step Weldment Valve Control Ass'y (Page 50) Shifting Ass'y (Page 34)	1 1 1 1
10 11 12	P-10035 7371 P-10036 11,208 7683 7682	11,260	Accelerator Ass'y (Page 30) Choke Control Hand Lever Control Tag Cluster Gauge Shifting Tag Strap Cover	1 1 1 1 1
13 14 15 16 17 18 19 20	P-10074 11,244 450 7521 7524 P-10037 P-10007	11,243	Hour Meter Steering Ass'y (Page 22) Instrument Panel Serial Number Tag Caution Tag Torque Converter Tag Ignition Switch Brake Lock Cable	
21 22 23 24 25 26	6952 P-11618 11,193 8638	7597 11,253	Brake Lock Cable Brake Lock Ass'y (Page 64) Brake & Torque Conv. Ass'y (Page 26) Tool Box & Seat Stand Seat Support Strap Dashboard	1 1 1 1 1

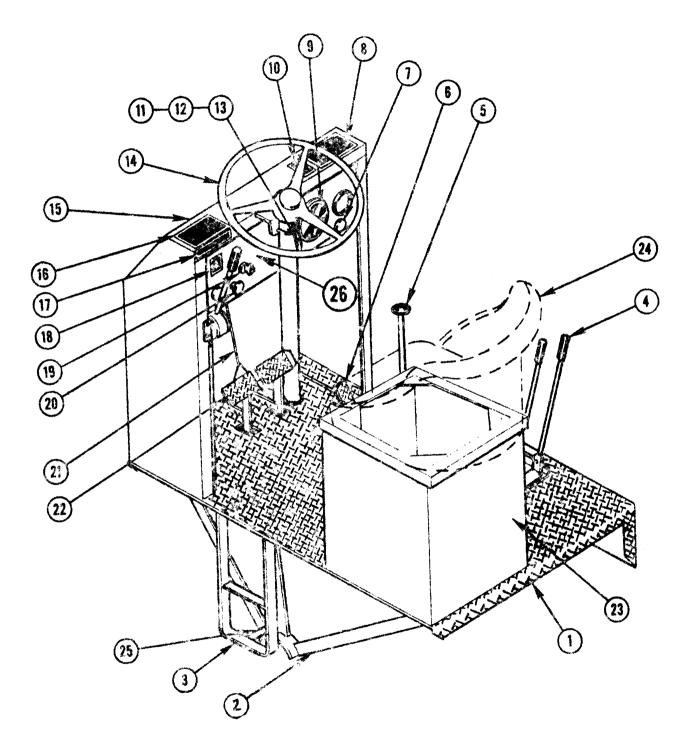


7C2-40'

1534

LULL ENGINEERING COMPANY, INC. 3045 Highway 13, st. paul, minnesota 55121

17EM NO	PART NO.	ASSEMBLY NO.	DESCRIPTIO	NO. REQ.
1	11,080		Operator's Platform]
2 3 4 5 6 7 8 9 10	11,126 8813		Platform Support	I
<u>а</u>	0010	13,480	Step Weldment Valve Control Ass'y (Page 50)	1
5		11,251	Shifting Ass'y (Page 34)	1
6		12,546	Accelerator Ass'y (Page 30)	, i
7	P-10035		Choke Control	i
8	7371		Hand Lever Control Tag	i
9	P-10036		Cluster Gauge	1
	11,208		Shifting Tag	1
11	7683		Strap	1
12	7682		Cover	1
13	P-12631		Hour Meter]
14 15	17 084	*14,007	Steering Ass'y (Page 22)	1
16	1 1,2 4 4 450		Instrument Panel	1
17	7521		Serial Number Tag Caution Tag	1
18	7524		Torque Converter Tag	1
19	P-10037		Ignition Switch	'n
20	P-10007		Brake Lock Cable	1
21		7597	Brake Lock Ass'y (Page 64)	1
22		11,253	Brake & Torq. Conv. Ass'y (Page 26) 1
23	6952	-	Tool Box & Seat Stand	1
24	P-11618		Seat	1
25	11,193		Support Strap	7
26	8638		Dashboard	1


*NOTE: Use #13,485 Steering Assembly through S/N 2535.

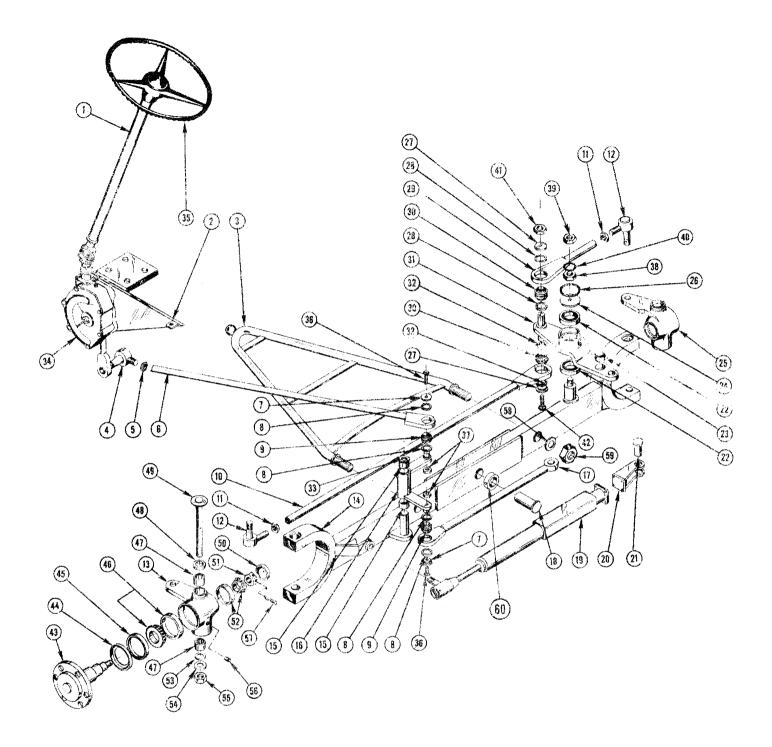

STEERING ASSEMBLY 11242

STHERI	ING ASSEMT	5LY	NO. 11,242	702-31'
ITEM	PART	ASSEMBLY		NO.
NO.	NO.	NO.	DESCRIPTION	REQ.
Ţ	יי יר ר	P-11653	Steering Column Ass'y (Page 24)	1
2	1171		Steering Gear Bracket	1
	11,136 P-10343		Wish Bone Tie Rod End	L 7
4	7602		Special Nut	1
6	11,154		Drag Link	ı 1
123456789	8802		Retainer	2
8	P-11495		Felt Washer	4
9	P-11496		Swîvel Bushing	Ż
10	8275		Tie Rod	1
11 12	7615 P-10345		Special Nut	2
13	8230		Tie Rod End Axle Spindle (LH)	2
14 14	11,135		Axle Spindle (III)	1
15	5209		Bushing	2
16	8801		Bell Crank	ī
17	8759		Booster Actuating Rod	1
18	11,157		Axle Pivot Pin	1
19	7 001	P-11126	Booster Assembly (Page 46)	1
20 21	7931 7927		Booster Clevis Clevis Pin	L J
22	P-11306		Bearing	2
23	7965		Bushing	ĩ
24	7930		Bearing Retainer	ī
25 26	8229		Axle Spindle (R.H.)	1
26	P-10314		"O" Ring	1
27	8300		Retainer	1
28 29	P-11428 8273		Felt Washer Tie Rod	2
30	P-11430		Swivel Bushing	111242122112111121211121212121
	11,165		Toggle	ī
32	P-11429		Felt Washer	2
33	8301		Retainer	1
34		P-11652	Steering Gear Box Ass'y (Page 25)	1
35	P-10339		Steering Wheel	
סנ 37	COM'L COM'L		5/16 NC x 2" F.H. Screw 5/16 NC Cast Nut	2
38	COM'L		Nut, 3/4-16 N.F. Full	ĩ
39	COM'L		Nut. 3/4-16 NF. Jam	ī
40	COM'L		Washer, 3/4" Shakeproof	1
41	COM'L		Nut Cast 1/2-20 N.F.	1
42	COM'L		Bolt, 1/2-20 N.F. x 20"	1
43	IK-713-G	r	Spindle	2
44	IK-738-A IK-737-A		Cup Seal	2
16 16	IKS-5014	-	Bearing	2
47	105434-A	L	Bearing	4
48	IKS-5039)	Bearing	Ź
49	105-431-	·A	Pivot, Spindle Carrier	2
50	105-438-	A	Cap	2
りL ビッ	IK-731-A IKS-5013		Nut Be ari ng	20
52	105437-A	J	Seal	2
54	IK-727-A	•	Washer, Thrust	2
55	105436-A	-	Nut	2
56	943-420		Plug	1
57	932-047		Cotter Pin	2
33333344444444445555555556901234567890	920097		Lockwasher 1 1/4"	122111122224222222222212221
27 60	915-0 11 8746		Nut, l l/4-l2 Hex Collar	1 11
00	0140			له مان مان

124A

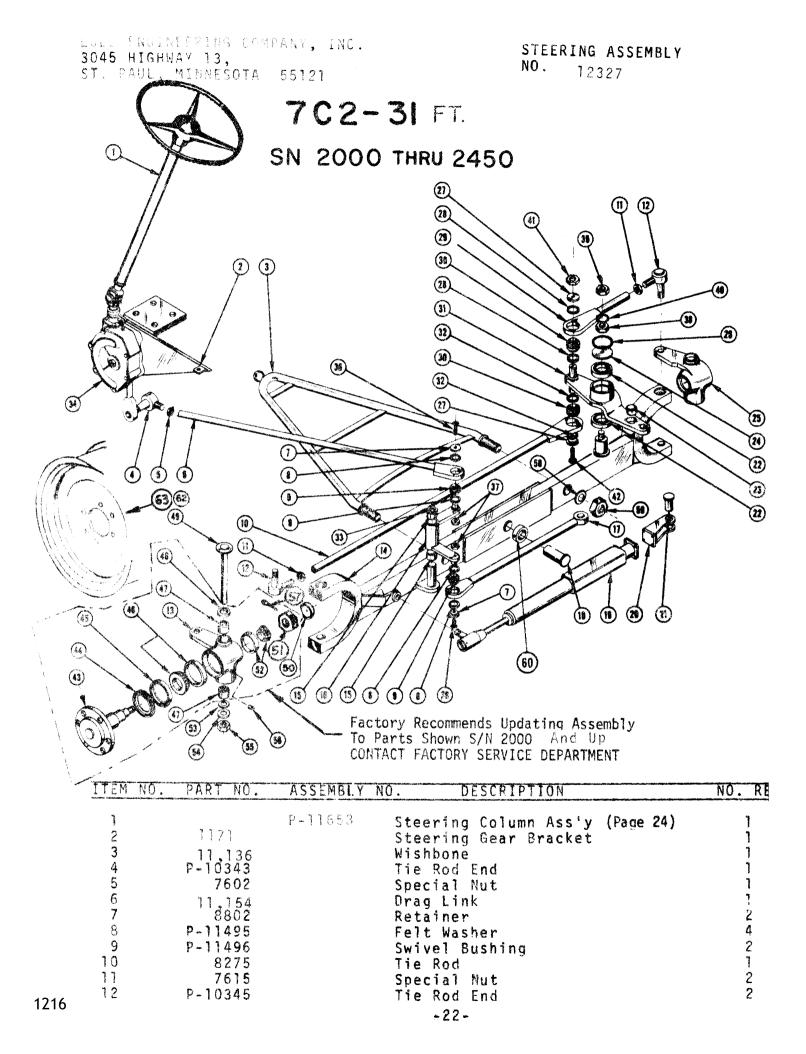


STEERING ASSEMBLY NO. 12327

		STEERING A.	1232/	
ITEM	PART	ASSEMBLY		NO.
<u> NO.</u>	<u>NO.</u>	NO.	DESCRIPTION	REO.
	Harftington Managerers & He	an in all particular and index an angle of the state of the		MEQ.
13	P-16012		Axle Spindle, Left Hand	'n
]
14	11,135		Axle	1
15	5209		Bushing	2
16	8801		Bell Crank	2 1
17	8759		Booster Actuating Rod	1
18	11,157		Axle Pivot Pin	j
19		P-11126	Booster Assembly (Page 46)	
	7003	F-11120]
20	7931		Booster Clevis	1
21	7927		Clevis Pin	1
22	P-11306		Bearing	2
23	7965		Bushing] 2]
24	7930		Bearing Retainer	1
25	P-16013		Axle Spindle, Right Hand	i
26	P-10314		0-Ring	ו ז
27				1
	8300		Retainer	2
28	P-11428		Felt Washer	2
29	8273		Tie Rod	1
30	P-11430		Swivel Bushing	2
31	11,165		Toggle	1
32	P-11429		Felt Washer	2
33	8301		Retainer	1 2 2 1 2 1 2 1
34	*P-11652			1 7
	TT-11002		Steering Gear (Page 25)	1
35	00000			_
36	COM'L		Screw, 5/16-18 N.C. x 2"	2 2 1
37	COM'L		Nut, Cast. 5/16 N.C.	2
38	COM'L		Nut, 3/4-16 N.F. Full	1
39	COM'L		Nut, 3/4-16 N.F. Jam	Ì
40	COM'L		Washer, Shakeproof 3/4"	i
41	COM'L		Nut, Cast. 1/2-20 N.F.	1
42	COM 'L			
43			Bolt, 1/2-20 N.F. x 4"	1
	P-17456		Spindle	2 2 2
44	P-14000		Seal	2
45	P-13999		SLEEVE	2
46	P-14001		Bearing	2
47	P-13984		Bearing	4
43	P-13985		Bearing	2
49	P-14742		Pivot Spindle Carrier	2
50	P-15963		Cap	2
51				2
	P-13988		Nut	2
52	P-14007		Bearing	2
53	P-13990		Seal	2
54	P-13991		Washer, Thrust	2
55	P-13992		Nut	2
56	P-13993		Plug	1
57	P-13994		Cotter Pin	2
58	P-14350			د. م
			Lockwasher	2
59	P-14662		Nut, Hex	2
60	8746		Collar	1
62	P-13494		TIRE	2 4 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
63	12,339 - (P-16011)	Wheel Weldment	2
	- \			

*NOTE: Item #34 P-11662 Steering Gear is no longer available as a complete new assembly If complete new assembled gear box is necessary order Bracket # 12981, P-13702 Column Assembly and P-13701 Gear Box. Pitman Arm not Included - Old one can be reused.

1216

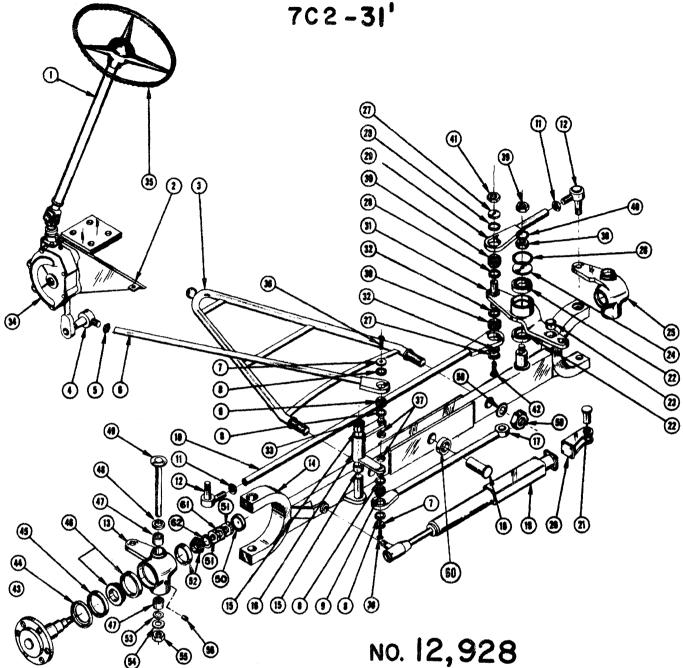

NO. 12,928 STEERING ASSEMBLY

S/N 2451 AND UP

ITEM NO.	PART NO.	ASSEMBLY	NO. DESCRIPTION		NO.	REQ.
1 2 3 4 5 6 7 8	12,891 11,136 P-10343 7602 11,154 8802 P-11495	P-13702	Steering Column Ass'y (Steering Gear Bracket Wishbone Tie Rod End Special Nut Drag Link Retainer Felt Washer	(Page 24)		1 1 1 1 2 4

NO. 12,928

S/N 2451 AND UP

7C2 Series

			S/N 2451 AND UP	
ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
11211 1101				≈,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
9	P-11496		Swivel Bushing	2
10	8275		Tie Rod	1 2 2
11	7615		Special Nut	2
12	P-10345		Tie Rod End	2
13	303025403		Axle Spindle (L.H.)	1
14	11,135		Axle]
15	5209		Bushing	2
16	8801		Bell Crank	1
17	8759		Booster Actuating Rod	1
18	11,157		Axle Pivot Pin	1
19	,	P-11126	Booster Assembly (Page 46)	1
20	7931	, , , , , , , , , , , , , , , , , , , ,	Booster Clevis	1
21	7927		Blevis Pin	1
22	P-11306		Bearing	2
23	7965		Bushing	1
24	7930		Bearing Retainer	1
25	303025411		Axle Spindle (R.H.)	1
26	P-10314		0-Ring	1
27	8300		Retainer	
28	P-11428		Felt Washer	2 2 1
29	8273		Tie Rod	1
30	P-11430		Swivel Bushing	
31	11,165		Toggle	2 1
32	P-11429		Felt Washer	2
33	8301		Retainer	2 1
34	P-13701		Steering Gear	1
35	P-10339		Steering Wheel	i
36	COM'L		Screw, 5/16 NC x 2" F.H.	
37	COM'L		Nut, Cast 5/16 N.C.	2 2 1
38	COM'L		Nut, 3/4-16 NF Full	ī
39	COM'L		Nut, 3/4-16 NF Jam	1
40	COM'L		Washer, Shakeprrof 3/4"	1
41	COM'L		Nut, Cast $1/2-20$ NF	1
42	COM'L		Bolt, 1/2-20 NF x 20"	
43	303025438		Spindle	1 2
44	165756-A		Cup	2
45	165-757		Seal	
46	165-804-A		Bearing	2
47	105434-A		Bearing	2 2 4 2 2 2
48	IKS-5039		Bearing	2
49	105-431-A		Pivot, Spindle Carrier	2
50	165-762-A		Cap	$\overline{2}$
51	30-3026884		Nut	
52	165-805		Bearing	4 2 2 2 2
53	105437-A		Seal	2
54	IK-727-A		Washer, Thrust	2
55	105436-A		Nut	2
56	943-420		Plug	1
57			· · • • •	,
58	920-097		Lockwasher	2
59	915-011		Nut, Hex	2
60	8746		Collar	2 2 1
61	303026892		Lockwasher Steering Knuck1	
62	303026906		Washer Steering Knuckle	2
~~	000020000		HUSHEL SCEELING KHUCKLE	L


-23-

LULL ENGINEERIN 3045 HIGHWAY 13 St. Pall, Minne	NG COMPANY, INC. 3, Esota 85127	SIEERING ASSEMBL: NO. 13,486	
ITEM NO. PART	NO. ASSEMBLY	NO. DESCRIPTION	NO. REQ.
1 2 3 11. 4 P-10 5 7 6 11, 7 8 P-11 9 P-11 10 8	P-13702 891 136 343 602 154 862 495 496 275 615	Steering Column Ass'y (Page 24) Steering Gear Bracket Wishbone Tie Rod End Special Nut Drag Link Retainer Felt Washer Swivel Bushing Tie Rod Special Nut Tie Rod End	1 1 1 1 2 4 2 1 2 2

-22-


STEERING ASSEMBLY NO. 13,486

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
26 27 28 30 31 32 34 36 37 39 41 42 43 44	$\begin{array}{c} P-16012\\ 11,135\\ 5209\\ 8801\\ 8759\\ 11,157\\ 7931\\ 7927\\ P-11306\\ 7965\\ 7930\\ P-16013\\ P-10314\\ 8300\\ P-18300\\ P-1428\\ 8273\\ P-11429\\ 8301\\ P-10339\\ P-11429\\ 8301\\ P-11429\\ 8301\\ P-11429\\ 8301\\ P-13701\\ P-10339\\ COM'L\\ P-16974\\ P-13999\\ P-139999\\ P-139999\\ P-139990\\ P-13993\\ P-14000\\ P-139991\\ P-139991\\ P-139991\\ P-139992\\ P-139992\\ P-13993\\ P-14012\\ 12,339\end{array}$	P-11:26	Axle Spindle, Left Hand Axle Bushing Bell Crank Booster Actuating Rod Axle Pivot Pin Booster Assembly (Page 46) Booster Clevis Clevis Pin Bearing Bushing Bearing Retainer Axle Spindle, Right Hand O-Ring Retainer Felt Washer Tie Rod Swivel Bushing Toggle Felt Washer Retainer Steering Gear Steering Gear Steering Wheel Screw, 5/16-18 N.C. x 2" Nut, Cast 5/16 N.C. Nut, 3/4-16 N.F. Full Nut, 3/4-16 N.F. Jam Washer, Shakeproof 3/4" Nut, Cast 1/2-20 N.F. Bolt, 1/2-20 N.F. x 20" Spindle Cup Seal Bearing Bearing Bearing Bearing Bearing Bearing Bearing Seal Masher, Thrust Nut Bearing Seal Masher, Steering Knuckle Washer, Steering Knuckle Washer, Steering Knuckle	
62	P-14012		Washer, Steering Knuckle	22

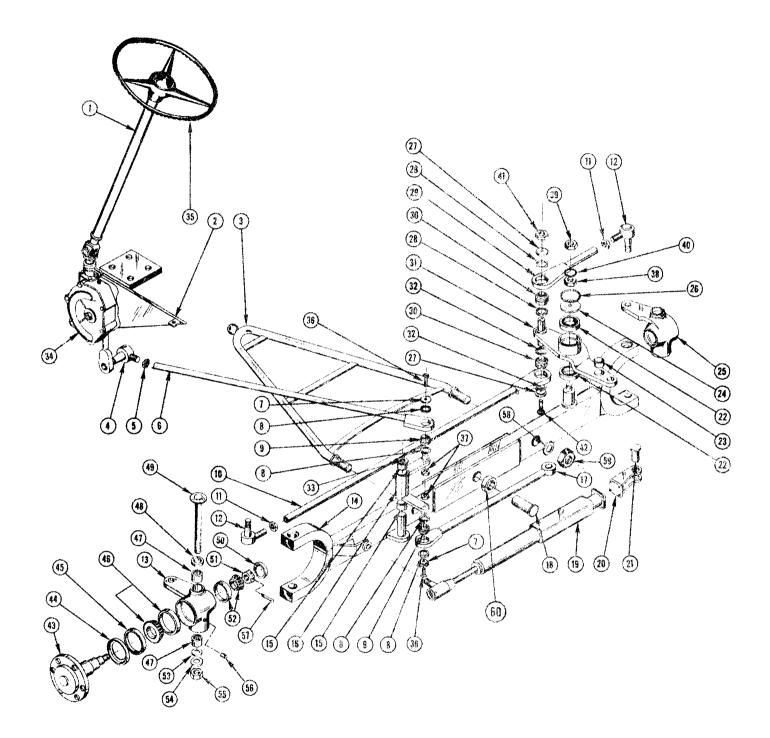

STEERING ASSEMBLY 11243

ITEM NO.	PART NO.	ASSEMBLY	DESCRIPTION	NO. REQ.
1 2 3 4 5 6 7 8 9	1171	P-11653	Ocium Assonbly (Page 24) Steering Bracket	1
3	11,090		Wishbone	1
4	P-10343 7602		Tie Rod End Special Nut	1
6	11,188		Drag Link	1
7	8802		Retainer	2
8	P-11495		Felt Washer	4
10	P-11496 8275		Swîvel Bushing Tie Rod	2
11	7615		Special Nut	1 1 2 4 2 1 2 2 1 2 2 1 2 1 2
12	P-10345		Tie Rod End	2
13	8230		Axle Spindle (L.H.)	1
14	11,135 5209		Axle	1
14 15 16	8801		Bushing Bell Crank	2
17	8759		Booster Actuating Rod	ī
18	11,157	.	Axle Pivot Pin	1
19	7 021	P-11126	Booster Ass'y (Page 46)	ļ
20 21	7931 7927		Booster Clevis Clevis Pin	1 1 2 1
22	P-11306		Bearing	2
23	7965		Bushing	1
24 25	7930 8229		Bearing Retainer	1
25 26	P-10314		Axle Spindle (R.H.) O-Ring	1
27	8300		Retainer	2
28	P-11428		Felt Washer	2
29 30	8273 P-11430		Tie Rod Swivel Bushing	1
31	11,165		Toggle	1 2 2 1 2 1 2 1
32	P-11429		Felt Washer	2
33	8301	ה וונרי	Retainer	
34 35	P-10339	P-11652	Steering Gear Box Ass'y (Page 22) Steering Wheel	1
36	Com'l		Screw, 5/16 NC x 2" F.H.	1 2 2
37 38	Com'l		Nut, Cast 5/16 NC	2
38 39	Com!l		Nut, Full $3/4-16$ NF	1
40	Com ^t l Com ^t l		Nut, Jam 3/4-16 NF Washer, Shakeproof 3/4"	1
41	Com'l		Nut, Cast. 1/2-20 NF	ī
42	Com'l		Bolt, $1/2-20$ NF x 20"	1
43	IK-713-G		Spindle	2
44	IK-738-A IK-737-A		Cup Seal	2
46	IKS-5014		Bearing	2
47	105434-A		Bearing	4
40 1.a	IKS-5039 105-431	٨	Bearing Pivot Spindle Carrier	2
50	105-438-	A	Cap	2
51	IK-731-A		Nut	2
52	IKS-5013		Bearing	2
シゴ ちり	105437-A IK-727-A		Seal Washer Thrust	2
55	105-436-		Nut	2
56	943-420		Plug	1
57 58	932-047 920-097		Cotter Pin Lockwasher	2
44444444555555555555555555555555555555	915-011		Nut	12222422222222222222
60	8746		Collar	l

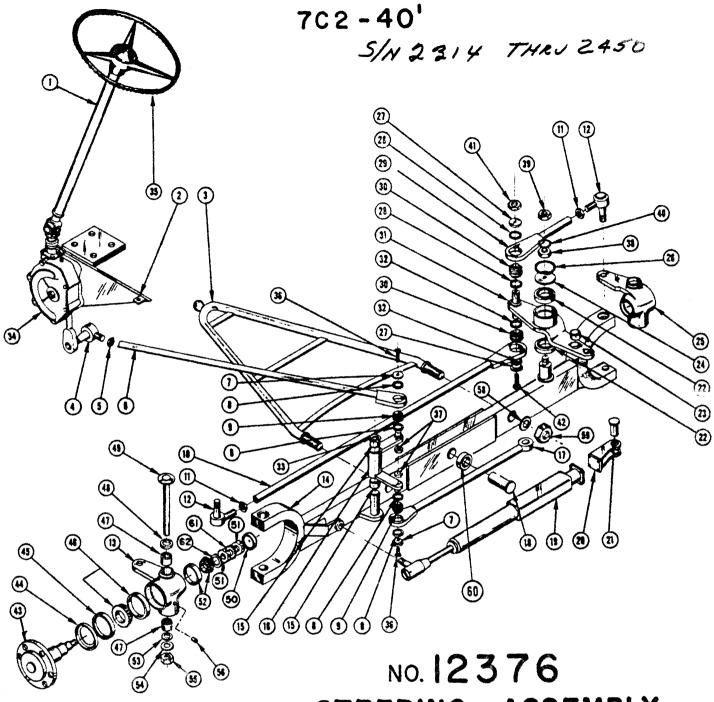


STEERING ASSEMBLY

ITEM NO.	PART NO.	ASSEMBLY	NO. DESCRIPTION			NO.	REQ.
1		P-11653	Steering Column Ass'y	(Page	24)		1
2	1171		Steering Gear Bracket				1
3	11,090		Wishbone				1
4	P-10343		Tie Rod End				1
5	7602		Special Nut				1
6	11,188		Drag Link				1
7	8802		Retainer				2
8	P-11495		Felt Washer				4

		ERING ASSENBL	Y NO 12376	NO
ITEM NO.	PART <u>NO.</u>	ASSEMBLY NO.	DESCRIPTION	NO. REO.
32 33 34	P-16012 11,135 5209 8801 8759 11,157 7931 7927 P-11306 7965 7930 P-15013 P-10314 8300 P-11428 8273 P-11429 8301 *P-11652	P-11126	Axle Spindle, Left Hand Axle Bushing Bell Crank Booster Actuating Rod Axle Pivot Pin Booster Assembly (Page 46) Booster Clevis Clevis Pin Bearing Bushing Bearing Retainer Axle Spindle, Right Hand O-Ring Retainer Felt Washer Tie Rod Swivel Bushing Toggle Felt Washer Retainer Steering Gear (See page 25)	1211121212121212121
3373901234567890123456789023 3901234567890123456789023	COM'L COM'L COM'L COM'L COM'L COM'L COM'L P-17456 P-14000 P-13999 P-14001 P-13984 P-13985 P-14742 P-13985 P-14742 P-13985 P-14742 P-13988 P-14007 P-13990 P-13991 P-13991 P-13991 P-13993 P-13993 P-13994 P-14350 P-14662 8746 P-13494 12,339	(P-1601ĭ)	Screw, 5/16-18 N.C. x 2" Nut, Cast. 5/16 N.C. Nut, 3/4-16 N.F. Full Nut, 3/4-16 N.F. Jam Washer, Shakeproof 3/4" Nut, Cast. 1/2-20 N.F. Bolt, 1/2-20 N.F. x 4" Spindle Seal SLEEVE Bearing Bearing Bearing Pivot Spindle Carrier Cap Nut Bearing Seal Washer, Thrust Nut Plug Cotter Pin Lockwasher Nut, Hex Collar TIRE Wheel Weldment	2211122222422222222212221222

*NOTE: Item #34 P-11652 Steering Gear is no longer available as a complete new assembly. If complete new assembled gear box is necessary order Bracket # 12981, P-13702 Column Assembly and P-13701 Gear Box. Pitman Arm not Included - Old one can be reused.

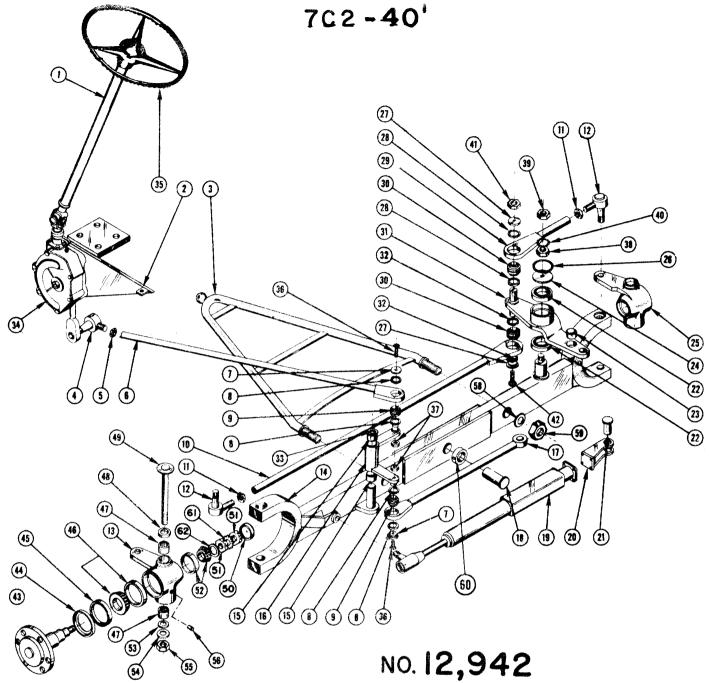

STEERING ASSEMBLY


S/N 2451 AND UP

ITEM NO.	PART NO.	ASSEMBLY	NO. DESCRIPTION		NO.	REQ.
1 2 3 4 5 6 7 8	12.891 11,090 P-10343 7602 11,188 8802 P-11495	P-13702	Steering Column Ass'y (Steering Gear Bracket Wishbone Tie Rod End Special Nut Drag Link Retainer Felt Washer	Page 24)		1 1 1 1 1 1 2 4
7470						

NC. 12,942

7C2 Series


ITEM NO.	PART NO. ASSEMBL	Y NO. DESCRIPTION	NO. REQ.
9	P-11496		an shirth a shareho a a shirth
10	8275	Swivel Bushing Tie Rod	2
11	7615	Special Nut	1
12	P-10345	Tie Rod End	2 2 1
13	303025403 L.H.	Axle Spindle (LH)	2
14	11,135	Axle	1
15	5209	Bushing	2
16	8801	Bell Crank	1
17	8759	Booster Actuating Rod	1
18	11,157	Axle Pivot Pin	i
19	P-1112		1
20	7931	Booster Clevis	i
21	7927	Clevis Pin	T
22	P-11306	Bearing	2
23	7965	Bushing	1
24	7930	Bearing Retainer	1
25	303025411 R.H.	Axle Spindle (R.H.)	1
26	P-10314	0-Ring	1
27	8300	Retainer	2 2 1 2 1 2 1
28	P-11428	Felt Washer	2
29	8273	Tie Rod	1
30	P-11430	Swivel Bushing	2
31	11,165	Toggle	1
32	P-11429	Felt Washer	2
33	8301	Retainer	
34 35	P-13701	Steering Gear	1 1 2 2
36	P-10339 COM'L	Steering Wheel	1
37	COM'L	Screw, $5/16$ NC x 2" F.H.	2
38	COM'L	Nut, Cast 5/16 N.C.	2
39	COM'L	Nut, 3/4-16 NF Full Nut, 3/4-16 NF, Jam	1
40	COM'L	Washer, Shakeproof 3/4"]
41	COM'L	Nut, Cast $1/2-20$ NF	1
42	COM'L	Bolt, 1/2-20 NF x 20"	
43	303025438	Spindle	2
44	165756-A	Cup	
45	165-757	Seal	2
46	165-804-A	Bearing	2
47	105434-A	Bearing	4
48	IKS-5039	Bearing	2 2 4 2 2 4 2 2 4 2 2 2 2 1
49	105-431-A	Pivot, Spindle Carrier	2
50	165-762-A	Cap	2
51	30-3026884	Nut	4
52	165-805	Bearing	2
53	105437-A	Seal	2
54	IK-727-A	Washer, Thrust	2
55	105436-A	Nut	2
56	943-420	Plug	1
57			
58	920-097	Lockwasher 1 1/4	2
59	915-011	Nut, Hex 1 1/4-12	2 2 1
60	8746	Collar	1
61 62	303026892	Lockwasher Steering Knuckle Spindle	2 2
02	303026906	Washer Steering Knuckle Spindle	2

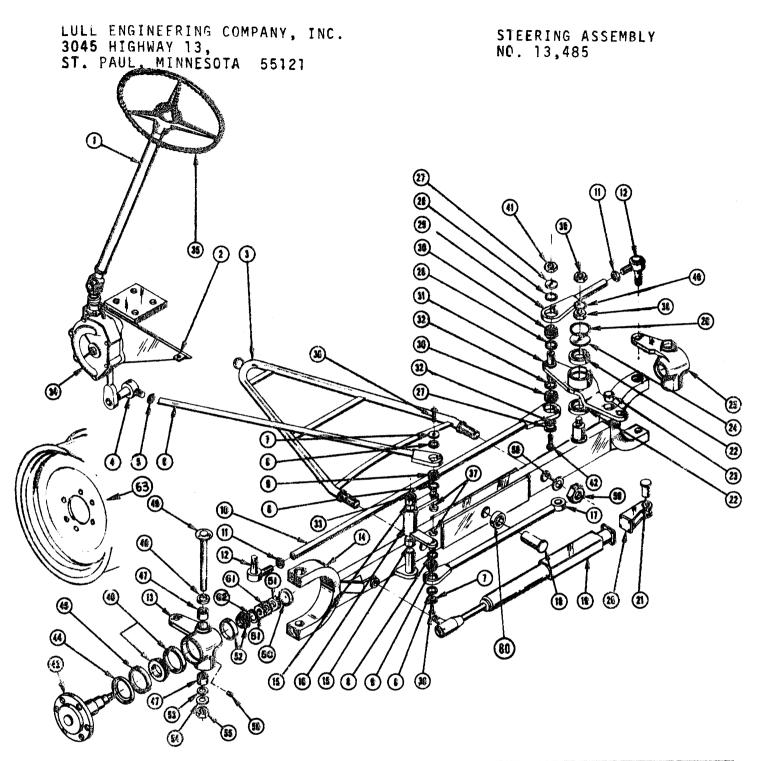

ITEM NO.	PART NO.	ASSEMBLY	NO. DESCRIPTION	NO. REQ.
1		P-13702	Steering Column Ass'y (Page 24)	1
2	12,891		Steering Gear Bracket	1
3	11,090		Wishbone	1
4	P-10343		Tie Rod End	1
5	7602		Special Nut	1
6	11,188		Drag Link	1
7	8802		Retainer	2
8	P-11495		Felt Washer	4
9	P-11496		Swivel Bushing	2
10	8275		Tie Rod	1
11	7615		Special Nut	2
12	P-10345		Tie Rod End	2
1555			-22-	

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
NO. 13 14 15 16 17 18 19 20 21 22 23 24 26 27 28 20 31 32 34 35 36 37 38 9 40 41	NO. P-16012 11,135 5209 8801 8759 11,157 7931 7927 P-11306 7965 7930 P-16013 P-10314 8300 P-11428 8273 P-11429 8301 P-11429 8301 P-11429 8301 P-11429 8301 P-11429 8301 P-11429 8301 P-13701 P-10339 COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L		Axle Spindle, Left Hand Axle Bushing Bell Crank Booster Actuating Rod Axle Pivot Pin Booster Assembly (Page 46) Booster Clevis Clevis Pin Bearing Bushing Bearing Retainer Axle Spindle, Right Hand O-Ring Retainer Felt Washer Tie Rod Swivel Bushing Toggle Felt Washer Retainer Steering Gear Steering Wheel Screw, 5/16-18 N.C. x 2" Nut, Cast 5/16 N.C. Nut, 3/4-16 N.F. Full Nut, 3/4-16 N.F. Jam Washer, Shakeproof 3/4" Nut, Cast 1/2-20 N.F.	REQ. 1 2 1 1 1 1 1 1 2 1 1 2 1 2 1 2 1 2 1 2 1 2 1 1 2 1 1 2 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 1 1 1 2 2 1 1 1 2 2 1 2 1 1 1 2 2 1 2 1 1 1 1 2 2 1 1 1 1 2 2 1 2 1 1 1 2 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 1 2 1 1 2 1 1 2 2 1 2 1 1 1 2 2 1 2 1 1 2 1 1 1 2 2 1 2 1 1 1 2 2 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 1 2 2 1 1 2 1 1 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 1 1 1 2 2 1 1 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 1 1 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1
41 42 43 44	COM'L COM'L P-16974 P-13999		Washer, Shakeproof 3/4" Nut, Cast 1/2-20 N.F. Bolt, 1/2-20 N.F. x 20" Spindle Cup	1 1 1
45 46 47 48 49 50	P-14000 P-14001 P-13984 P-13985 P-14742 P-15963		Seal Bearing Bearing Bearing Pivot Spindle Carrier Cap	2 2 2 4 2 2 2 2 2
51 52 53 54 55 56	P-17188 P-14007 P-13990 P-13991 P-13992 P-13993		Nut Bearing Seal Washer, Thrust Nut Plug	2 2 4 2 2 2 2 1 2 2 1 2 1
58 59 60 61 62 63	P-14350 P-14662 8746 P-14039 P-14012 12,339		Lockwasher Nut, Hex Collar Lockwasher, Steering Knuckle Washer, Steering Knuckle Wheel Weldment	2 2 1 2 2 2

LULL ENGINEERING COMPANY, INC. 3045 Highway 13, St. Paul 11, Minn. 55121

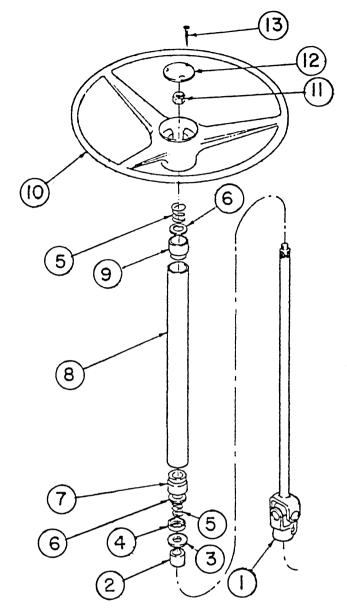


STEERING COLUMN ASSEMBLY


*NOTE: COLUMN & GEAR BOX NO LONGER AVAILABLE

USE THE FOLLOWING PART NUMBERS P13702 COLUMN P13701 GEAR BOX 12891C BRAKET (TO MOUNT GEAR BOX)

NO.

ITEM	PART	DESCRIPTION	NO.
NO.	NO.		REQ.
1 2 3 4 5 6 7 8 9 10 11 12 13	* * * * * * * * * * * * * *	"U" Joint & Wheel Tube Ass'y Spacer Washer Cup, Dust Spring Seat, Spring Lower Column Bearing Tube, Jacket Upper Column Bearing Steering Wheel Nut, Wheel Wheel Cap Screw, Wood	

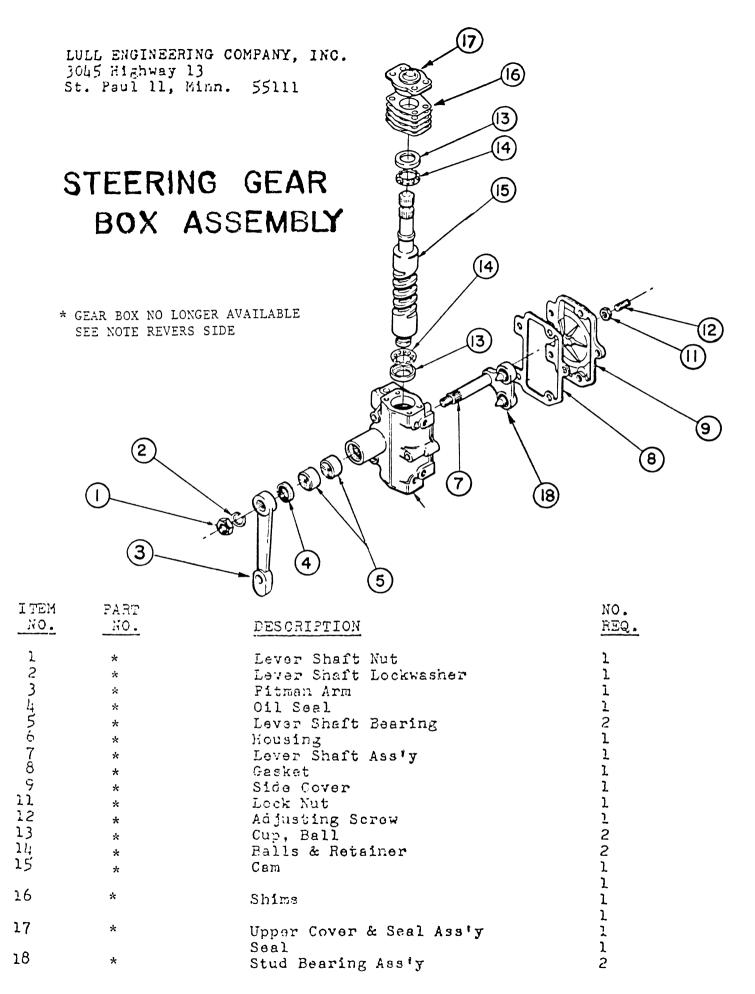


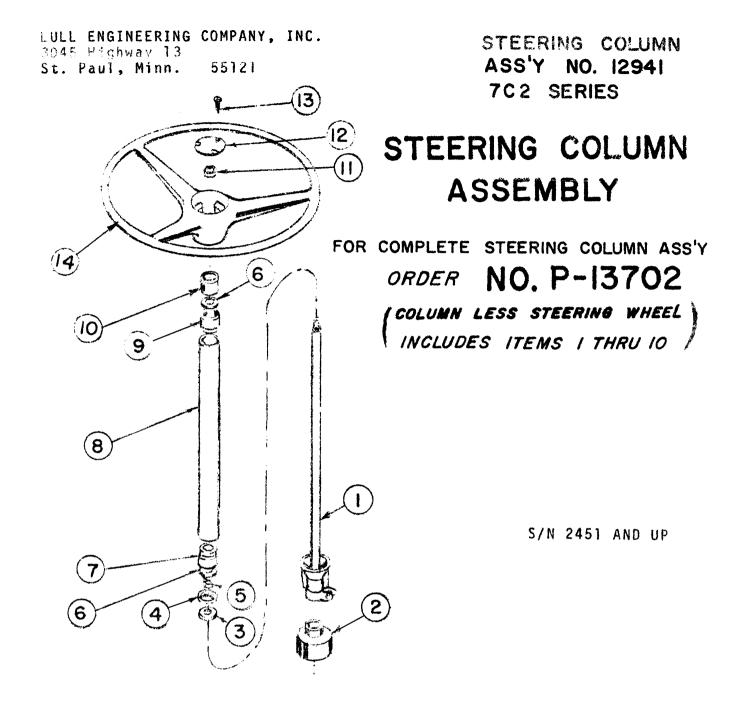

ITEM NO.	PART NO.	DESCRIPTION	NO. <u>REQ</u> .
1	P-13746	"U" Joint & Wheel Tube Ass'y	1
2		Boot Rubber "U" Joint Cover	1
3	P-13747	Washer	1
4	P-13748	Dust Cup	1
4 5	P-13749	Spring	2
6	P-13750	Seat, Spring	3
7	P-13751	Lower Column Bearing	i
8	P-13752	fube, Jacket	1
9	P-13753	Upper Column Bearing	1
10	P-13754	Spacer	i
11	P-12353	Nut, Wheel	1
12	P-12354	Wheel Cap	j
13	P-12355	Screw, Wood	3
14	P-10339	Wheel, Steering	ĩ
		-24- "Å change-E.0.1045	1/9/75

STEERING GEAR BOX ASS'Y NO. 12940

7C2 SERIES

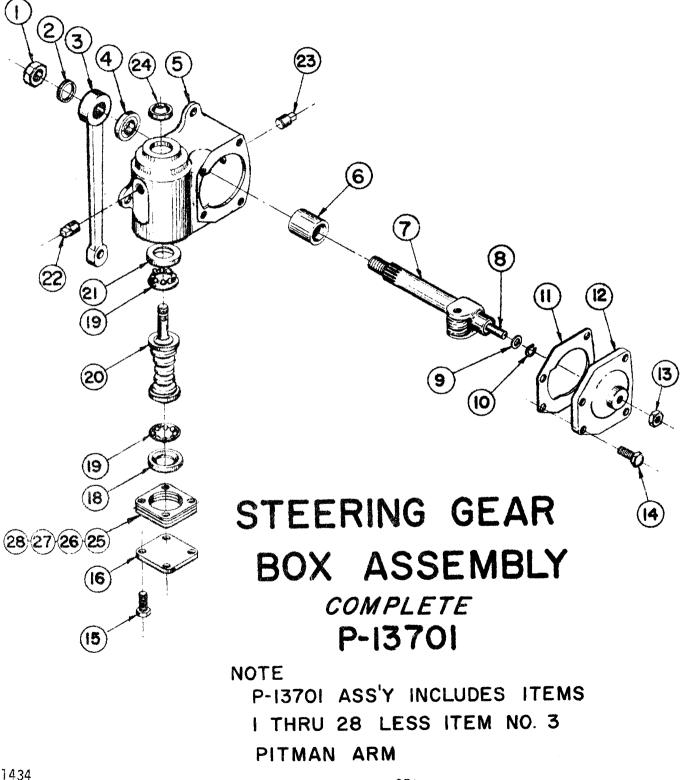


1434

ITEM NO.		ASSEMBLY NO.	Description	NO. Req.
13 14 16	P-13715 P-13716 *10,625 P-13717 F-13718 P-13720 P-13721 P-13722 P-13722 P-13723 P-13724 P-13725 P-13726 P-13727 P-13740 F-13732		Nut Lockwasher Pitman Arm Oil Seal Housing Bushing Shaft Assembly Screw, Adjusting Washer, Thrust Snap Ring Gasket Cover, Shaft Nut, Jam Screw Screw Cover, Worm	1 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7
90122343 6 222342 3 6	P-13733 P-13734 P-13735 P-13736 P-13737 P-13738 P-13739 P-13728 P-13729 P-13730 P-13731		Cup, Bearing Ball & Cage Assembly Column & Worm Assembly Cup, Bearing Plug, Vent Plug Seal Shim, Worm Cover .002 Shim, Worm Cover .010 Shim, Worm Cover .003	1 2 1 1 1 2 1 5 1

* When Ordering a Complete P-13701 Gear Box Item # 3 10625 Pitman Arm is not included.

["]A["] change-E.0.1046 1/9/75


BRAKE AND TORQUE CONVERTER CONTROL ASSEMBLY NO. 11,253

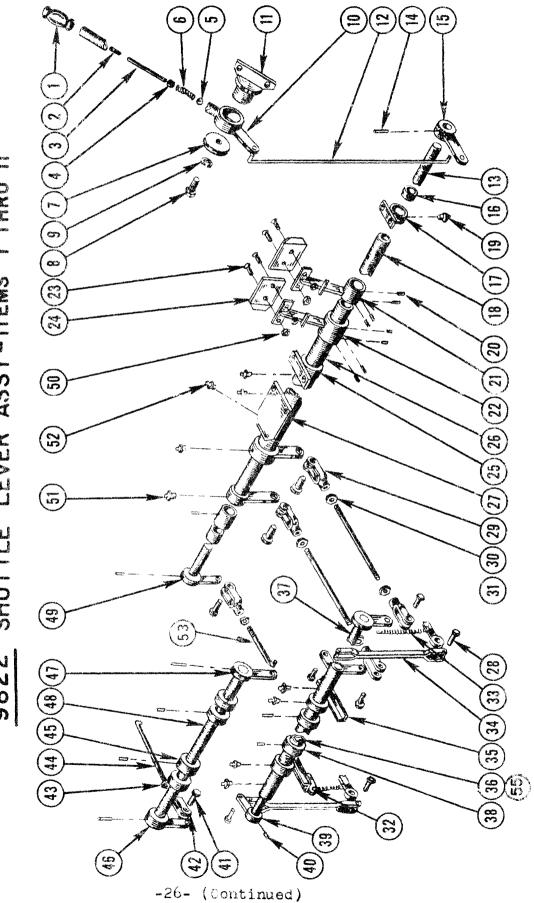

SHUTTLE LEVER ASSY-ITEMS I THRU II 9822

BRAKE & TORQUE CONVERTER CONTROL ASSEMBLY NO. 11,253

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
			DESCRIPTION Rubber Grip Setscrew, 3/8-16 NC x 1/2 Push Rod Spring Stop Check Ball Spring Washer Bolt, 3/8-16 NC x 1/2 Long Lockwasher, 3/8 Control Handle Lever, Pivot Hand Lever Link Cross Shaft Roll Pin Arm Cross Shaft Steel Bushings Support, Left Brake Shaft, Left Brake Zerk Fitting, 1/8 Straight Setscrew, 3/8 NC x 3/8 Brake Foot Pedal - Left Hand Brake Foot Pedal - Left Hand Flat Head Capscrew, 5/16 NC x 1 Brake Pedal Support, Right Brake Shaft, Support Clevis Pin Clevis Jam Nut, 3/8 NF Rod, Brake Adjustment Lug, Brake Spring Brake Rod Front Brake Shaft Support Front Brake Shaft, Cellar Front Brake Shaft, Cellar Front Brake Shaft, Cellar Front Shaft Arm Setscrew, 1/4 NC x 1/4 Clevis Pin Clevis Jam Nut, 5/16 NF Link Collar Front Shaft Arm Hex Nut, 5/16-18 NC Zerk Fitting, 1/8 45° Zerk Fitting, 1/8 90° Link Shuttle Lever Ass'y. (1 thru 11	REQ. 1 1 1 1 1 1 1 1 1 1 1 1 1
55	P-10590		Bushing -27- 1125-A	2

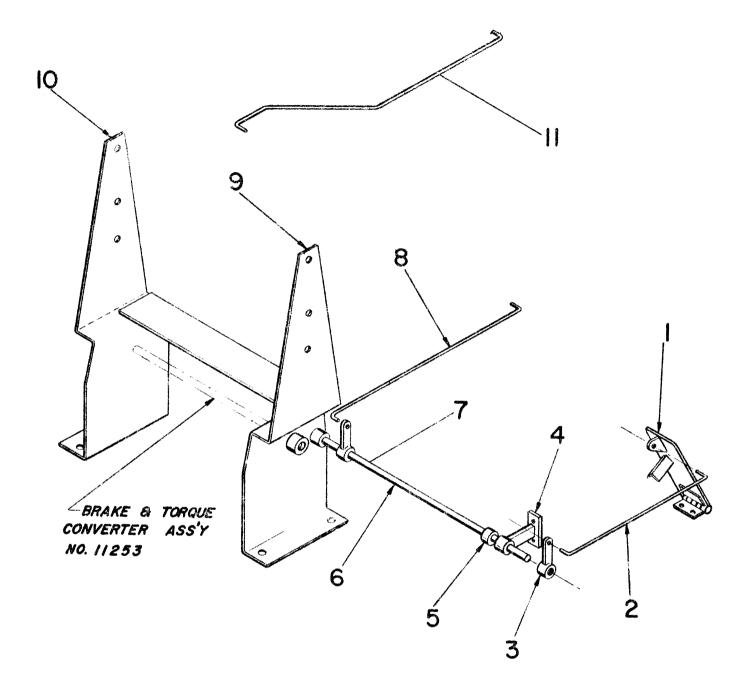


THROTTLE ASS'Y. 11260

-30-

THROTTLE ASSEMBLY 7C2 HIGH-LIST LOADER NO. 11,260


ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1	1180		Pedal Weldment	1
2	1185		Link	1
3	1168		Arm Weldment	1
4	7400		Shaft Support	1
5	7424		Collar	1
6	11,040		Cross Shaft	1
7	11,041		Arm Weldment	1
8	11,042		Link	1
9	11,139		Support Bracket	1
10	11,138		Support Bracket	1
11	11,287		Governor Rod	1

THROTTLE ASSEMBLY NO. 12,546

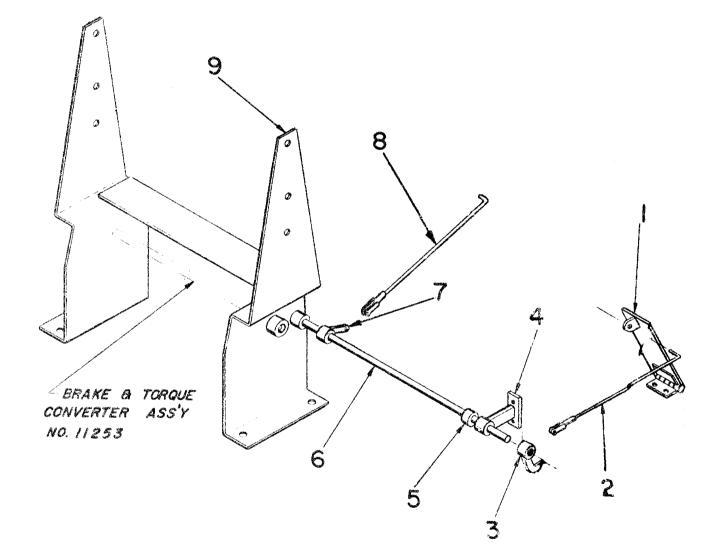


THROTTLE ASSEMBLY NO. 12,546

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1	12,521		Pedal Weldment	٦
2 3	12,501		Link	1
	12,508		Arm Weldment]
$\mathcal{L}_{\mathbf{k}}$	7400		Shaft Support	1
5	7424		Collar	1
6	11,040		Cross Shaft	j
7	12,504		Arm Weldment	1
8 9	12,509		Link	1
	13,989		Support Bracket	1
10	12,497		Shaft, Governor Weld't	1
11	12,517		Hanger, Accelerator Support	1
12	12,499		Stop, Governor	1

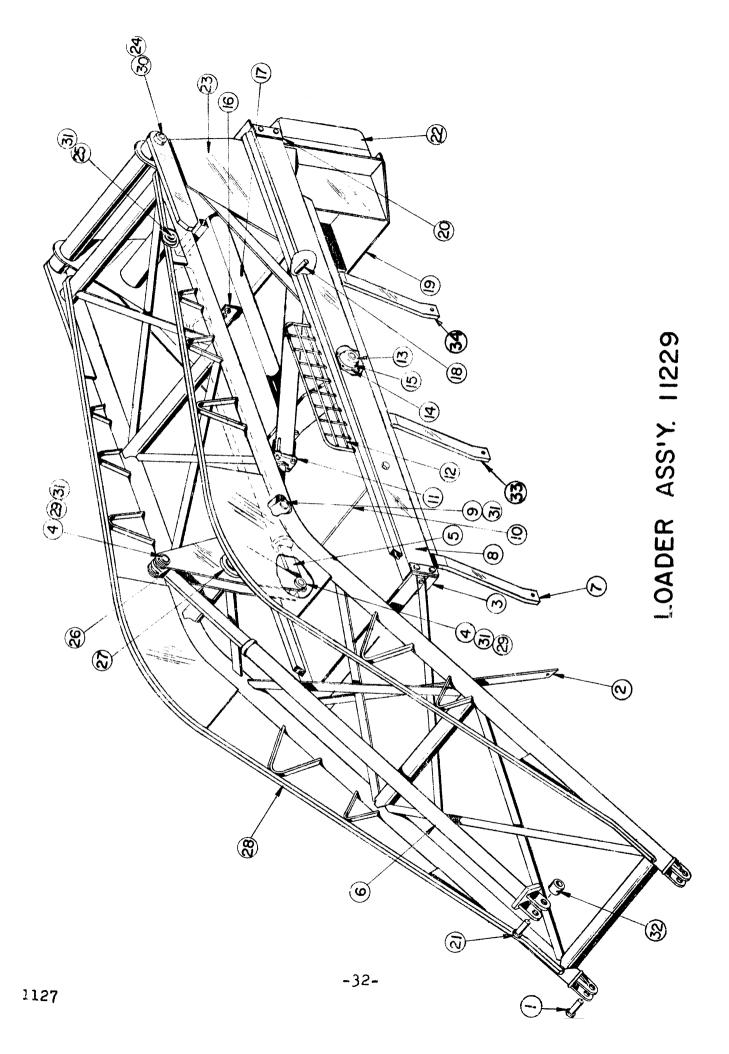

ITEM NO.	PART NO.	ASSEMBLY NO.		NO. Req.
1 2 3 4 5 6 7 8 9	7072 11,137		Pivot Pin X Brace, 1 LH - 1 RH	2 2 1
3	6901		Front Frame Bracket	ī
4	11,129		Tilt Cylinder Pin	2
5		11,107	Tilt Cylinder Assembly	1
6	11,105		Front Parrallel Arm	1
7	11,014		Upright Supports	4
8	11,010		Side Rails	2
9	5565		Pivot Pin	4 2 2 2 2
10	11,153	11 000	Truss Rod	2
11 12	8789	11,082	Hoist Cylinder Ass'y	1
13	6902		Operator S ide Shield Bushing	4
14	6832		Spindle	4
15	68 26		Roller	4
16	11,051		Hose Terminal	i
17		11,100	Transverse Cylinder Ass'y (Page	58)1
18	6 89 9	•	Hoist Cylinder Pin	2
19	11,064		Supply Tank	1
20	6 983		Rear Support	1
21	6964		Pin	1
22	5596		Counterweight	1
23	11,130		Transfer Carriage	1
24	5544		Pivot Shaft	1
25	11,128		Pin	1
26 27	11,123		Toggle	l l
28	11,168 11,110		Bushing Lift Arm	2
29	2727		Bushing	1
30	11,194		Bushing	1 2 1 2 5 1
31	11,353		Collar	5
32	1150		Collar	ĭ
*33	13,164		Support, Upright	i
*34	13,165		Support, Upright	i
			· -	


*Before Serial Number 2457, Use 11,014.

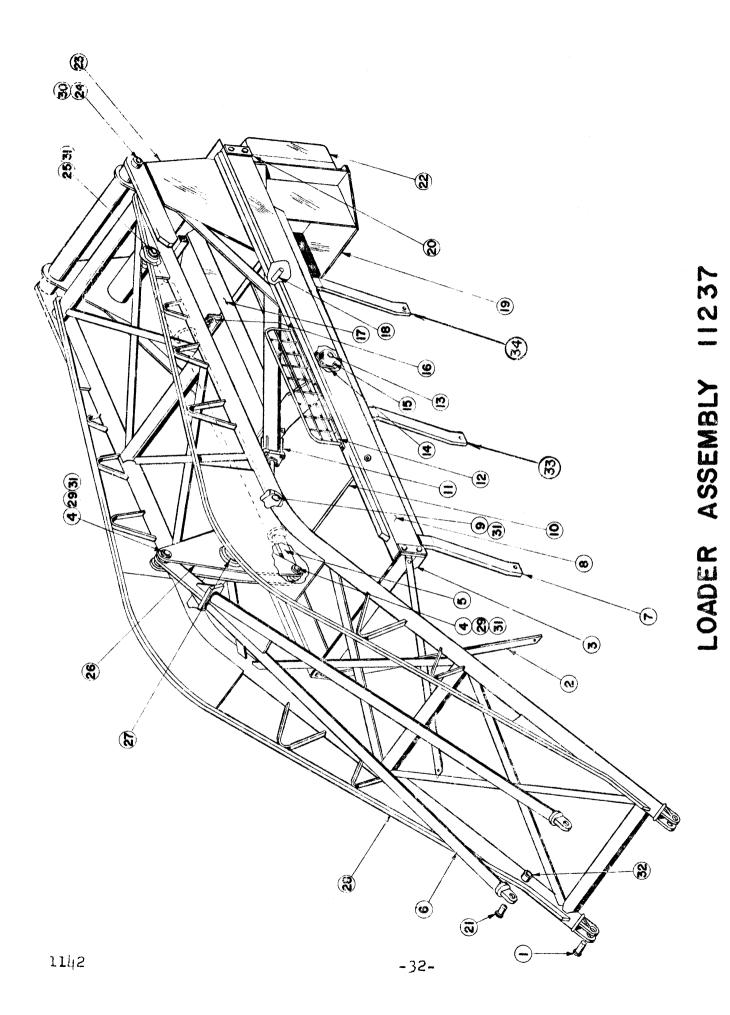

LOADER ASSEMBLY NO. 11,237

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
NO. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 9 20 21 22 23 24 5 26 27 28	NO. 7072 11,137 6901 11,129 11,071 11,076 11,010 5565 11,153 8789 6902 6832 6826 11,051 11,206 11,186 6983 5640 5596 11,068 5620 11,128 11,036 11,168 11,060		Pivot Pin X-Brace, 1 LH, 1 RH Front Frame Bracket Tilt Cylinder Pin Tilt Cylinder Ass'y (Page 54) Front Parallel Arm Upright Supports Side Rails Pivot Pin Truss Rod Hoist Cylinder Ass'y (Page 56) Operator Side Shield Bushing Spindle Roller Hose Terminal Transverse Cyl. Ass'y (Page 58) Hoist Cylinder Pin Supply Tank Rear Support Pin Counterweight Transfer Carriage Pivot Shaft Pin Toggle Bushing Lift Arm	REQ. 2 2 1 2 1 1 4 2 2 2 2 1 1 4 4 4 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 2 2 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 1 2 1 1 1 1 2 1 1 1 2 1 1 1 1 2 1 1 1 2 2 2 1 1 1 1 2 1 1 1 2 1 1 1 1 1 1 1 2 2 2 2 1 1 1 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 2 2 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 2 2 2 2 2 2 1 1 1 1 1 1 1 2 2 2 2 2 2 1 1 1 1 1 1 2 2 2 2 2 1 1 1 2 2 2 2 2 2 2 2 2 1 1 1 2 2 2 2 2 2 2 2 2 2 1 1 1 2 2 2 2 2 2 2 1 1 1 1 2
23 24 25 26 27	11,068 5620 11,128 11,036 11,168		Transfer Carriage Pivot Shaft Pin Toggle Bushing	


* Before Serial Number 2456, Use 11,076.

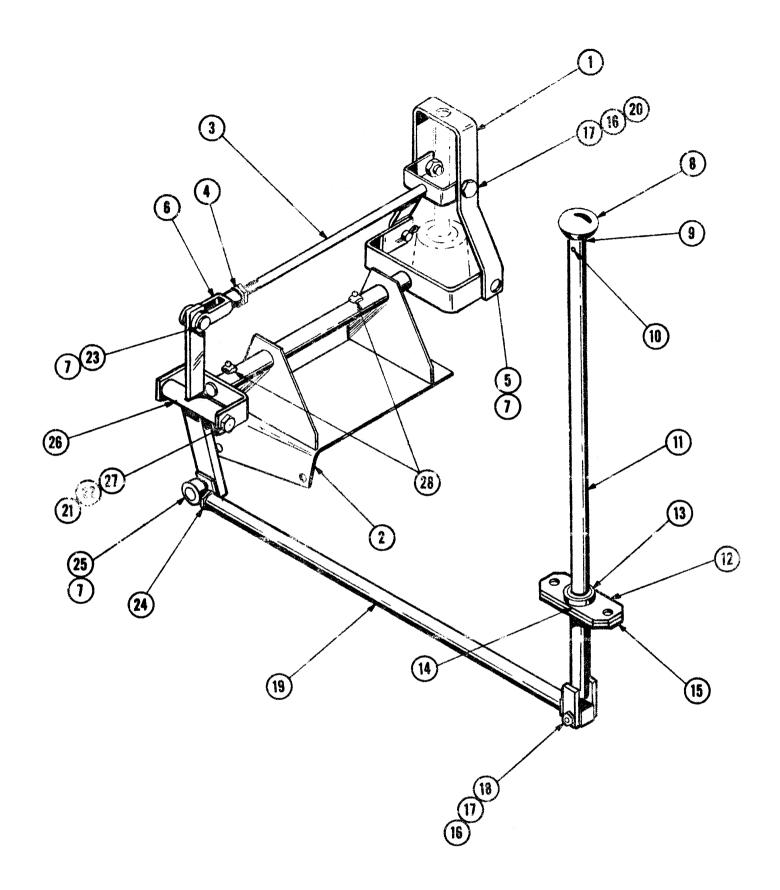

SHIFTING ASS'Y. 11250

SHIFTING ASSEMBLY 7C2-31' HIGH-LIFT NO. 11,250


ITEM	PART	ASSEMBLY	DESCRIPTION	NO.
NO.	NO.	NO.		REQ.
1234567890112345678901222222222222222222222222222222222222	11,249 11,160 7232 COM'L 7593 P-10333 COM'L P-10348 7614 P-10348 7419 7238 7093 P-10379 7357 COM'L COM'L COM'L COM'L COM'L COM'L P-10334 7602 P-10343 7251 COM'L		Clevis for Shifting Mounting Plate Assembly Upper Link Jam Nut 1/2" NF Pin Clevis Cotter Pin 1/8" x 3/4" Shift Knob Stud Roll Pin Shifting Lever Mounting Plate Assembly Pivot Ball Roll Pin Lower Support Plate Shakeproof Washer 3/8" Jam Nuts 3/8" N.C. Bolt 3/8 x 2 1/4" N.C. Shifting Link Capscrew 3/8 NC x 1" Jam Nut 1/2" N.C. Shakeproof Washer 1/2" Clevis Pin Special Nut Tie Rod End Pivot Assembly Bolt 1/2" NC x 5" long Self Tapping Grease Fitting	11112121111111111111111111111111111111

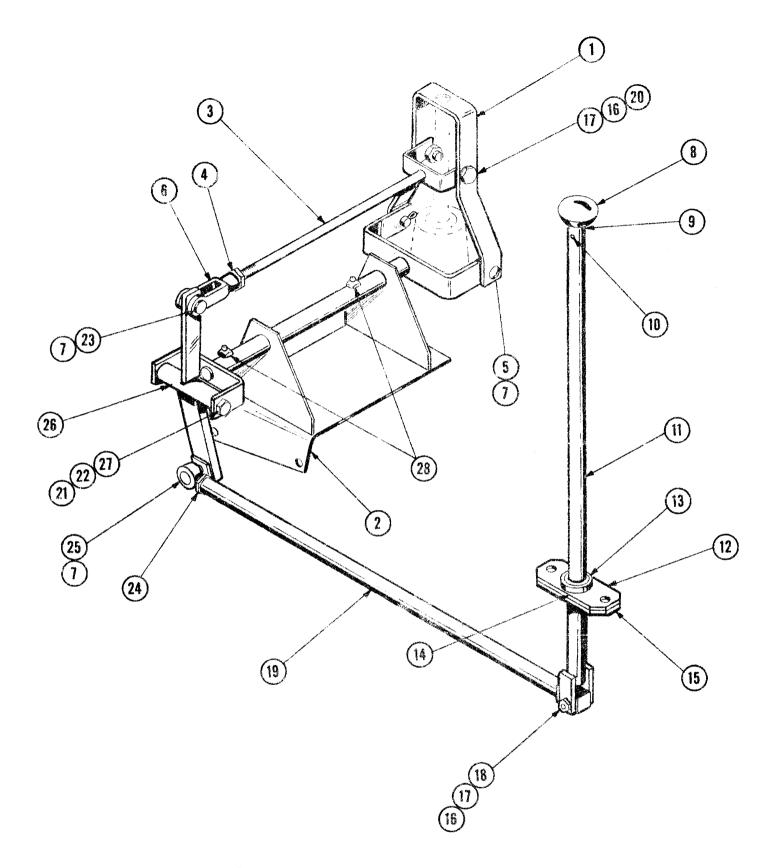

SHIFTING ASSEMBLY 11251

SHIFTING ASSEMBLY NO. 11,251


ITEM	PART	DESCRIPTION	RE'Q.
1 234567890 112345617820 21223456728	11,249 11,232 7232 COM'L 7593 P-10333 COM'L P-10348 7419 7238 7093 P-10379 7357 COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L	Clevis for Shifting Mounting Plate Assembly Upper Link Jam Nut 1/2" NF Pin Clevis 1/2" Cotter Pin 1/3" x 3/4" Shift Knob Stud Roll Pin Shifting Lever Mounting Plate Assembly Pivot Ball Roll Pin Lower Support Plate Shakeproof Washer 3/8" Jam Nuts 3/8" NC Bolt 3/8" x 2 1/4" NC Shifting Link Capscrew 3/8 NC x 1" Jam Nut 1/2" NC Shakeproof Washer 1/2" Clevis Pin 1/2" x 1" Special Nut Tie Rod End Pivot Assembly Bolt 1/2" NC x 5" Long Self Tapping Grease Fitting	11121211111111111111112

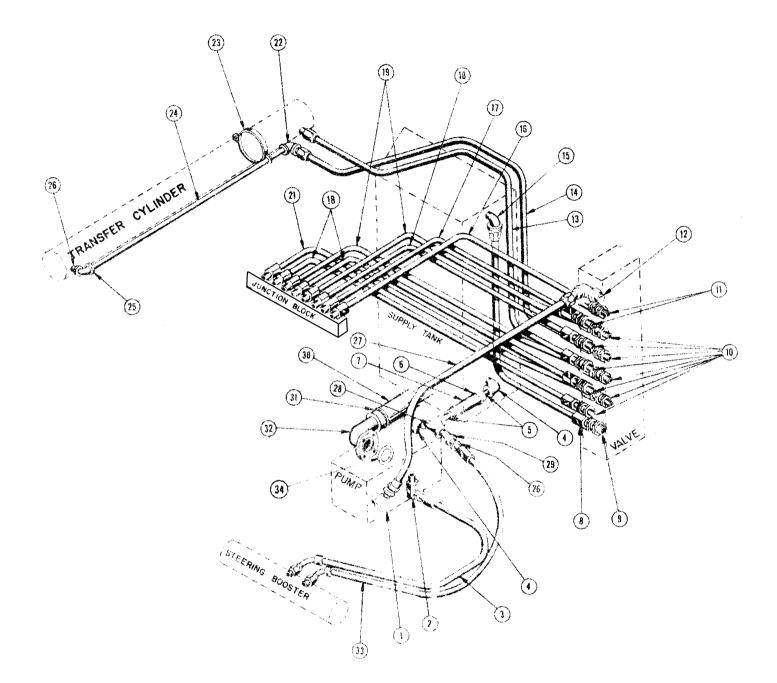


HYDRAULIC SYSTEM (PUMP TO VALVE) 11302

LULL ENGINEERING COMPANY, INC. 3045 Highway 13 St. Paul, Minnesota 55121


ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	P-12912 P-11497 P-11498 P-10111 9544 P-10178 COM'L P-12910 P-12909 P-12909 P-12907 P-12907 P-12911 P-10272 P-11501 P-10101 P-10276 P-10274 P-10451 P-10390		Elbow Swivel Fitting Hose Street Ell Nipple Hose Clamp Hose 3/4 ID x 7" Radiator Hose Swivel Fitting Swivel Fitting Elbow Hose Hose Street Ell Hose Hose Hose Hose	1 1 2 2 2 1 1 8 2 1 1 1 1 1 2 2 2 1 1 1 3 2
20 21 22 23 24 25 26 27 28 29 30 31 32 33 34	P-11436 P-10225 612 N-10276 P-10117 P-10120 P-12968 P-11058 P-1058 P-1058 P-1058 P-1058 P-1058 P-1058 P-1058 P-1058 P-1058 P-1058 P-1058 P-1058 P-1058 P-1058 P-1027 P-12971		Hose Elbow Cylinder Pipe Clamp Pipe 3/8 X Str. x 56" Street Ell Reducing Bushing Hose Service Tee Street Ell Hose 1 1/2 ID x 9" Radiator Clamp Elbow Hose O-Ring	

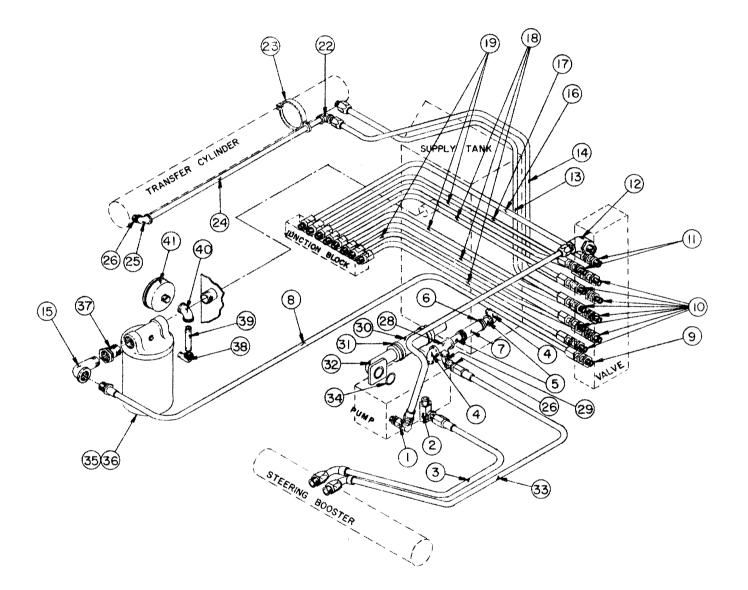

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1	P-12912		Elbow	1
2	P-11497		Fitting	1
2 3 4 5 6 7 8	P-14917 P-10111		Hose Street Ell	1 2 2 2
5	9544		Nipple	2
6	P-10178		Hose	2
7	COM'L		Hose]
8	P-13023		Hose]
9	P-12909		Fitting, Swivel	1
10	P-12908		Fitting, Swivel Fitting, Swivel	8 2
11 12	P-12907 P-12911		Elbow	ī
13	P-10272		Hose	j
14	P-11501		Hose	٦
15	P-10101		Street Ell]
16	P-10276		Hose	1
17	P-10274		Hose	1
18 19	P-10451 P-10390		Hose Hose	1 3 3
20	P~10390		1036	5
21				
22	P-10225		Elbow	1
23	612		Cylinder Pipe Clamp	1
24	N-10276		Pipe	1
25	P-10117		Street Ell Buching Deducing	2
26 27	P-10120 P-12968		Bushing, Reducing Hose	1
28	P-12968 P-11058		Service Tee	1
29	P-10191		Street Ell	i
30	COM'L		Hose	1
31	P-10602		Clamp	1
32	10,915		Elbow	1
33	P-17177		Hose	1
34	P-12971		O-Ring Filter	1
35 36	P-13587 P-13597		Filter Element	1
37	P-10059		Bushing, Reducing	j
38	P-10201		Street Ell	1
39	P-10757		Nipple	1
40	P-10223		Elbow	1
41	P-13588		Gauge	1

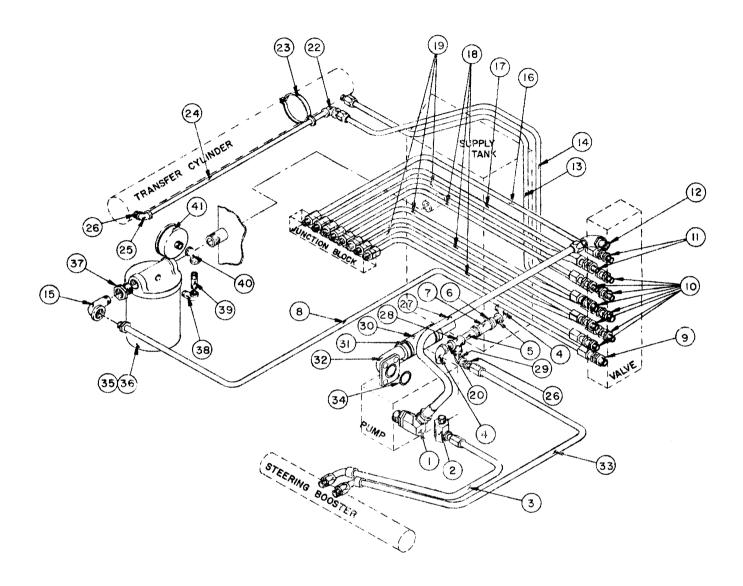


ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	P-12912 P-11497 P-14917 P-10111 9544 P-10178 COM'L P-13023 P-12909 P-12908 P-12907 P-12911 P-10272 P-12911 P-10272 P-10501 P-10274 P-10274 P-10451 P-10390 P-10938		Elbow Fitting Hose Street Ell Nipple Hose Clamp Hose Hose Fitting, Swivel Fitting, Swivel Fitting, Swivel Elbow Hose Hose Street Ell Hose Hose Hose Hose Nipple	1 1 2 2 2 1 1 1 8 2 1 1 1 1 3 3 1
20 21 22 23 24 25 26 27 28 30 31 32 33 34 35 36 37 38 39 40 41	P-10938 P-10225 612 N-10183 P-10117 P-10120 P-10417 P-10191 COM'L P-10602 11,299 P-17177 P-12971 P-13587 P-13597 P-1059 P-10201 P-10757 P-10223 P-10223 P-13588		Elbow Cylinder Pipe Clamp Pipe Street Ell Bushing, Reducing Hose Tee Street Ell Hose Clamp Elbow Hose O-Ring Filter Filter Element Reducing Bushing Street Ell Nipple Elbow Gauge	

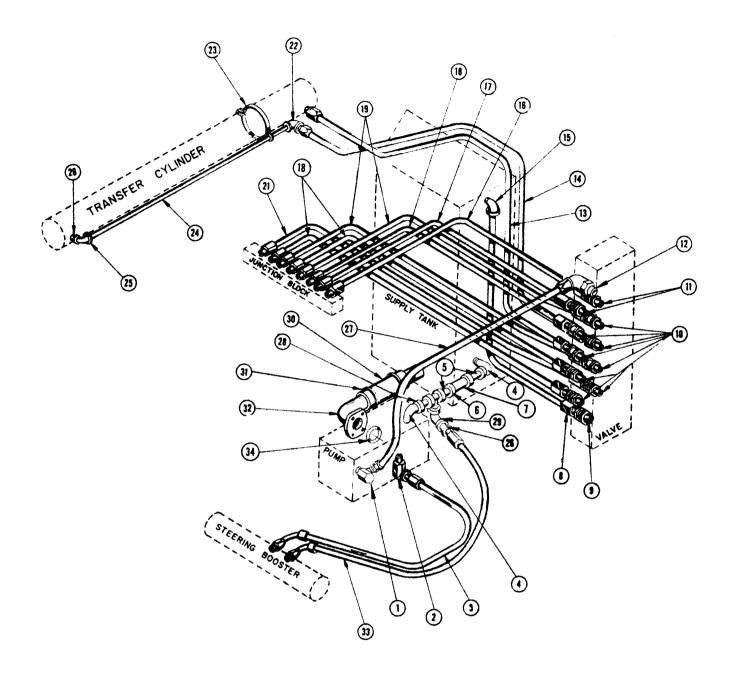

HYDRAULIC SYSTEM (PUMP TO VALVE) (11303)

HYDRAULIC SYSTEM PUMP TO VALVES NO. 11,303

ITEM	PART	DESCRIPTION	RE'Q
12345678901123456789011234567890332334	P-12912 P-11497 P-11498 P-10111 9544 P-10178 COM'L P-12900 P-12908 P-12907 P-12911 P-10272 P-11501 P-10276 P-10274 P-10451 P-10276 P-10274 P-10451 P-10276 P-10274 P-10451 P-10225 612 N-10183 P-10177 P-10120 P-10417 P-10107 P-10191 COM'L P-10602 11,299 P-12971	Elbow Swivel Fitting Hose Street Ell Nipple Hose Clamp Hose 3/4" I.D. x 8" Radiator Hose Swivel Fitting Swivel Fitting Elbow Hose Hose Hose Hose Elbow Cylinder Pipe Clamp Pipe 3/8 X Strong x 54" Street Ell Reducing Bushing Hose Tee Street Ell Hose 1 1/2 I.D. x 9" Radiator Clamp Elbow Hose O-Hing	

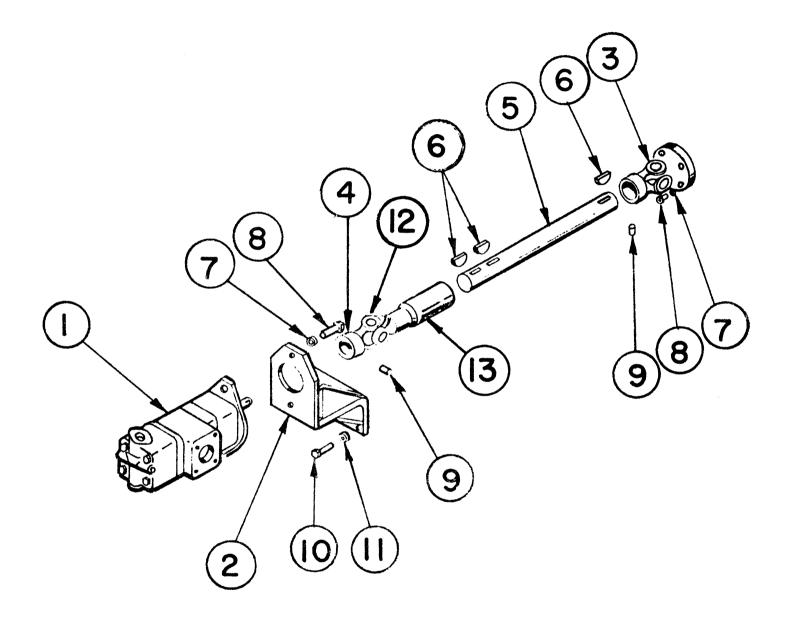


PUMP AND DRIVE ASS'Y. 11205

LULL ENGINEERING COMPANY, INC. 3045 HIGHWAY 13, st. paul, minnesota 55121

NO.	PART HO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1		*P-13631	Pump (Page 44)	1
2	11,197		Pump Support	1
3	7185		Fan Pulley Adapter	1
4	P-13700		End Yoke	٦
2 3 4 5 6 7	3518		Pump Drive Shaft	1
6	P-10517		Key	3
7	COM'L		Shakeproof Washer, 1/2"	2
8	COM'L		Capscrew, 1/2-13 NC x 1 1/4 Long Hex Head	2
9	COM'L		Setscrew, 3/8-16 NC x 3/8" Long	2
10	COM'L		Capscrew, 1/2-13 NC x 1 1/4" Hex Head	2 3
11	COM'L		Lockwasher, 1/2"	3
12	P-13699		Cross	1
13	P-13698		Slip Joint	1


* S/N 2001 Thru 2466 - use P-12905.

HYDRAULIC PUMP ASS'Y P-12905

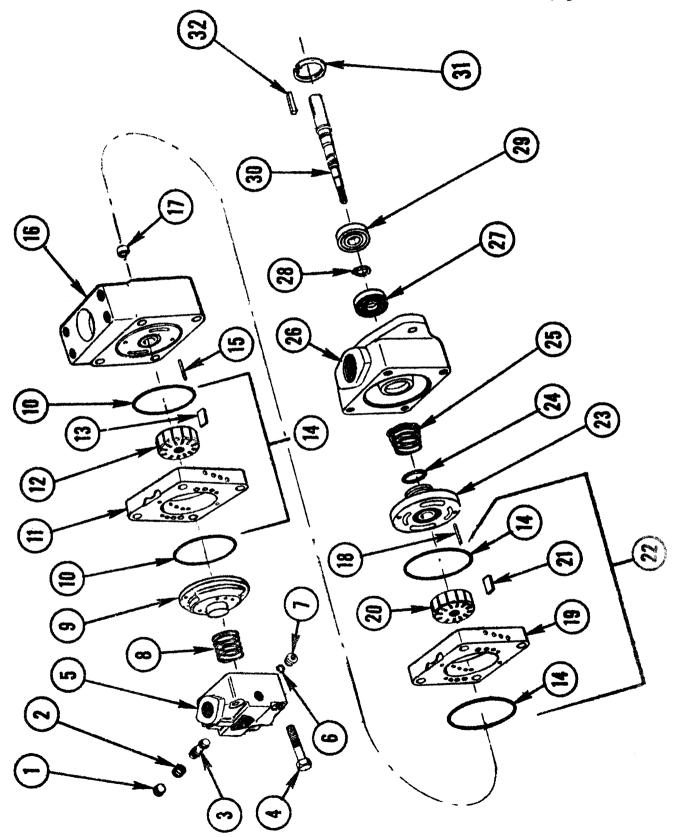


PUMP ASSEMBLY P-12905

ITEM	PART	DESCRIPTION	RE'Q
1 2 3 4 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 23 14 5 6 7 8 9 0 11 23 14 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 24 5 6 7 8 9 0 21 22 3 24 5 6 7 8 9 0 31 2 23 2 25 6 7 8 9 0 31 2 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 3 3	P-12204 P-12914 P-12915 P-12916 P-12917 P-12205 P-12920 P-12920 P-12920 P-12923 P-12923 P-12924 P-12925 P-12926 P-12927 P-12928 P-12929 P-12930 P-12931 P-12934 P-12934 P-12935 P-12937 P-12936 P-12937 P-12937 P-12938 P-12939 P-12939 P-12939 P-12939 P-12939 P-12939 P-12939 P-12930 P-12936 P-12937 P-12937 P-12938 P-12939 P-12940	<pre>Plug Spring Valve Sub Ass'y Screw Cover Snap Ring Plug Spring Pressure Plate O-Ring Ring Rotor Vane Kit (12 Vanes) Service Kit Pin Body - Includes P-12926 Bushing Bushing Pin Ring Rotor Vane Kit (12 Vanes) Service Kit Pressure Plate O-Ring Spring Outlet Body Seal Snap Ring Bearing Shaft Snap Ring Key Seal Kit</pre>	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

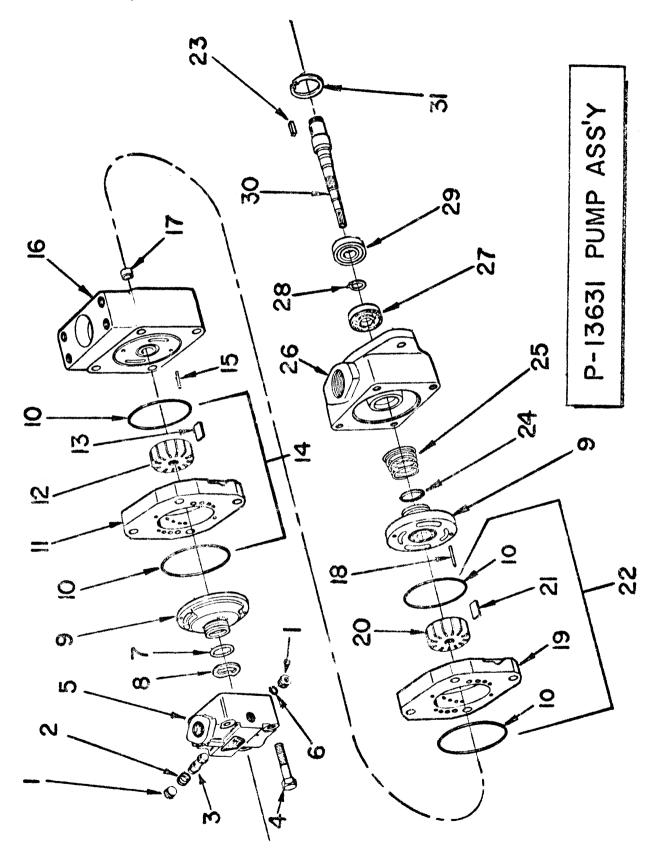

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 9 21 223 24 25 27 29 31 32 31 32 31 32 31 32 31 32 31 32 32 32 32 32 32 32 32 32 32	$\begin{array}{c} P-12204\\ P-12914\\ P-12915\\ P-13638\\ P-13636\\ P-13656\\ P-12205\\ *P-12210\\ P-13656\\ P-13661\\ *P-12192\\ P-13644\\ P-13655\\ P-13648\\ P-13655\\ P-13648\\ P-13655\\ P-13648\\ P-13653\\ P-13643\\ P-13653\\ P-13643\\ P-13653\\ P-13646\\ P-13658\\ P-12927\\ P-13646\\ P-13658\\ P-12937\\ P-12934\\ *P-12935\\ P-12936\\ P-12936\\ P-12938\\ \end{array}$		Plug Spring Valve Sub Assembly Screw Cover Snap Ring O-Ring Washer Pressure Plate O-Ring Ring Rotor Vane Kit (12 Vanes) Kit Pin Body (Includes P-12926 Bushing Bushing Pin Ring Rotor Vane Kit (12 Vanes) Kit Key O-Ring Spring Body (Outlet) Seal, Shaft Snap Ring Bearing Shaft Snap Ring	2 1 1 1 1 1 1 1 1 1 1 1 1 1
er En	P-12940		Seal Kit	1

*Included in P-12940 Seal Kit.

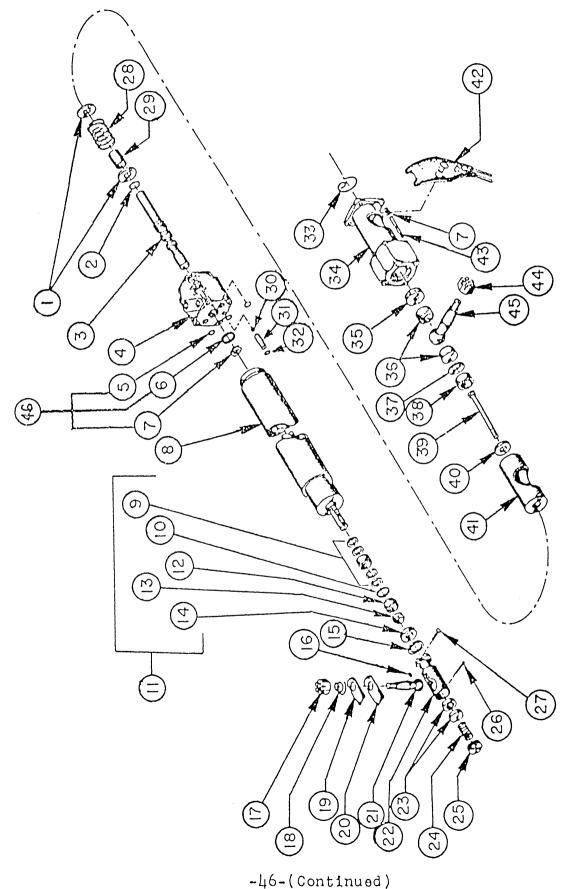

LULL ENGINEERING COMPANY, INC. 3045 HIGHWAY 13


STEERING BOOSTER ASSEMBLY NO. P-11126

3045 HIGHWAY 13, ST. PAUL 11, MINNESOTA 55111

HTEM NO.	PART NO.	DESCRIP
$ \begin{array}{c} 1.\\ 2.\\ 3.\\ 4.\\ 5.\\ 6.\\ 7.\\ 8.\\ 9.\\ 10.\\ 11.\\ 12.\\ 13.\\ 14.\\ 15.\\ 16.\\ 17.\\ 18.\\ 19.\\ 20.\\ 21.\\ 22.\\ 23.\\ 24.\\ 25.\\ 26.\\ 27.\\ 28.\\ 29.\\ 30.\\ 31.\\ 32.\\ 33.\\ 34.\\ 35.\\ 36.\\ 37.\\ 38.\\ 39.\\ 40.\\ 41.\\ 42.\\ 43.\\ 44.\\ 45.\\ 46.\\ \end{array} $	P - 12224 P - 12225 P - 12227 P - 12228 P - 12230 P - 12231 P - 12232 P - 12232 P - 12233 P - 12234 P - 12235 P - 12237 P - 12237 P - 12238 P - 12239 P - 12241 P - 12242 P - 12244 P - 12244 P - 12245 P - 12244 P - 12245 P - 12245 P - 12245 P - 12245 P - 12250 P - 12251 P - 12252 P - 12253 P - 12255 P - 12255 P - 12255 P - 12255 P - 12255 P - 12255 P - 12257 P - 12252 P - 12263 P -	Washer O-Ring Valve S Body Su O-Ring Nut Cylinde Seal Washer Gasket Retaine Wiper R Scraper Snap Ri Nut Spring Shield Dust Co Ball St Housing Eall St Spring Plug Cotter Screw Spring Spacer Ball Valve O-Ring Spacer Ball Valve O-Ring Spacer Spring Spacer Spring Spacer Screw Washer Sleeve Dust Co Stud, 4 Nut Ball St Kit

DESCRIPTION

Spool ub Assembly , 3 Req'd. er Sub Assembly Kit er Ring n ing over tud g tud Seat Pin ng Housing over 4 Req'd. tud

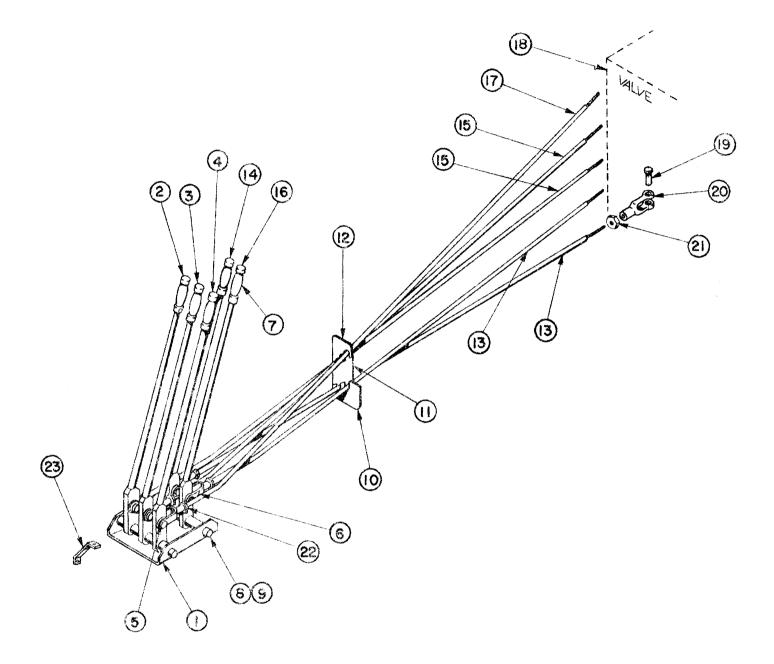


VALVE CONTROL ASS'Y. 11263

VALVE CONTROL ASSEMBLY NO. 11,263

ITEM	PART	DESCRIPTION	RE'Q.
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 20 21 23	11,127 11,255 11,217 11,218 P-10514 P-10333 P-10012 8785 8786 11,029 10,923 10,923 10,922 11,304 11,223 11,254 11,224 10,950 P-10040 P-10193 COM'L 11,030	Valve Handle Bracket Valve Control Handle Valve Control Handle Clevis Pin Clevis Rubber Handle Grip Pivot Shaft Spacer Valve Rod Stablizer Center Top Valve Control Rod Valve Control Handle Valve Control Handle Valve Control Rod Valve Control Rod Valve Ass'y (Page 52) Clevis Pin Clevis Jam Nut 3/8-24 NF Jam Nut 1/2-20 NF Support	1 - 1 - 1 N N N N - 1 - 1 - N N H N - 1 - 1 - N N N N N - 1

VALVE CONTROL ASSEMBLY 7C2-31' HIGH-LIFT NO. 11,262

ITEM	PART	ASSEMBLY	DESCRIPTION	NO.
NO.	NO.	NO.		REQ.
1 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 8 9 0 11 2 3 4 5 8 9 0 11 2 3 4 5 8 9 0 11 2 3 4 5 8 9 0 11 2 3 4 5 1 1 2 3 1 2 3 1 1 2 3 1 1 2 3 1 1 2 3 1 1 2 3 1 1 2 1 2	<pre>11,127 11,255 11,217 11,218 P-10514 P-10333 P-10012 8785 8786 11,029 10,923 10,922 11,221 11,219 11,220 11,254 11,222 P-10040 P-10193 COM'L COM'L 11,030</pre>	10,950	Valve Handle Bracket Valve Control Handle Valve Control Handle Clevis Pin Clevis Rubber Handle Grip Pivot Shaft Spacer Valve Rod Stablizer Center Top Valve Control Rod Valve Control Handle Valve Control Handle Valve Control Handle Valve Control Rod Valve Control Rod Valve Control Rod Valve Control Rod Valve Control Rod Valve Control Rod Valve Si y (Page 52) Clevis Pin Clevis Jam Nut 3/8-24 NF Jam Nut 1/2-20 NF Bracket Support	1111555211121212115555

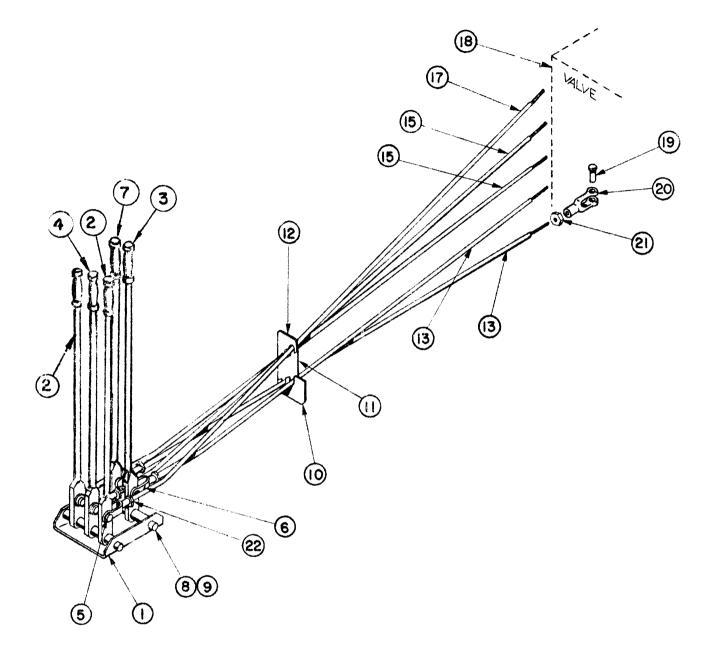


VALVE CONTROL ASS'Y. 13142

-50-

VALVE CONTROL ASSEMBLY NO. 13,142


ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1 2 3	11,127 8726 8727		Valve Handle Bracket Valve Control Handle Valve Control Handle	1 1 1
4 5	8728 P-10514		Valve Control Handle Clevis Pin	1 5
2 3 4 5 6 7 8 9	P-10333 P-10012 8785		Clevis Rubber Handle Grip Pivot Shaft	5 5 5 2
10	8786 11,029		Spacer Valve Rod Stablizer	2 1 1
11 12 13	10,923 10,922 11,304		Center Top Valve Control Rod	1 1 2
14 15	11,223		Valve Control Rod	2
16 17 18	11,224	10,950	Valve Control Rod Valve Assembly (Page 52)	1
19 20 21 22	P-10040 P-10193 COM'L COM'L	,	Clevis Pin Clevis Jam Nut, 3/8-24 NF Jam Nut, 1/2-20 NF	1 5 5 5 5

VALVE CONTROL ASSEMBLY NO. 13,480

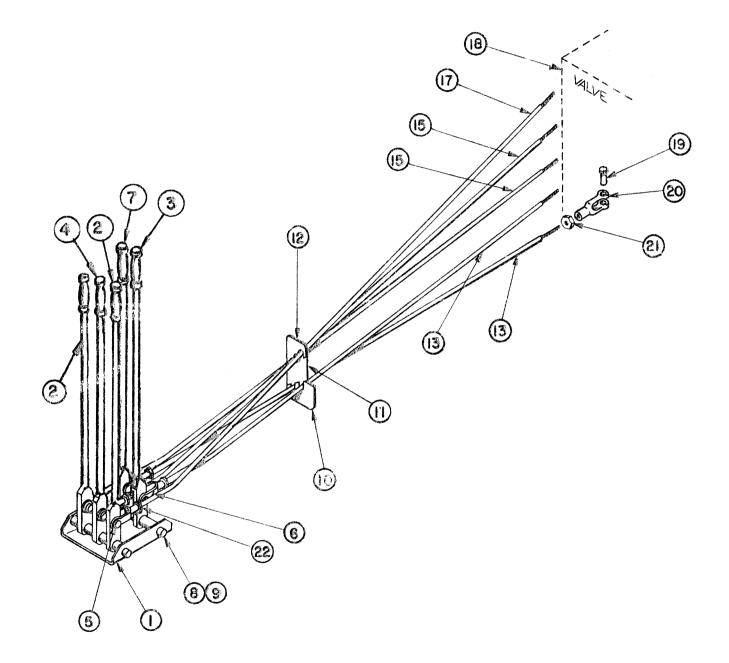

7C2-40'

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1 2 3 4 5 6 7 8 9	8784		Valve Handle Bracket	1
2	8726		Valve Control Handle	1
3	8727		Valve Control Handle	1
4	8728		Valve Control Handle	1
5	P-10514		Clevis Pin	5
6	P-10333		Clevis	5
7	P-10012		Rubber Handle Grip	5 5 5 2
8	8785		Pivot Shaft	2
9	8786		Spacer	1
10	11,029		Valve Rod Stablizer	1
11	10,923		Center	1
12	10,922		Тор	1
13	11,304		Valve Control Rod	2
14				
13 14 15 16	11,223		Valve Control Rod	2
16				
17	11,224		Valve Control Rod	1
18		10,950	Valve Assembly (Page 52)	1
19	P-10040	·	Clevis Pin	5
20	P-10193		Clevis	5
21	COM'L		Jam Nut, 3/8-24 NF	5 5 5
22	COM'L		Jam Nut, 1/2-20 NF	5

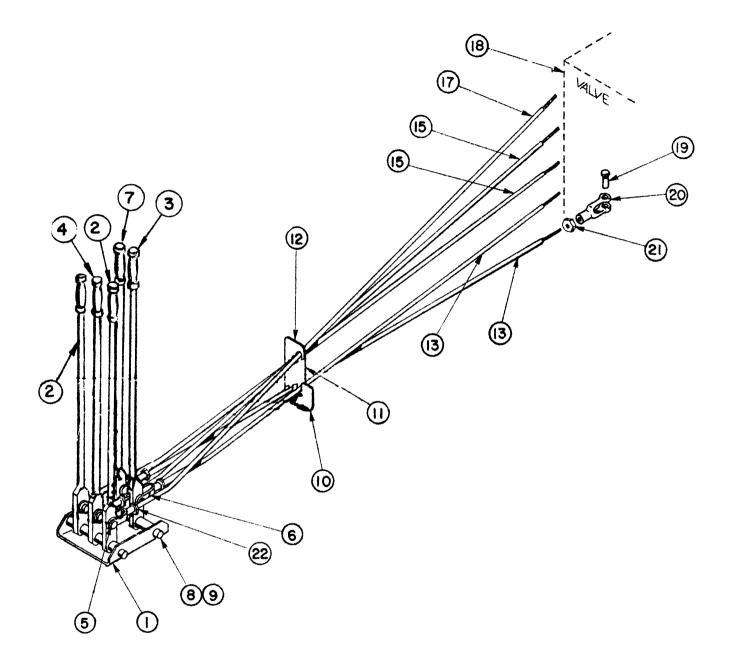


VALVE CONTROL ASS'Y. 13187

S/N 2467 and UP


ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
T	11,127		Valve Handle Bracket	1
2	8726		Valve Control Handle	1
3	8727		Valve Control Handle	1
4	8728		Valve Control Handle	1
5	P-10514		Clevis Pin	5
6	P-10333		Clevis	5
1 2 3 4 5 6 7 8 9	P-10012		Rubber Handle Grip	5 5 2
8	8785		Pivot Shaft	2
9	8786		Spacer	1
10	11,029		Valve Rod Stablizer	1
11	10,923		Center	1
12	10,922		Тор	1
13	11,221		Valve Control Rod	2
14				
15	11,220		Valve Control Rod	2
16				
17	11,222		Valve Control Rod	1
18		10,950	Valve Assembly (Page 52)	1
19	P-10040		Clevis Pin	5
20	P-10193		Clevis	5
21	COM'L		Jam Nut, 3/8-24 NF	5 5 5 5
22	COM'L		Jam Nut, 1/2-20 NF	5

VALVE CONTROL ASSEMBLY NO. 13,479

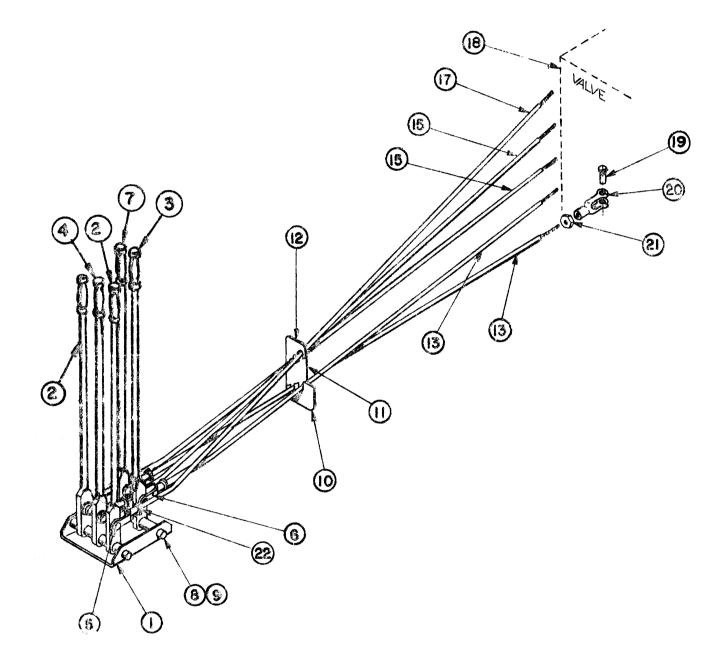


702-31'

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1	8784		Valve Handle Bracket	I
2	8726		Valve Control Handle	1
3	8727		Valve Control Handle	1
4	8728		Valve Control Handle	1
5	P-10514		Clevis Pin	5
Ğ	P-10333		Clevis	5
2 3 4 5 6 7 8 9	P-10012		Rubber Handle Grip	5 5 5 2
8	8785		Pivot Shaft	2
ğ	8786		Spacer	1
10	11,029		Valve Rod Stablizer	1
11	10,923		Center	1
12	10,922		Тор	1
13	11,221		Valve Control Rod	2
14	,			
15	11,220		Valve Control Rod	2
16	,==-			
17	11,222		Valve Control Rod	1
18	,	10,950	Valve Assembly (Page 52)	1
19	P-10040		Clevis Pin	5
20	P-10193		Clevis	5 5 5 5
21	COM'L		Jam Nut, 3/8-24 N.F.	5
22	COM'L		Jam Nut, 1/2-20 N.F.	5

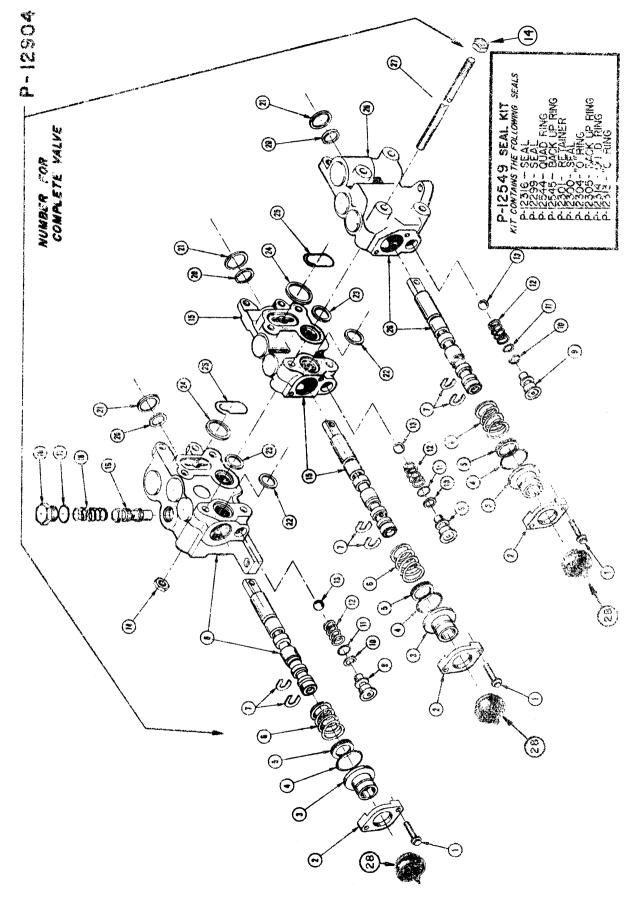


VALVE ASSEMBLY NO. 10,950

ITEM	PART	DESCRIPTION	RE'Q.
12345678901234567890123456728 ************************************	P-12314 P-12315 P-12309 P-12546 P-12306 P-12305	Screw Retainer Sleeve O-Ring Guad Ring Spring D-Washer Section & Speel Plug Back Up Ring O-Ring Ball Nut Section & Speel Plug O-Ring Spring Spring Spring Section & Speel Guad Ring Back Up Hing Seal Seal Seal Seal Seal Seal Seal Sud Dust Cover	2.พพพพญาพพพพษเซ ตาาาาาพทรรรรรรรร

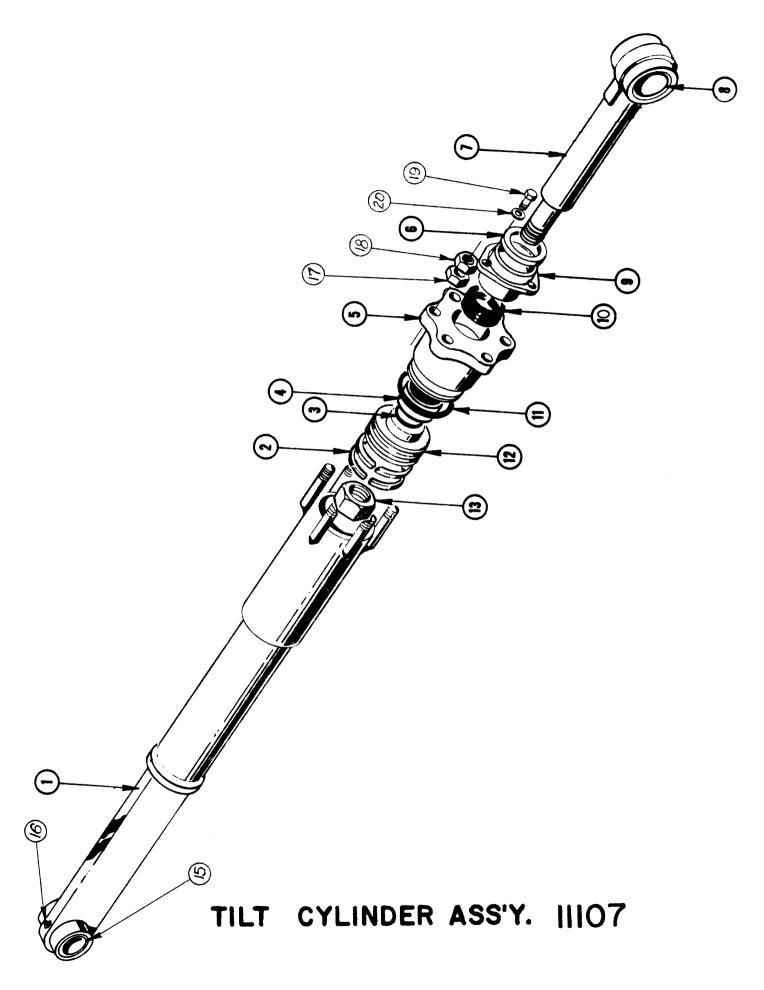




REF.	PART NO.	DESCRIPTION	REQ.
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	11,104 P-15312 P-11576 N-10246 U-110 P-10307 8774 7313 U-107 P-10304 P-10317 9221 215 COM'L 2727 COM'L COM'L COM'L COM'L COM'L COM'L	TILT CYLINDER ASSEMBLY - 7C2-31' NO. 11,107 Tube Weldment Ring Assembly O-Ring Spacer Head Klozures Piston Rod Bushing Gland V-Packing O-Ring Piston Special Nut Setscrew, 1/4-20 N.C. x 3/8 Cup Point Bushing Zerk Fitting, 1/8" N.P.T. Hex Nut, 1/2-20 N.F. Jam Capscrew, 3/8-16 N.C. x 1" Hex Washer, Shakeproof 3/8	

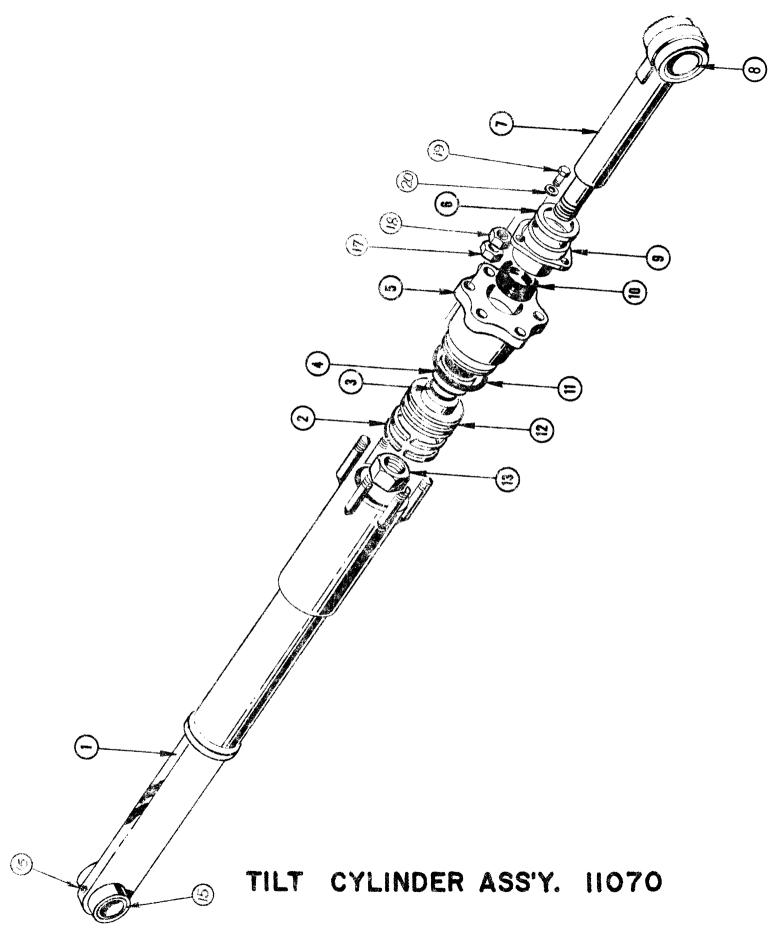




REF.	PART NO.	DESCRIPTION	REQ.
$ \begin{array}{c} 1 \\ 2 \\ 3 \\ 4 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 10 \\ 11 \\ 12 \\ 13 \\ 14 \\ 15 \\ 16 \\ 17 \\ 18 \\ 19 \\ 20 \\ \end{array} $	11,187 P-11286 P-11576 N-10322 548 P-10504 1138 7313 553 P-10503 P-11576 9550 215 COM'L 2727 COM'L COM'L COM'L COM'L COM'L	TILT CYLINDER ASS'Y - 7C2-40' NO. 11,070 Tube Weldment Piston Ring Assembly O-Ring Spacer Cylinder Head Wiper Piston Rod Weldment Bushing Gland V-Packing O-Ring Piston Special Nut Setscrew, 1/4"-20 NC x 3/8 Cup Point Bushing Zerk Fitting, 1/8 N.P.T. Nut, Hex 1/2-20 N.F. Capscrew, 3/8"-16 N.C. x 1" Long Washer, Shakeproof 3/8"	7 2 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7

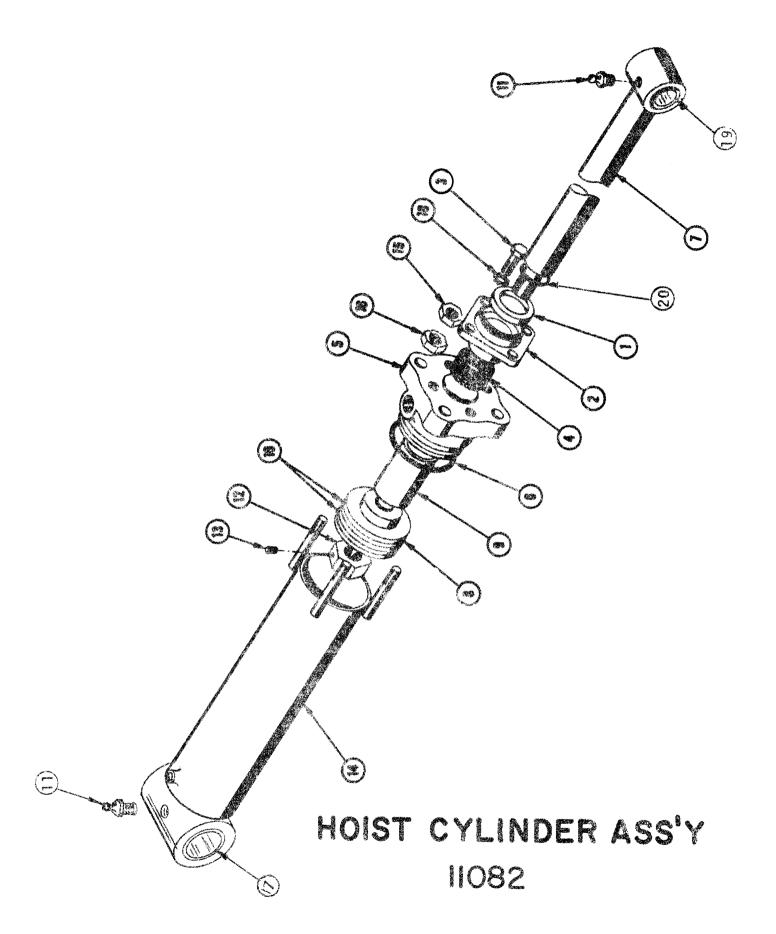




REF	PART NO.	DESCRIPTION	REQ.
	P-10504 521 COM'L P-10503 1033 P-10317 11,083 549 N-10324 P-11347 COM'L 222 COM'L 11,084 COM'L COM'L 4873 COM'L 3304 P-13191	HOIST CYLINDER ASSEMBLY 7C2-31' NO. 11,082 Klozure Gland Capscrew, 5/16 N.C. x 1 1/2" Long V-Packing Head O-Ring Piston Rod Piston Spacer Ring Assembly Zerk Fitting Nut, Special Setscrew, 1/4-20 N.C. x '3/8 Cup Point Cylinder Tube Weldmant Nut, Jam 1/2 N.F. Bushing Washer, Shakeproof 5/16 Bushing O-Ring	774777722777447477

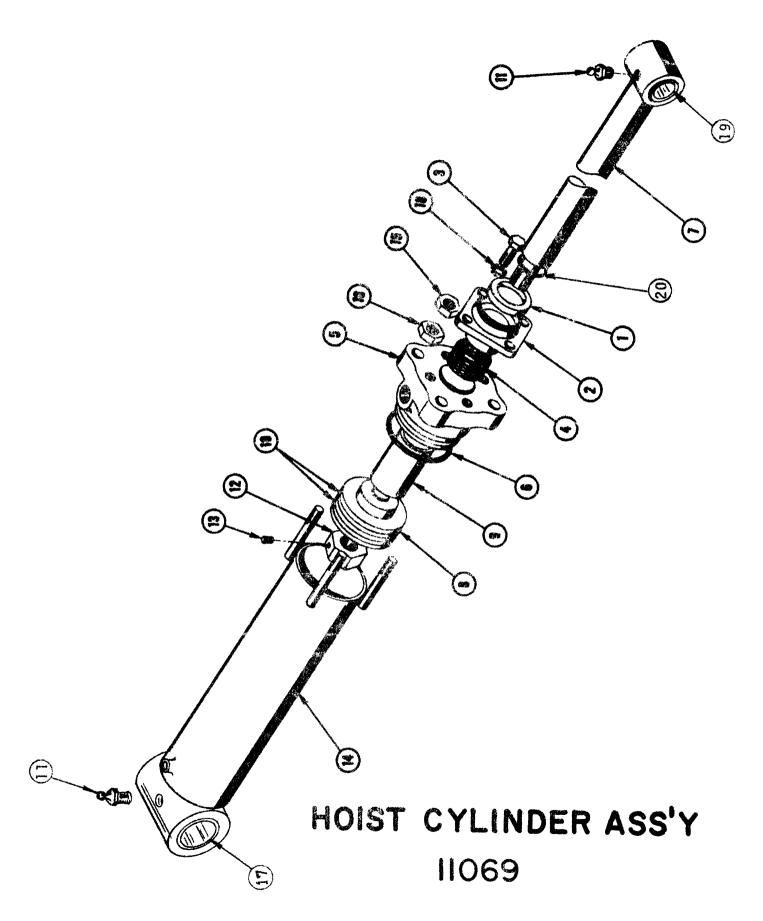




1 P-10504 Klozure 1 2 521 Gland 1 3 COM'L Capscrew, 5/16 N.F. x 1 1/2 4 4 P-10503 V-Packing 1 5 1033 Head 1 6 P-10317 O-Ring 1 7 11,184 Piston Rod 1 8 549 Piston Rod 1 9 N-10323 Spacer 1 10 P-11347 Ring Assembly 2 11 COM'L Zerk Fitting, 1/8 N.F.T. 2 12 222 Nut, Special 1 3 COM'L Nut, Jam 1/2 N.F. 4 13 COM'L Nut, Hex 1/2 N.F. 4 14 11.185 Cylinder Tube Weldment 4 15 COM'L Nut, Hex 1/2 N.F. 4 16 COM'L Nut, Hex 1/2 N.F. 4 17 304 Bushing 1 20 P-13191 O-Ring 1

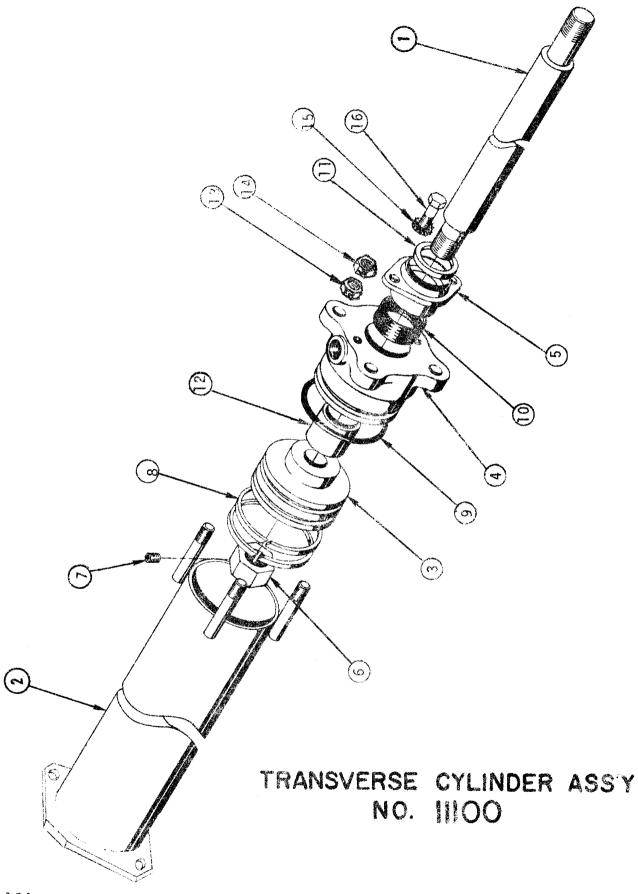


ITEM NO.	PART ASSEMBLY NO. NO.	DESCRIPTION	NO. REQ.
1	11,099	Piston Rod	1
2 3 4 5	11,098 551	Cylinder Tube Weldment Piston	1
4	1028	Head	1
5	1032	Gland	1
6 7	222 COM'L	Nut, Special Sotcompy 1/4" NC x 2/8" Cup Pt	1
8 9	P-11346	Setscrew, 1/4" NC x 3/8" Cup Pt. Ring Assembly	2
	P-10314	0-Ring	ī
10	P-10306	V-Packing	1
11 12	P-10308 N-10230	Klozure, Wiper Spacer	1
13	COM'L	Nut, Full 1/2 NF	4
14	COMIL	Nut, Jam 1/2 NF	4
15 16	COM'L COM'L	Washer, Shakeproof 3/8	2
10		Capscrew, 3/8 NC x 1" Long	2

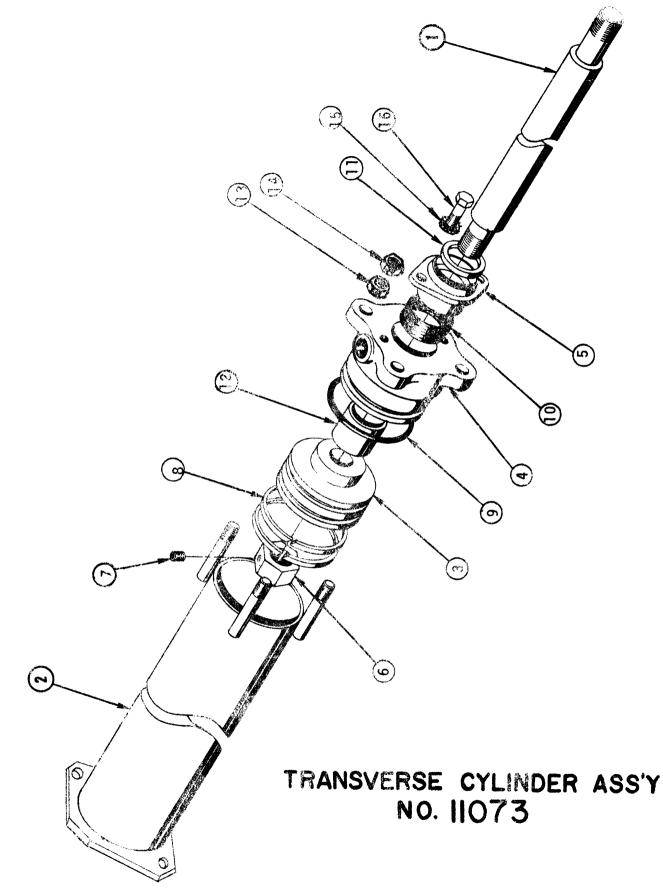

TRANSVERSE CYLINDER ASS'Y NO. 11,073

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. PEQ.
1 3 4 5 6 7 8 9 10 11 2 3 4 5 6 7 8 9 10 11 2 3 4 5 6 7 8 9 10 11 2 3 4 5 6 7 8 9 10 11 2 3 4 5 6 7 8 9 10 11 15 16 16 16 16 16 16 16 16 16 16 16 16 16	11,074 11,075 551 1028 1032 222 COM'L P-11346 P-10314 P-10306 P-10306 N-10151 COM'L COM'L COM'L COM'L	4 5 3	Piston Rod Cylinder Tube Weldment Piston Head Gland Nut, Special Setscrew, 1/4" NC x 3/8 Cup Pt. Ring Assembly O-Ring V-Packing Klozure, Wiper Spacer Nut, Full 1/2 NF Nut, Jam 1/2 NF Nut, Jam 1/2 NF Washer, Shakeproof 3/8 Capscrew, 3/8 NC x 1" Long]]]]]]]]]]]]]]]]]]]

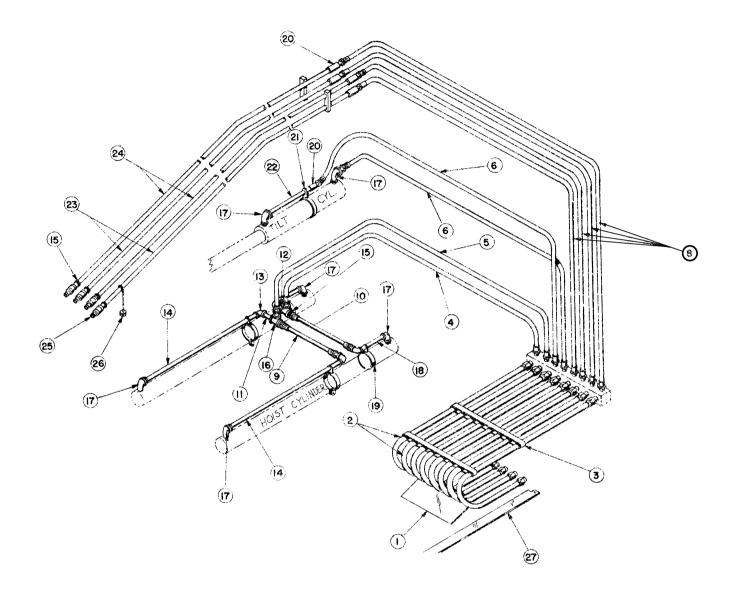


HYDRAULIC SYSTEM ASSIY. (JUNCTION BLOCK TO LIFT ARM)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ.
1 2 3 4 5 6 7 8 9 0 1 1 2 2 3 4 5 6 7 8 9 0 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	P-11538 P-11299 1149 P-11505 P-10292 P-10292 P-12969 P-11319 P-11541 P-103884 P-10225 N-10272 P-10120 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10107 P-10153 N-10152 P-11354 P-13516 11,155 6611 15109 14119	Hose Hose Hose Strap Hose Hose Hose Fitting Hose Hose Hose Hose Nipple Nipple Elbow Pipe, 3/8 x 46" Reducing Bushing Tee Street Ell Pipe Cylinder Pipe Clamp Coupling Cylinder Pipe Clamp Pipe, 3/8 X Str. x 11" Pipe, 3/8 X Str. x 16 Ft. 3 Inches Pipe, 3/8 X Str. x 16 Ft. 4 Inches Coupling, Female Dust Cap Hose Support Clamp Restrictor 3/32" Junction Block Assy	622112241111528242451122441611
JU	14173	OUNCETON BIOCK ASSY	I

REVISION	E.C.O. NO.
"A"	1105

-61-

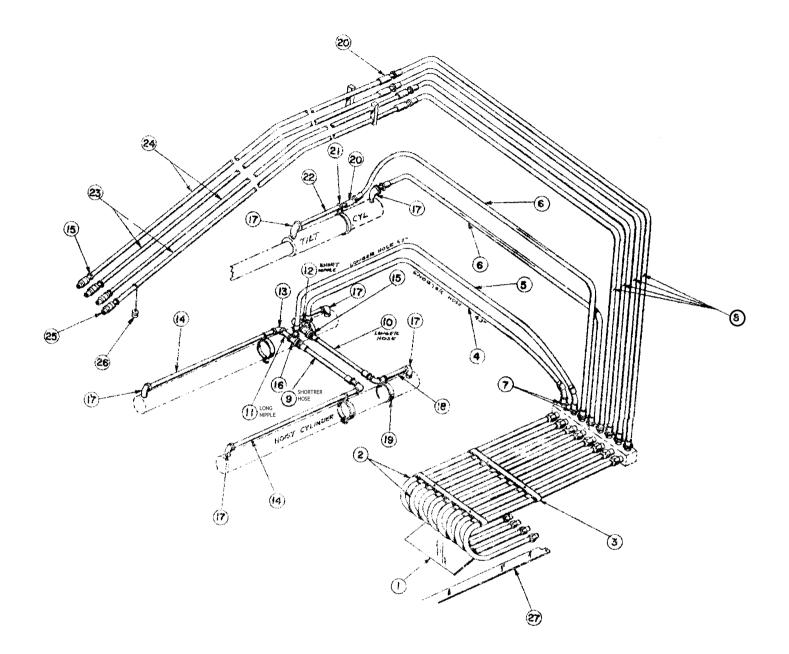


HYDRAULIC SYSTEM ASS'Y. (JUNCTION BLOCK TO) (LIFT ARM)

NO. 11,312

HYDRAULIC SYSTEM NO. 11,312

ITEM	PART	DESCRIPTION	RE'Q.
1 2 3 4 5 6 7 8 9 10 11 12 13 14 5 6 7 8 9 10 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 11 12 13 14 5 6 7 8 9 0 21 22 24 22 24 22 22 22 24 22 2 2 2 2 2	P-11538 P-11299 1149 P-11639 P-11640 P-10499 P-11541 P-11308 P-10794 P-10884 P-10274 P-10120 P-11642 P-10117 N-10182 563 P-10258 P-10258 P-10258 P-10258 P-10259 11,155	Hose Hose Strap Hose Hose Hose Hose Hose Nipple Elbow Pipe, 3/8 x 58" Reducing Bushing Tee Street Ell Pipe, 3/8 X Strong x 10" Cylinder Pipe Clamp Coupling Cylinder Pipe Clamp Pipe 3/8 X Strong x 13" Pipe 3/8 X Strong x 20' 1" Coupling Dust Cap Hose Support	622112 4111152824251122441

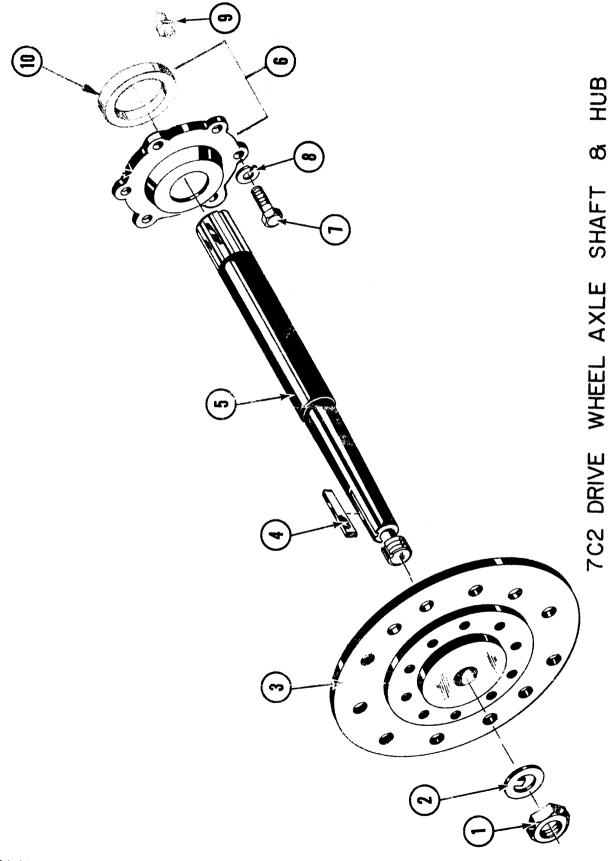





7C2 DRIVE WHEEL AXLE SHAFT AND WHEEL HUB. 1 1 IK711 Nut 2 IK1449 Lockwasher 1 3 IS5-200A Wheel 1 4 IF1451 Key 1 5 I66-418A Axle Shaft 1 6 IKS701A Cap 6 7 908333 Capscrew 6 8 920-083 Lockwasher 6 9 939017 Grease Fitting 1 10 K1443 0il Seal 1

LULL ENGINEERING CO. INC. 3045 HIGHWAY 13, ST. PAUL, MINN. 55111

7C2 WHEEL RIMS

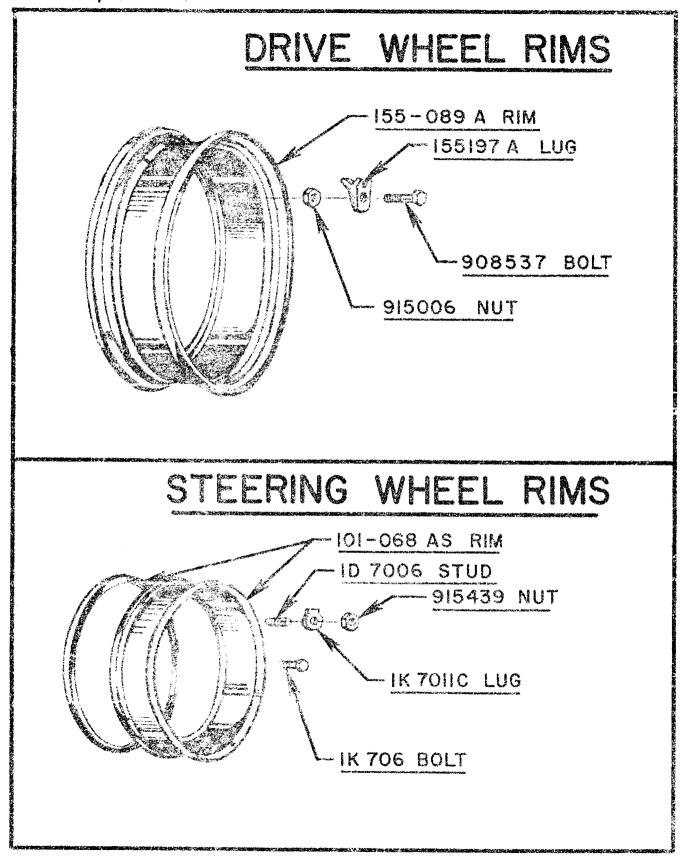


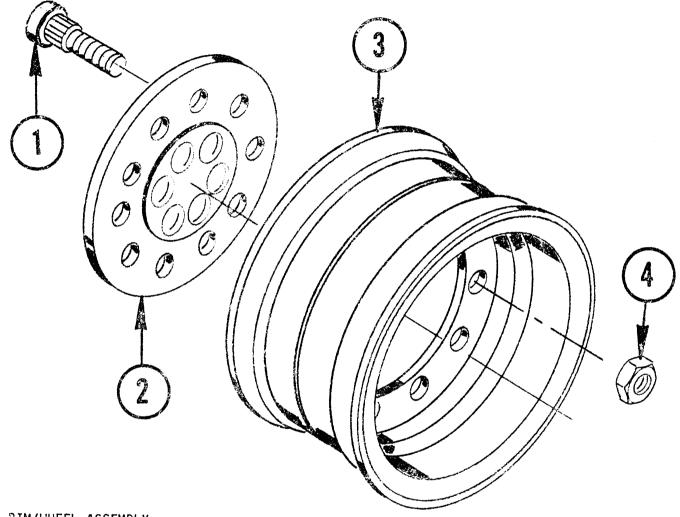


RIM/WHEEL ASSEMBLY (HIGH-FLOTATION TIRE) NO. 11,564

ITEM NO.	PART A	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1	155306-A		Stud	10
2	167256-A		Wheel Center	1
3	164308-A		High-Flotation Rim	1
4	155307-A		Nut	10

NO. 7597

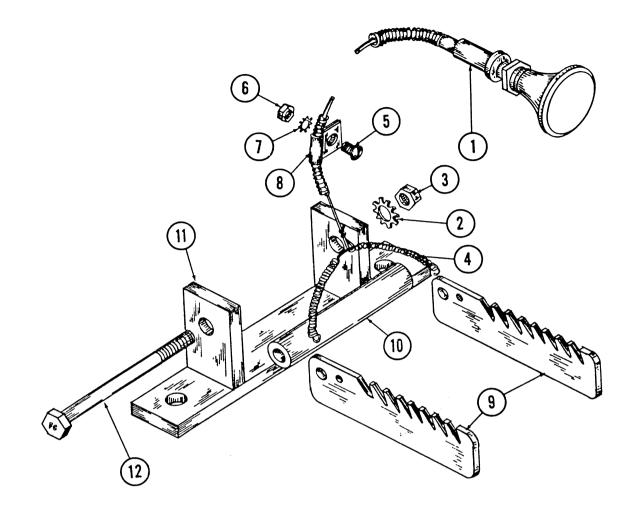

ITEM	PART	ASSEMBLY	DESCRIPTION OF PART	NO.
NO.	NO.	<u>NO.</u>		REQ.
1	P10007	S	Control Cable	
2	Coml.	H	Shakeproof Washer 5/16"	
3	Coml.	S	Hex. Jam Nut 5/16"-18 NC	
4	P10008	S	Spring	
5	Coml.	H	Screw 10-24 NC x 1/2" Lg.	
6	Coml.	I	Hex. Nut 10-24 NC	
7	Coml.	C	Lock Washer 3/16"	
8	P10009	F	Clamp, Cable	
9	7152	F	Brake Pedal Stop	
10	7395	F	Pipe Spacer	
11	7396	F	Brake Lock Bracket	
12	Coml.	H	lex. Cap Screw 5/16"-18 NC x 3-3/4"	1

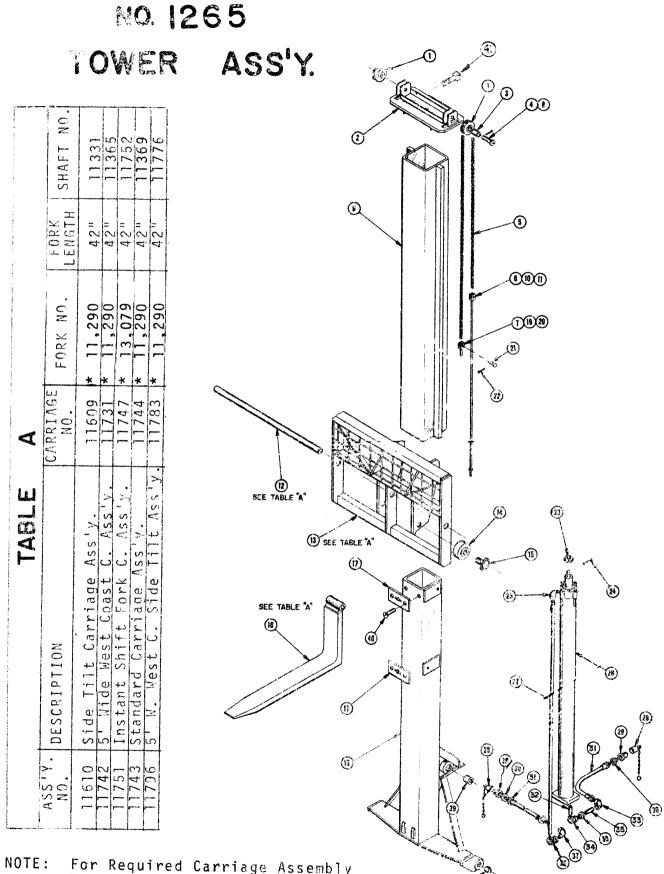


NOTE: For Required Carriage Assembly Used With This Tower Assembly Refer to Table "A" Tabulation.

(3e)⁻


TELESCOPIC TOWER ASS'Y NO. 1265

ITEM	<pre>◇ART</pre>	ASSEMBLY	DESCRIPTION	NO.
NO.	NO.	NO.		<u>REQ.</u>
1234567890123456789012345678901234567890123456789012345678901234567890123456789012345678901	7203 6878 7214 7075 P-11661 1116 7203-63 COM'L 6875 COM'L COM'L See Table 5ee Table 6865 6911 See Table COM'L COM'L COM'L COM'L COM'L COM'L COM'L P-17361 P-12982 P-10325 P-10325 P-10325 P-10325 P-10395 P-10227 P-10885 P-10227 P-10885 P-10225 P-10227 P-10885 P-10225 P-10227 P-10885 P-10225 P-10227 P-10885 P-10227 P-10877 P-10227 P-10885 P-10227 P-10877 P-10227 P-10877 P-1077 P-10777 P-10777 P-107777 P-10777777777777777777777777777777777777	"A"	Chain Pulley Chain Pulley Bracket Bushing Pin Chain Chain Link Chain Anchor Cotter Pin 3/16" Dia. x 1 3/4" long Yoke Weldment Washer, Starlock 1/2 Hex Nut 1/2 N.F. Shaft Carriage Roller Spindle Upright Frame Bronze Wear Plate Fork Hex Nut 5/8 N.F. Washer, Starlock 5/8 Anchor Pin Cotter Pin 1/16 Dia. x 3/4" Finished Hex Castle Nut 1" N.F. Cotter Pin 1/8 Dia. x 2" Long Street El1 Cylinder Assembly (Page 68) Pipe Dust Cap Coupling (Male) Reducing Bushing Hose Nipple Elbow Eibow Bushing Bushing Slotted Flathead Capscrew 1/2 NC x 1 Capscrew	2122222212411421424242111112232171112284

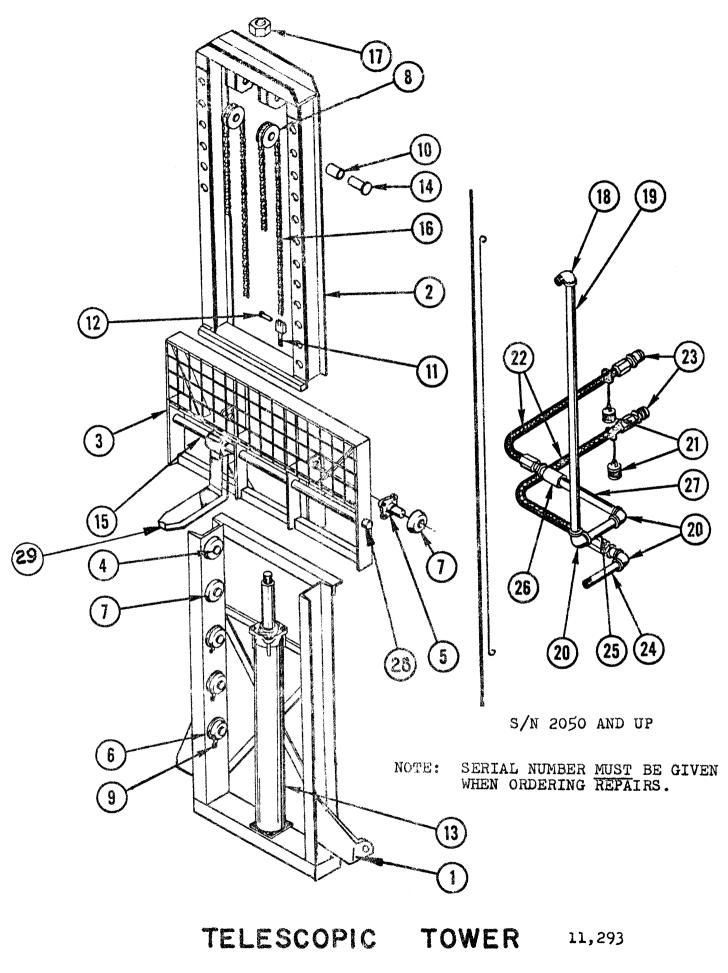


TELESCOPIC TOWER ASSEMBLY NO. 11,293 S/N 2050 & UP

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1	11,056		Upright Frame	1
2 3	7833		Yoke	1
3	1479		Special Wide West Coast Carriage	1
	11,367		Carriage, Side Tilt	1
4	7618		Frame, Spindle	10
4 5 6 7	11,387		Carriage, Spindle	4
6	7033		Flange, Roller	8
7	7034		Plain Roller	8
8	7203		Chain Pulley	2
8 9	7151		Roller Clip	8
10	7214		Bushing	2
11	7207		Chain Ănchor	4
12	7078		Chain Anchor Pin	8 2 8 2 4 4 1
13	8336		Cylinder Assembly (Page 68)	1
14	7075		Chain Pulley Pin	2
15	11,363		Fork Tine Shaft	1
16	P-11649		Chain	2
1.7	222		Special Nut	1
18	P-10111		Street Ell	1
19	N-10045		Pipe	1
20	P-10227		Elbow	3
21	P-10325		Dust Cap	3 2 2 2
22	P-10395		Hose	2
23	P-10324		Male Tip	2
24	P-10283		Nipple	1
25	P-10282		Nipple	1
26	P-10260		Coupling	1
27	P-10394		Nipple	1
28	COM'L		Cotter Pin, 3/8 Dia. x 2 1/2"	2 2
29	13,279		Forks	2

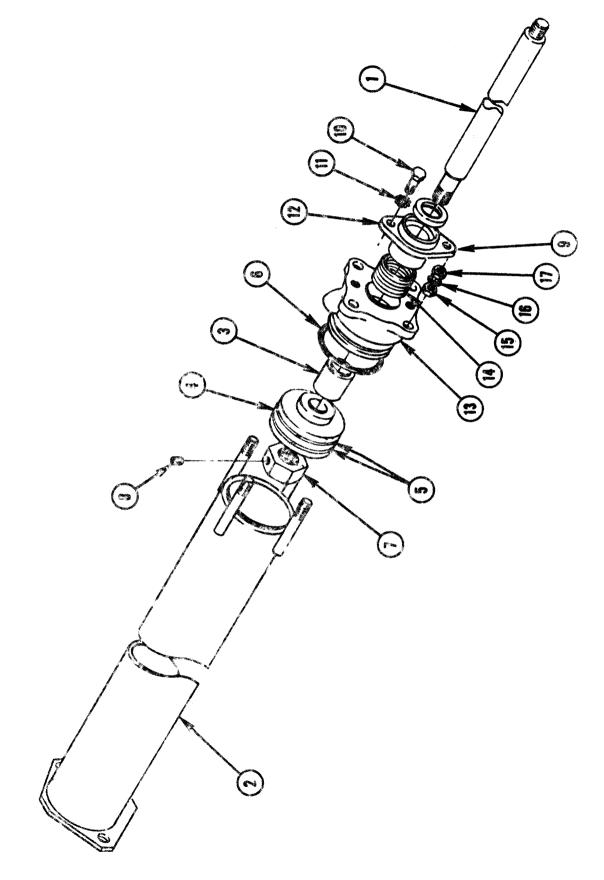


LULL ENGINEERING COMPANY, INC. 3 1/2" ID CYLINDER ASS'Y. 3045 HIGHWAY 13 ST PAUL, MINNESOTA 55111

ITEM	PART	DESCRIPTION	NO.
NO.	NO.		REQ.
1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 8 9 0 1 1 2 3 1 1 2 3 1 1 2 3 1 1 2 3 1 1 1 2 3 1 1 1 2 3 1 1 1 1	6963 6961 N-10204 550 P-11292 P-10315 222 COML. P-10303 COML. COML. 1023 1034 P-10305 COML. COML. COML. COML.	Piston Rod Cylinder Tube Spacer Piston Piston Ring Assembly O-Ring Special Nut Setscrew, 1/4 NC x 3/8 Cup Pt. Klozure Capscrew, 3/8 NC x 1 Shakeproof Washer, 3/8" Gland Cylinder Head V-Packing Hex Nut, 7/16 NF Shakeproof Washer, 7/16" Jam Nut, 7/16 NF	1 1 1 1 1 1 2 1 1 1 2 1 1 1 4 4

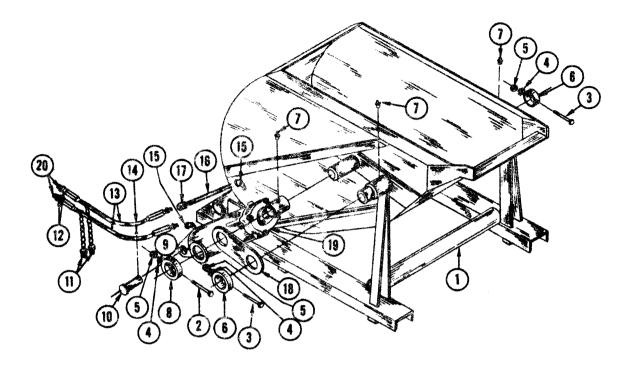


ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1	4080		Concrete Bucket & Frame Ass'y	1
2	COM'L		Capscrew, 1/4-20 NC x 2 Hex	1
3	COM'L		Capscrew, 1/4-20 NC x 2 1/4 Hex	2
4	COM'L		Washer, Shakeproof 1/4	3
2 3 4 5 6 7 8 9	COM'L		Nut, Hex 1/4-20 NC	3
6	7451		Collar, Bracket	2
7	COM'L		Zerk Fitting 1/8 Str.	3
8	7450		Collar	1
9	COM'L		Washer, 1" I.D.	As Req.
10	7452		Pin, Lower Pivot	1
11	P-10325		Dust Cap, Male Tip	2
12	P-10120		Reducing Bushing	2
13	P-10327		Hose	2
14	COM'L		Cotterpin, $5/32 \times 1 1/2$	1
15	P-10117		Street Elbow	2
16	N-10321		Pipe	1
17	P-10328		Coupling	1
18	7449		Link, Cylinder Pivot	1
19		5980	Cylinder Assembly (Page 88)	1
20	P-11353		Male Tip-Quick Coupler	2

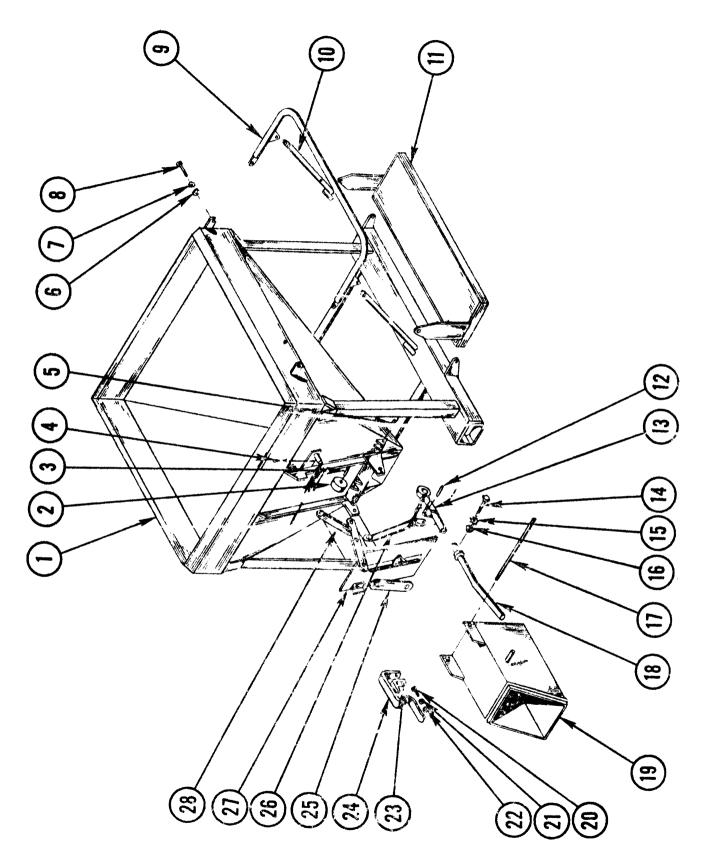

CONCRETE HOPPER ASSEMBLY NO. 4100 MODEL 8-A


ITEM	PART	ASSEMBLY	DESCRIPTION	NO.
NO.	NO.	NO.		REQ.
12345670901123456789012222245678	4099 7634 7651 00M'L 00M'L 00M'L 00M'L 00M'L 00M'L 00M'L 00M'L 00M'L 00M'L 00M'L 00M'L 00M'L 00M'L 7639 7663 7663 76631 76510 7664 7665		Hopper Dosr Roller Pivot Pin Cotter Pin, 3/10 x 1 1/4 Pivot Pin, Lower Nut, 3/8-16 NC Hex Shakeproof Washer, 3/8 Capscrew, 3/8-16 NC x 1 Hex Hd Hand Rail Support Bar Platform Pivot Pin Lower Handle Capscrew, 1/4-20 NC x 1 3/4 Hex Hd Shakeproof Washer, 1/4 Nut, 1/4-20 NC Hex Pivot Pin, Chute Handle Chute Capscrew, 1/4-20 NC x 3/4 Hex Hd. Shakeproof Washer 1/4 Nut 1/4-20 NC Hex Stiffner, Spring Spring Catch Door Link Hand Lever Link Door Hand Lever	1112 1888121112211121111111111111111111

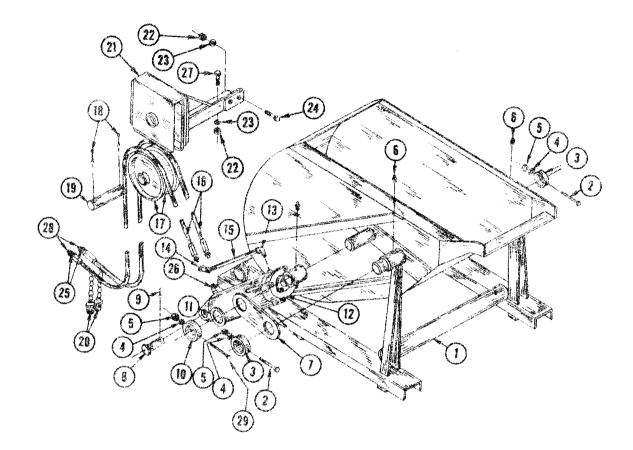

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. FIEG.
29. 24.	4080		Concrete Bucket & Frame	19. 20.
127456789	Coml		Capscrew, 1/4-20 NC x 2 1/4 Hex	2
3	7451		Gollar	C.
4	Coml		Washer, 1/4 Shakeproof	10 mmm
2-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1	Coml		Nut, 1/4-20 NC Hex	1
Ċ,	Coml		Zerk Fitting, 1/8 Straigh	
h	7449		Link, Cylinder Pivot	8 18 10
8	7452		Pin, Lower Pivot	2 8.
	Coml		Cotterpin, 5/32 x 1 1/2	
	7450		Collar	,
2.1	Coml	and an in the		Req ¹ d
12		5980	Cylinder Assembly (Page 88)	2
	210117		Street Elbow	
	P10206		ET DOM	3
15	NJ0351		211 10 10 10 10 10 10 10 10 10 10 10 10 1	i.
16	P10322	2	Losa	<u>.</u>
17	7473		Pulley	2
19	Coml		Cotterpin, 1/8 x 1 1/2	222
	7377	,	Pin. Hose Pulley	1
20	510355	\$	Dust, Cap-Male Tfp	2

CONCRETE BUCKET ASSEMBLY (TELESCOPIC TOWER) 7C2-31' NO. 4078

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ.
21	1130	Shield	1
22	COM'L	Nut, 5/16-18 NC Hex	4
23	COM'L	Lockwasher, 5/16	4
24	COM'L	Capscrew, 5/16-18 NC x 1 1/4 Hex	2
25	P-10120	Reducing Bushing	2
26	P-10119	Street Elbow	1
27	COM'L	Capscrew, 5/16 x 1 Hex Hd.	2
28	P-11353	Male Tip-Quick Coupler	2
29	COM'L	Capscrew, 1/4-20 NC x 2 Hex	1

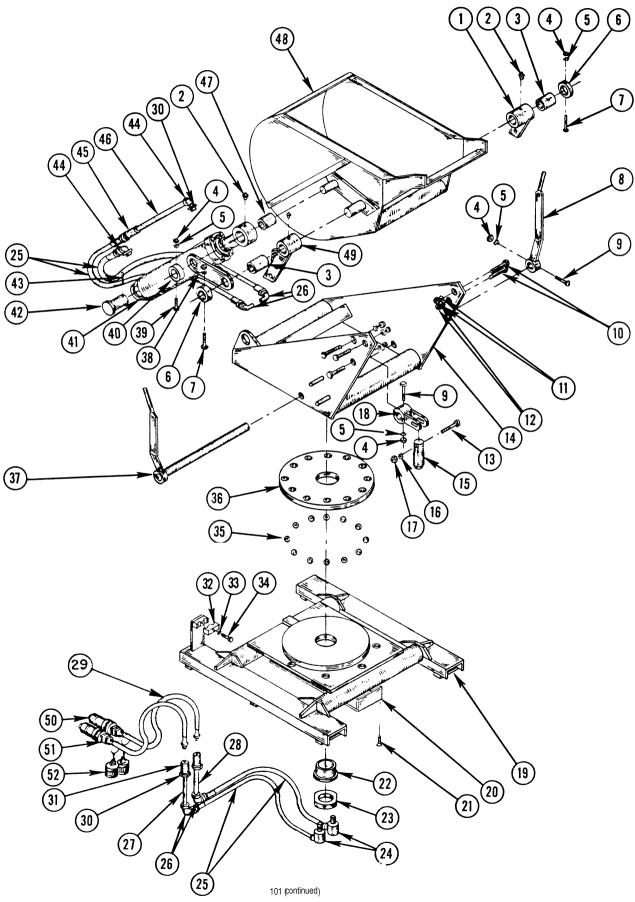


SWIVEL CONCREIE BUCKEI (LIFT ARM CARRIAGE) NO. 4071

ITEM	PART	DESCRIPTION	NO.
NO.	NO.		<u>REQ</u> .
1	7766 COM'L	Pivot Bracket Zerk Fitting, 1/8 Straight	1 4 2
2 3 4 5 6 7 8 9	7774 COM'L	Bushing Nut, 1/4-20 NC Hex	2 4 4
5	COM'L	Washer, Shakeproof 1/4	2
6	7451	Collar	
7	COM'L	Capscrew, 1/4-20 NC x 2 1/4 Hex	2
	7777	Lever	1
	COM'L	Capscrew, 1/4-20 NC x 1 3/4 Hex	2 5
10	COM'L	Capscrew, 1/2-13 NC x 1 1/2 Hex	5
11	COM'L	Washer, Shakeproof 1/2	
12	COM'L	Nut, 1/2-13 NČ Hex Jam	5
	COM'L	Capscrew, 5/16-18 x 2 Hex	1
13 14	7778	Upper Frame	1
15	7782	Lock Pin	1
16	COM'L	Nut, 5/16-18 NC Hex	
17	COM'L 7781	Nut, 5/16-18 Hex Jam Lock Pin Lever	1
18 19	4069	Base	1
20	7788	Hose Guard	4
21	COM'L	Capscrew, 3/8-16 NC x 3/4 Ft. Hd.	
22	7784	Bushing	1
23	7785	Nut, Special	
24	P-10150	Swivel	2 4
25	P-10155	Hose	4
26	P-10157	Elbow	
27	P-10781	Nipple	1
28	P-10780	Nipple	
29	P-10327	Hose	2 2 2
30	P-10691	Reducing Bushing	2
31	P-10328	Coupling	
32	7773-2 COM'L	Clamp Washer, Shakeproof 5/16]
33 34	COM'L	Capscrew, 5/16-18 NC x 1 1/4 Hex	1 12
35	P-11044	Ball	1
36	7783	Ball Retainer	
37	7 7 7 9	Lever	1
38	7 4 4 9	Link	
39	COM'L	Capscrew, 1/4-20 NC x 2 Hex	1
40	7450	Collar	1
41	5980	Cylinder Assembly (Page 88)	
42	7452	Pin	1
43	COM'L	Cotterpin, 5/32 x 2	
44	P-10157	Street Elbow	2
45	P-10423	Coupling	
46	N-10005	Pipe	
47	7610	Bushing	1 (Ref)
48	7763	Bucket	1
49	7775	Pivot Bracket	1 2
50 51	P-11353 P-10120	Male Tip-Quick Coupler Reducing Bushing	2 2 2
52	P-10325	Dust Cap (Male Tip)	2

LULL ENGINEERING COMPANY, INC. 3045 Highway 13 St. Paul 11, Minn. 55111


SWIVEL CONCRETE BUCKET TELFSCOPIC TOWER NO. 4070

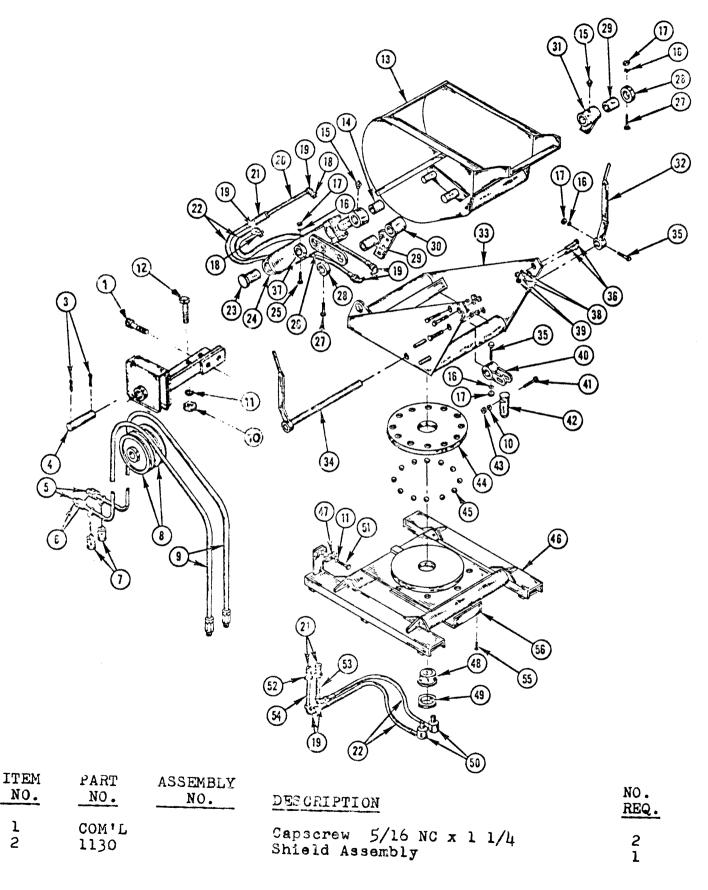

-102- (Continued)


SWIVEL CONCRETE BUCKET (TELESCOPIC TOWER) NO. 4070

ITEM NO. 3 4 5 6 7 8 9 10 11 23 4 5 6 7 8 9 10 11 23 4 5 6 7 8 9 10 11 23 4 5 6 7 8 9 10 11 23 4 5 6 7 8 9 10 11 23 4 5 6 7 8 9 10 11 22 22 22 22 22 22 22 22 22 22 22 22	PART NO. COM'L 7377 P-11353 P-10120 P-10325 7473 P-10322 COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L P-10691 P-10157 N-10005 P-10328 P-10155 7452 5980 COM'L 7451 7775 7776 7777 7778 7779 COM'L COM'L 7450 COM'L 7450 COM'L 7783 P-11044 4069 7773-2 7784 7785 P-10150 COM'L	DESCRIPTION Cotterpin, 1/8 x 1 1/2 Pin Male Tip Quick Coupler Reducing Bushing Dust Cap Male Tip Pulley Hose Nut, 5/16-18 N.C. Hex Lockwasher, 5/16 Capscrew, 5/16-18 NC x 1" Long Bucket Bushing Zerk Fitting Washer, Shakeproof 1/4 Nut, Hex 1/4-20 NC Reducing Bushing Street Elbow Pipe Coupling Hose Pin Cylinder Assembly (Page 28) Capscrew, 1/4-20 NC x 2 Hex Link Capscrew, 1/4-20 NC x 2 1/4 Hex Collar Bushing Pivot Bracket Pivot Bracket Pivot Bracket Hand Lever Upper Frame Hand Lever Upper Frame Hand Lever Upper Frame Hand Lever Capscrew, 1/2-13 NC x 1 1/2 Hex Collar Washer, 1/2 Shakeproof Nut, 1/2-13 NC Hex Jam Lock Pin Lever Capscrew, 5/16-18 NC x 2 Hex Lock Pin Nut, 5/16-18 NC Hex Jam Ball Retainer Ball, Steel Base Clamp Bushing Nut, Special Swivel Fitting Capscrew, 5/16-18 NC x 1 1/4 Hex	NCR21222222221 e3332241341111222211112251551111121121121
48 49 50	7784 7785 P-10150	Bushing Nut, Special	1 1 2

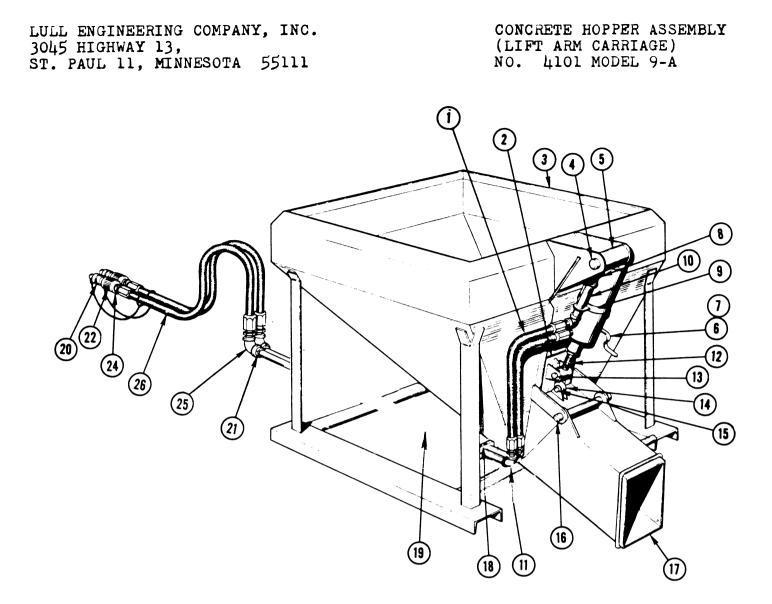

ITEM	PART	ASSEMBLY	DESCRIPTION	NO.
NO.	NO.	NO.		REQ.
1 2 3 4 5 6 7 8 9 10 11 12 13 14 5 6 7 8 9 10 11 12 13 14 5 6 7 8 9 10 11 12 13 14 5 6 7 8 9 10 11 2 3 4 5 6 7 8 9 10 11 2 3 4 5 6 7 8 9 10 11 2 3 14 5 6 7 8 9 10 11 2 3 14 5 6 7 8 9 10 11 2 3 14 5 6 7 8 9 10 11 2 3 14 5 6 7 8 9 10 11 2 3 14 5 6 7 8 9 10 11 2 3 14 5 6 7 8 9 10 11 2 3 14 5 6 7 8 9 10 11 2 3 14 5 6 7 8 9 10 11 2 3 14 5 6 7 8 9 10 11 2 3 14 5 6 7 8 9 10 11 2 3 14 5 15 14 11 2 3 14 5 15 14 15 14 11 2 3 14 5 15 14 11 2 3 14 15 10 11 12 13 14 5 16 11 12 10 11 12 13 14 5 16 11 12 12 11 2 15 16 11 12 11 12 13 14 15 16 17 11 12 11 12 13 14 15 16 17 11 12 13 11 12 15 16 11 12 13 11 12 11 12 15 16 11 12 15 11 12 15 16 11 12 11 12 15 11 12 15 11 12 11 12 15 16 11 12 15 11 12 15 11 12 15 16 17 11 12 15 16 17 11 12 15 16 17 11 12 15 16 17 11 12 15 16 17 10 11 12 20 11 12 15 10 11 12 10 11 12 15 11 11 12 11 11 11 12 11 11 11 11 11 11	P-11045 7801 4084 7738 7354 7510 P-10157 7803 N-10006 P-10152 7761 7746 7634 7651 7639 7662 7773-2 N-10007 P-10325	5978	Hose Door Hopper Shaft Cylinder Ass'y (Page 108) Spring Catch Stiffener Street Elbow Pipe Clamp Pipe Elbow Adjustable Boss Shaft Roller Shaft Shaft Chute Clamp Pipe 1/4" x 38" Dust Cap	2 1 1 1 1 1 1 1 1 1 1 1 2 2 2

CONCRETE HOPPER ASS'Y 702-31'Ft. High Lift No. 4086

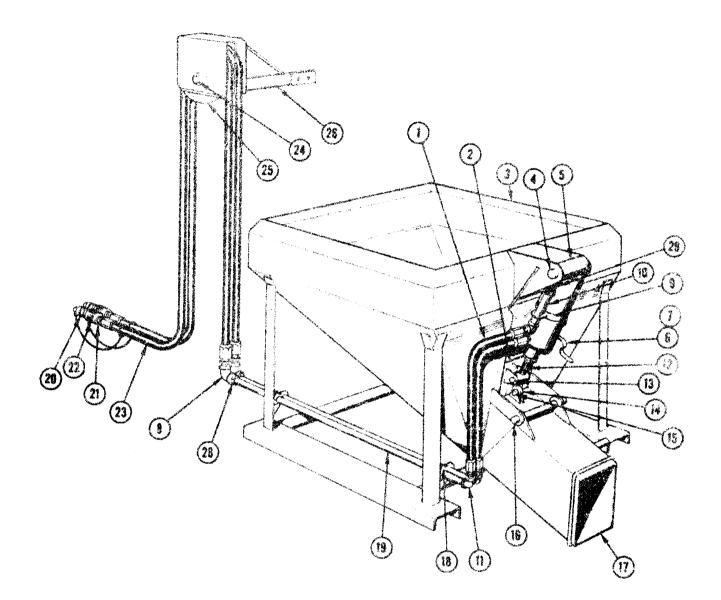


NO.	PART NO.	ASSENDLY NO.	DESCRIPTION	NO. REQ.
1 2 3 4 5 6 7 8 9 0 11 12	P11045 7801 4084 7738 7354 7510 P10225 7803 N10006 P10152 7761	5978	Hose Door Hopper Shaft Cylinder Assembly (Page 108) Spring Catch Stiffener Elbow Pipe Clamp Pipe Elbow Adjustable Boss	2 1 1 1 2 1 2 1 3 R ef.

CONCRETE HOPPER ASSEMBLY 7C2-31' HIGH-LIFT LOADER NO. 4086

ITEM	PART	DESCRIPTION	80.
NO.	NO.		11.
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27	7746 7634 7651 7639 7662 7773-2 N-10007 P-10325 P-10120 P-11353 P-10322 7377 7473 1130	Shaft Roller Shaft Shaft Chute Clamp Pipe Dust Cap Reducer Male Tip Hose Shaft Pulley Shield	1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
28	P-10691	Reducer	2
29	P-10157	Street Ell	

LULL ENGINEERING COMPANY, INC 3045 HIGHWAY 13, ST. PAUL 11, MINNESOTA


CONCRETE HOPPER ASS'Y TELESCOPIC TOWER 7C2-40' NO. 4087

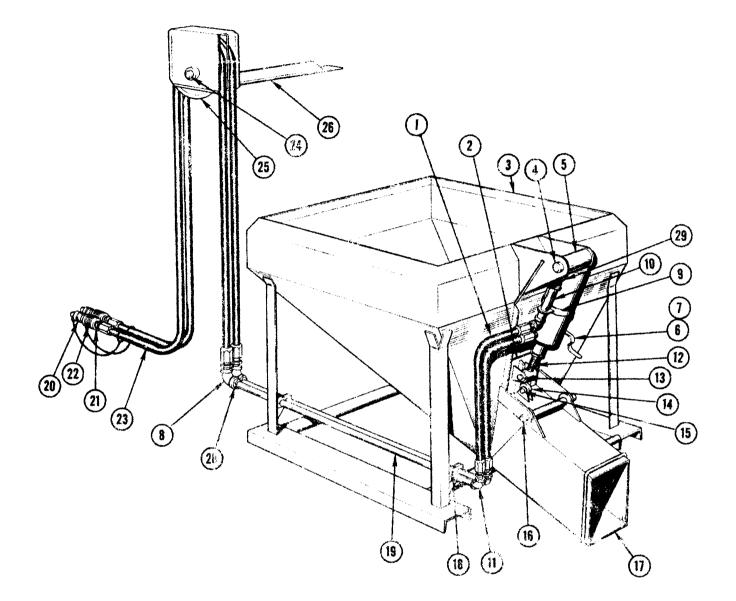


ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	REQ.
l 2	Р-1104 7801	5	Hose Door	2
3	4084		Hopper Weldment	1
4	7738	6 0	Shaft	1
5	am	5978	Cylinder Ass'y (Page 108)	1
6	7354		Spring Catch	1
7	7510		Stiffener	1
8	P-1022	5	Elbow	5
9	7 803		Pipe Clamp	1

-106- (Continued)

ITEM	PART	DESCRIPTION	Reio.
10 11 12 13 14 15 16 17 18 19 20 22 23 25 67 28 29	N-10006 P-10152 7761 7746 7634 7651 7639 7662 7773-2 N-10007 P-10325 P-10120 P-10324 P-1067 7377 7473 8055 7581 P-10691 P-10157	Pipe Elbow Adjusting Boss Shaft Roller Shaft Chute Clamp Pipe Dust Cap Reducer Male Tip Hose Shaft Pulley Shield Ass'y Spacer Reducer Elbow	

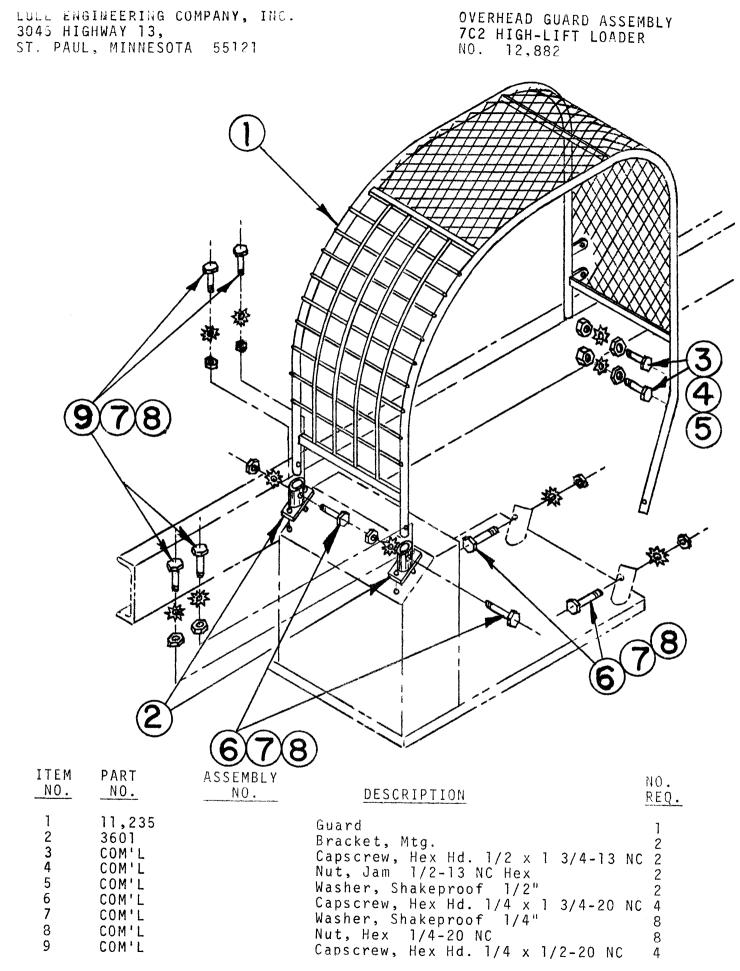


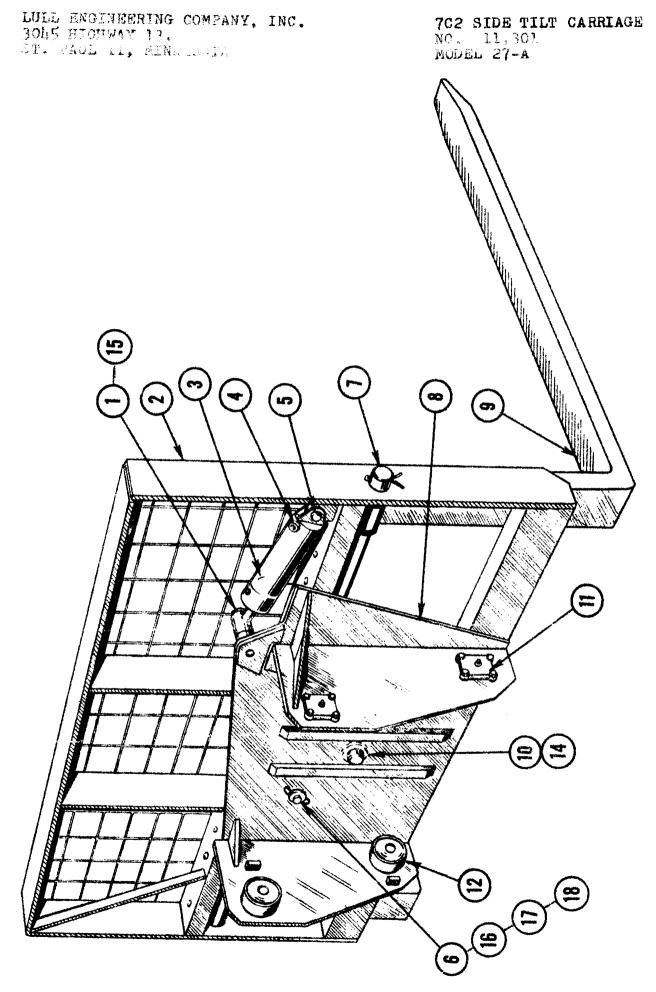


LULL ENGINEERING COMPANY, INC. 3045 HIGHWAY 13, ST. PAUL 11, MINNESOTA 55111

SIDE TILT CARRIAGE 7C2-31' HIGH-LIFT LOADER NO. 11,301

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. REQ.
1	1170		Collar	l
2	11,286		Carriage, (Outer)	1
3		6320	Cylinder Assembly (Page 124)	1
4	1179		Hydraulic System	1
5	6459		Pin	1
6	10,180		Washer	2
7	11, 331		Shaft	1
8	11,279		Carriage, (Inner)	l
9	11,290		Fork Tine 4"	2
10	6326		Washer	1
11	11,272		Spindle	4
12	6860		Roller	4
13				
14	11,276		Pin	1
15	4273		Pin	1
16	COM'L		Nut, 7/8-9 NC	2
17	COM'L		Bolt, 7/8-9 NC x 2 1/4 long	2
18	COM'L		Washer, Shakeproof 7/8	2

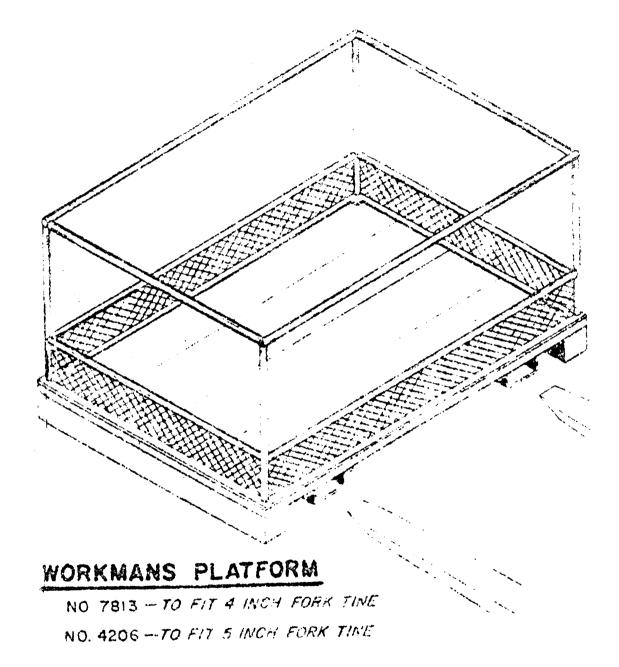

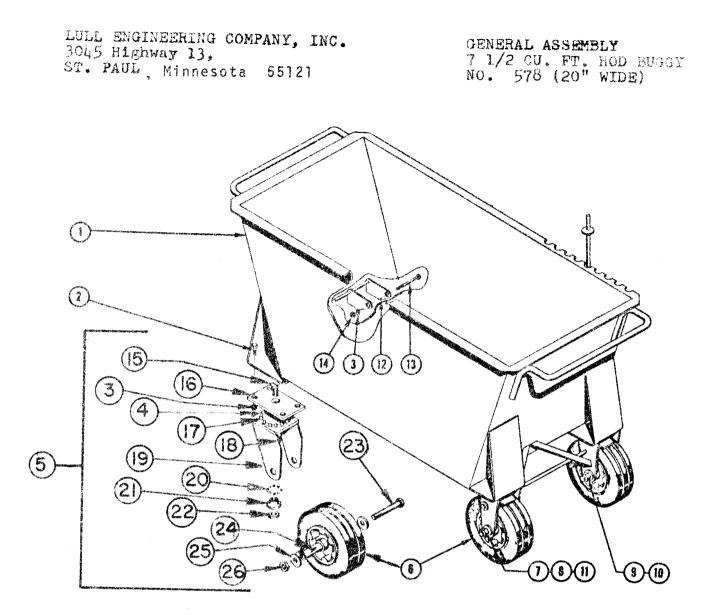


ITEM	PART	ASSEMBLY	DESCRIPTION	NO.
NO.	NO.	NO.		REO.
1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 0 1 1 2 3 4 5 6 7 8 9 1 1 2 3 4 5 6 7 8 9 1 1 2 3 4 5 7 8 9 1 1 2 3 4 5 5 7 8 9 1 1 2 3 4 5 5 7 8 9 1 1 2 3 4 5 7 8 9 1 1 2 3 4 5 5 7 8 9 1 1 2 8 9 1 1 2 8 9 1 1 2 8 9 1 1 2 8 9 1 1 2 8 9 1 1 2 8 9 1 1 2 8 9 1 1 2 8 9 1 1 2 8 9 1 1 2 8 9 1 2 8 9 1 1 2 8 9 1 1 1 2 8 9 1 1 1 2 8 9 1 1 1 2 8 9 1 1 1 2 8 9 1 1 1 2 8 9 1 1 1 2 8 9 1 1 1 2 8 1 1 1 1 2 8 1 1 1 1 2 1 1 1 2 1 1 1 1	573 COM'L COM'L P-12980 P-12337 N-10051 P-11412 COM'L COM'L 577 COM'L COM'L		Hod Buggy Capscrew, 3/8–16 NC x 1 Hex Hd. Washer, 3/8 Shakeproof Nut, 3/8–16 NC Hex Caster Assembly (Less Wheel) Wheel Spacer Washer Washer Vasher, 5/16 Shakeproof Nut, 5/16–18 NC Hex Capscrew, 5/16–18 NC x 4 1/4 Wheel Lock Capscrew, 3/8–16 NC x 5 Jam Nut, 3/8–16 NC	1 8 9 8 2 24 2 4 2 2 1 1 1 1

LULL ENGINEERING COMPANY, INC. 3045 HIGHWAY 13 ST. PAUL, MINNESOTA 55121

GENERAL ASSEMBLY NO. 578

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION
15	P-12332		Capscrew
16	P-12333		Top Plate
17	P-12334		Ball Bearing, 19 Required
18	P-12339		Drive Zerk
19	P-12340		Fork
20	P-12341		Ball Bearing, 13 Required
21	P-12342		Cone
22	P-12343		Nut, Slotted
23	P-12335		Capscrew
24	P-12336		Spacer
25	P-12329		Washer, 2 Requir ed
26	P-12338		Nut, Slotted

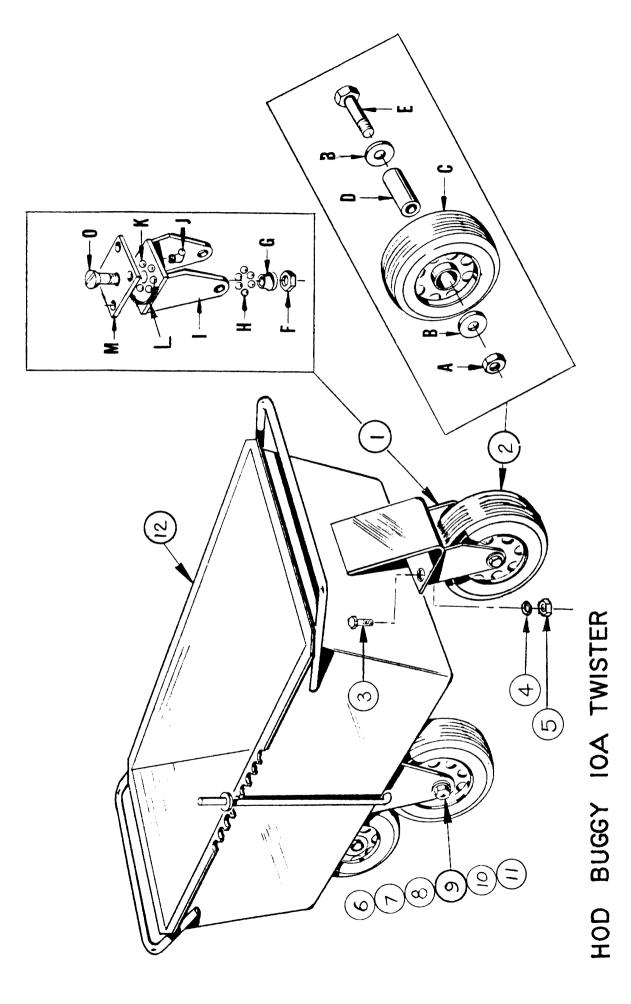

LULL ENGINEERING COMPANY, INC. 3045 Highway 13 St. Paul, Minnesota 55121

HOD BUGGY ASSEMBLY 10-A Twister NO. 623

ITEM NO.	PART NO.	ASSEMBLY NO.	DESCRIPTION	NO. <u>REQ</u> .
1 (F) (G) (H) (J) (K) (L) (M) (C) (C) (C) (E) 3 4 5 6 7 8 9 10 11	P-12980 P-12343 P-12342 P-12341 P-12340 P-12339 P-12334 P-16449 P-16449 P-12333 P-12332 P-12981 P-12338 P-12338 P-12337 P-12336 P-12335 COM'L COM'L COM'L COM'L COM'L COM'L COM'L COM'L		Caster Assembly Nut Cone Ball Bearing Fork Drive Zerk Ball Grease Retainer Top Plate Capscrew Wheel Assembly Nut Washer Wheel Spacer Capscrew Capscrew, Hex Head 3/8-16 NC x 1" 19 Washer, Shakeproof 3/8" Nut, Hex 3/8-16 NC Wheel Spacer Washer Washer, Shakeproof 5/16" Nut, Hex 5/16-18 NC Capscrew, Hex Head 5/16-18 NC x 4 1,	2 1 13 19 1 19 1 1 1 2 1 4 1 1 1 2 4 1 1 1 8 8 8 2 2 4 2 2
12	1590		Body	1

The parts information in this publication is based on data available at the time it was printed. Because of continual improvement and advancing product design, your vehicle may not be identical to the parts information shown. Whenever there is a question, obtain the latest parts information available from your local dealer. JLG Industries, Inc. continually updates these publications electronically within our <u>OnLine Services</u>.



Benefits

- Available 24 hours a day, 7 days a week for your convenience.
- Prices and parts manuals are always current reduces errors and saves time.
- Improves service to your customers with quick access to valuable information.
- Reduces time required to gather information.
- Reduces processing time for warranty claims.

Program Features

- In a few easy steps you can:
- Look-up prices and availability.
- Identify parts using graphical parts manuals.
- Enter orders using part numbers, or order by selecting from graphical parts manuals.
- Review order status.
- Review invoices and credits.
- Review shipping information.
- Submit warranty claims

Visit Us at

http://www.jlg.com

Model No._____ Serial No._____



CORPORATE OFFICE JLG INDUSTRIES, INC. 1 JLG Drive McConnellsburg, PA. USA 17233-9533 Phone: (717) 485-5161 Toll Free: (877) 554-5438 Fax: (717) 485-6417

Service Direct: (717) 485-6657 Service Fax: (717) 485-6488 or (717) 485-6815 Parts Direct: (717) 485-6472 Parts Fax: (800) 733-8939 or (717) 485-6441

JLG Industries (Australia) P.O. Box 5119 11 Bolwarra Road Port Macquarie N.S.W. 2444 Australia Phone: (61) 2 65 811111 Fax: (61) 2 65 810122	JLG Industries (UK) Unit 12, Southside Bredbury Park Industrial Estate Bredbury Stockport SK6 2sP England Phone: (44) 870 200 7700 Fax: (44) 870 200 7711	JLG Deutschland GmbH Max Planck Strasse 21 D-27721 Ritterhude/Ihlpohl Bei Bremen Germany Phone: (49) 421 693 500 Fax: (49) 421 693 5035	JLG Industries (Italia) Via Po. 22 20010 Pregnana Milanese-MI Italy Phone: (39) 02 9359 5210 Fax: (39) 02 9359 5845
JLG Latino Americana Ltda. Rua Eng. Carlos Stevenson, 80-Suite71 13092-310 Campinas-SP Brazil Phone: (55) 19 3295 0407 Fax: (55) 19 3295 1025	JLG Europe B.V. Jupiterstraat 234 2132 HJ Hoofddorp The Netherlands Phone: (31) 23 565 5665 Fax: (31) 23 557 2493	JLG Industries (Norge AS) Sofeimyrveien 12 N-1412 Sofienyr Norway Phone: (47) 6682 2000 Fax: (47) 6682 2001	JLG Polska Ul. Krolewska 00-060 Warsawa Poland Phone: (48) 91 4320 245 Fax: (48) 91 4358 200
JLG Industries (Europe) Kilmartin Place, Tannochside Park Uddingston G71 5PH Scotland Phone: (44) 1 698 811005 Fax: (44) 1 698 811055	JLG Industries (Pty) Ltd. Unit 1, 24 Industrial Complex Herman Street Meadowdale Germiston South Africa Phone: (27) 11 453 1334 Fax: (27) 11 453 1342	Plataformas Elevadoras JLG Iberica, S.L. Trapadella, 2 P.I. Castellbisbal Sur 08755Castellbisbal Spain Phone: (34) 93 77 24700 Fax: (34) 93 77 11762	JLG Industries (Sweden) Enkopingsvagen 150 Box 704 SE - 175 27 Jarfalla Sweden Phone: (46) 8 506 59500 Fax: (46) 8 506 59534

Visit our Web Site at: http://www.jlg.com