

Illustrated Parts Manual

Model 9038

8990160

February 1990 S/N 9A0550 and After

ANSI







			TO THE VEN TO BE A POST OF
,			
		÷	

Table of Contents


Page		Page
SECTION 1 — MAIN FRAME AND GUARDS	Axles	
Main Frame	Differential Carrier - Front & Rear Axle	3.20
Main Frame1.1	Axle Steering Joints	
Hood and Guards1.2	Wheel End — Front and Rear Axle	
SECTION 2 OPERATORIO DAR AND CONTROL O	Disc Brake Assembly	
SECTION 2 — OPERATOR'S CAB AND CONTROLS	Tie Rod & Steering Cylinder Mounting	3.24
Operator's Cab Open	Wheels and Tires	3.25
Operator's Cab — Open		
Operator's Cab — Closed (Optional)	SECTION 4 — POWER PLANT	
Cab Door		
Operator's Seat	Engine & Radiator Mounting - Ford	4.1
	Engine & Radiator Mounting - Perkins	
(Perkins, Ford, John Deere)2.5	Engine & Radiator Mounting - John Deere	
(Deutz)	Engine Mounting - Deutz	4.4
Transmission Shift Controls	Exhaust System	
(Clark)2.7	Ford	4.5
(Funk)2.8	Perkins	
Boom Raise/Lower & Extend/Retract Control	John Deere	4.7
(Cable Control Joystick)2.9	Deutz	4.8
(Electronic Control Joystick)	Air Cleaner	
w/TLC2.10	Ford	4.9
w/oTLC2.11	Perkins	
Frame Level & Grille Tilt Control2.12	John Deere	
Throttle Pedal Control2.13	Deutz	
Service Brake Pedal Control2.14	Fuel System	
Parking Brake Control2.15	Ford	4.13
Windshield Wiper (Optional Closed Cab Only)2.16	Perkins	
Cab Heater2.17	John Deere	
Auxiliary Hydraulic Control (Optional)2.18	Deutz	
SECTION 3 — DRIVE TRAIN	SECTION 5 — HYDRAULIC CIRCUITS	
Transmission		
Converter & Transmission Housings (Funk)3.1	Power Steering Circuit	5.1
Converter Group (Funk)3.2	Main Control Valve Circuit	
Trans. Idler, Pump, Output & Brake (Funk)3.3	(Cable Controlled Valve)	
Trans. Gear & Clutch (Funk)3.4	(Electronic Controlled Valve)	5.3
Trans. Gear & Clutch 2nd Stage (Funk)	Boom Raise/Lower and Extend/Retract Circuits	
Control Valve Assembly (Funk)3.6	(Cable Controlled Valve)	
Converter & Transmission Housings (Clark)3.7	(Electronic Controlled Valve)	
	Grille Tilt , Slave and Frame Tilt Circuits	
Converter Group (Clark)3.8 Transmission Gear Groups (Clark)	Brake Circuit	
	Valve Plate Assembly	5.8
Forward, Rev. Low & 2ND3.9	Transmission Cooling	
Output, Idler & Third3.10	Funk	
Transmission Clutch Group (Clark)3.11	Clark - Water Cooled Eng	
Control Valve Assembly (Clark)	Clark - Air Cooled Eng	
Transmission Brake (Clark)	Auxiliary Hydraulic Circuit (Optional)	
Transmission Mounting	Outrigger Circuit (Optional)	5.13
(Clark)3.14		
(Funk)3.15	SECTION 6 — HYDRAULIC COMPONENTS	
Drive Shaft - Engine to Transmission		
(Deutz)3.16	Hydraulic Reservoir	
(John Deere, Perkins, Ford)	Main Tandem Pump	
Drive Shaft - Front & Rear	Boom Hoist Cylinder	6.3
(Clark)3.18	Boom Extend Cylinder	6.4
(Funk)3.19	Slave Cylinder	6.5

Table of Contents (Cont.)

	Page
SECTION 6 — HYDRAULIC COMPONENTS (Cont.)
Grille Tilt Cylinder	.6.6
Frame Tilt Cylinder	
Steering Cylinder	
(S/N 9N0648 & Before)	. 6.8
(S/N 9N0649 & After)	. 6.8.1
Outrigger Cylinder (Optional)	. 6.9
Side Tilt Carriage Cylinder	.6.10
Main Control Valve	
Cable Controlled	.6.11
Electronic Controlled	. 6.12
Secondary Control Valve	
Frame and Grille Tilt	. 6.13
Frame & Grille Tilt, Aux. Hyd. & Outriggers	
(S/N 9A0550 thru S/N 0B0675)	
(S/N 0B0676 & After)	
Directional Control Valves	
Brake Valve	
Steer Select Valve	
Priority Valve	
Accumulator Charging Valve	.6.15
SECTION 7 — ELECTRICAL	
Electrical System - Cab Harness	.7.1
Lighting System (Optional)	
Electrical System - Engine Harness	
Deutz	.7.3
John Deere	.7.4
Ford	. 7.5
Perkins	.7.6
TLC Wiring	
Electronic Joystick Wiring w/o TLC	
Electronic Joystick Assembly	. 7.9

	Page
SECTION 8 — DECALS AND PAINT	_
Decals and Paint	8.1
SECTION 9 — BOOM AND ATTACHMENTS	
Outer Boom	9.1
Intermediate Boom	
Inner Boom	
Quick Attach	
Carriage 48"	
Carriage 60" (Optional)	
Carriage 72" (Optional) Utility Bucket (Optional)	9.8
Outriggers (Optional)	
Side Tilt Carriage (Optional)	
(S/N 9A0550 thru S/N 9F0599)	9.10
(S/N 9F0600 & After)	
8 Foot Mast (Optional)	
` '	

MAIN FRAME

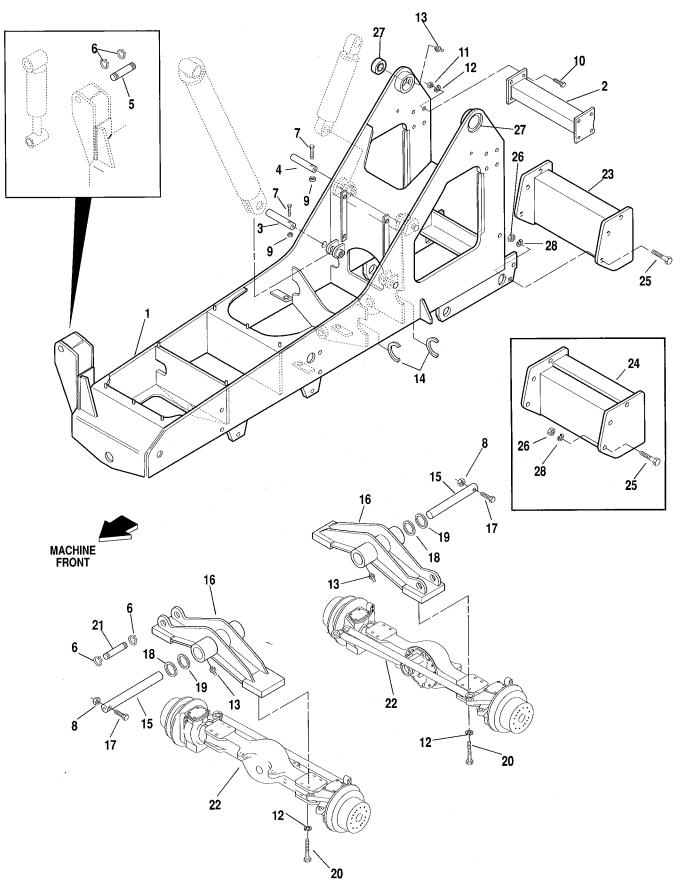


PB 0011

MAIN FRAME

Item No.	Part Number	Qty.	Description
1	Consult Factory	1	Frame Weldment
2	7078952	1	Support, Crossmember (Ford)
	7080932	1	Support, Crossmember (Perkins)
	7078972	1	Support, Crossmember (J. Deere)
	7084302	1	Support, Crossmember (Deutz)
3	7065651	2	Pin, Hoist Cylinder, Base End
4	7075172	2	Pin, Slave Cylinder, Base End
5	7077671	1	Pin, Frame Tilt Cylinder
6	8642207	4	Ring, Snap
7	8303770	4	Screw, Hex Hd Cap, 3/8-16 x 2-3/4 Gr 5
8	8305643	2	Locknut 5/8-11
9	8305645	4	Locknut 3/8-16
10	8303639	8	Screw, Hex Hd Cap, 3/4-10 x 3 Gr 5
11	8305017	8	Nut, Hex 3/4-10
12	8307010	24	Lockwasher, 3/4
13	8520013	6	Fitting, Grease
14	8221020-0125	4	Conduit, 1.0 ID x 12.5 Lg
15	7079442	2	Pin, Axle Pivot
16	7077113	2	Carrier, Axle
17	8303655	2	Screw, Hex Hd Cap, 5/8-11 x 4.5 Lg
18	8307913	2	Spacer, Washer 1/8
19	8307912	2	Spacer, Washer 1/16
20	8303516	16	Screw, Hex Hd Cap, 3/4-10 x 7 Gr 5
21	7077661	1	Pin, Frame Tilt Cylinder - Rod End
22	8040235	2	Axle, Front and Rear (SEE NOTE BELOW)
23	7088773	1	Counterweight, 1000 Lbs (Standard)
24	7089523	1	Counterweight, 2000 Lbs (w/Outriggers)
25	8310051	4	Screw, Hex Hd Cap, 1.0-8 NC x 4.0 Gr 5
26	8305021	4	Nut, Hex 1.0-8 NC
27	8065635	2	Bearing, Boom Pivot
28	8307012	4	Lockwasher, 1.0
1			
1			
1			NOTE: Axle assemblies do not include steer cylinders as a service
			replacement part. Reference pages 6.8 or 6.8.1 for proper
			cylinder part number and page 3.24 for steer cylinder sockets.
1			
1			
1			
1			
1			
1			
		-	

HOODS AND GUARDS

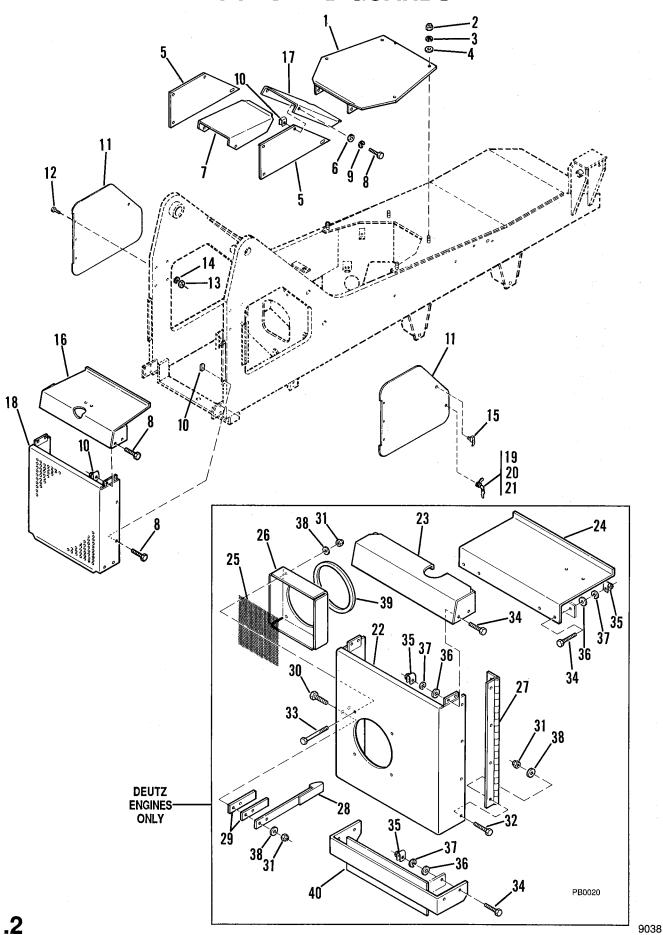


HOODS AND GUARDS

Item No.	Part Number	Qty.	Description
1	7078413	1	Cover, Transmission (Clark)
	7078453	1 1	Cover, Transmission(Funk)
2	8305601	4	Locknut, Hex 1/4-20
3	8307002	4	Lockwasher, 1/4
4	8307202	4	Washer, Flat 1/4 Heavy
5	7078502	2	Cover, Valve -Side
6	8307106	8	Washer, Flat 5/16
7	7078492	1	Cover, Valve Top
8	8303697	20	Screw, Hex Hd Cap, 5/16-18 x 3/4 Gr 5
9	8307004	8	Lockwasher, 5/16
10	8305906	20	Retainer, 5/16-18
11	7078143	2	Door
12	8303776	6	Screw, Hex Hd Cap,1/4-20 x 1/2 Gr 5
13	8305004	6	Nut, Hex, 1/4-20
14	8307002	6	Lockwasher 1/4
15	8342404	2	Latch, Lift and Turn
16	7078903	1 1	Cover,Radiator Top
17	7078482	1 1	Cover, Valve - Front
18	7054723	1 1	Cover, Radiator
19	8342807	2	Latch, Door w/Key
20	8342809	2	Cam, Latch
21	8342808	1	Key Set
22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39	7084323 7084412 7084422 7074721 7084432 7084331 8342406 7084361 8303615 8305601 8303729 8303082 8303670 8305906 8307203 8307109 7075211	1 1 1 1 1 1 2 2 14 8 4 12 12 12 14 14 1	Door, Blower Cover, Top Panel, Top Cloth, Wire Duct Hinge Latch Spacer Screw, Hex Hd Cap, 1/4-20 x 1-1/4 Gr 5 Locknut 1/4NC Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 Screw, Hex Hd Cap, 1/4-20 x 3 Gr 5 Screw, Hex Hd Cap, 5/16-18 x 1 Gr 5 Nut, Retainer 5/16-18 Washer, Flat 5/16 Lockwasher 5/16 Washer, Flat 1/4 Seal
40	7084392	1	Panel, Door Sill

9038

OPERATOR'S CAB — OPEN

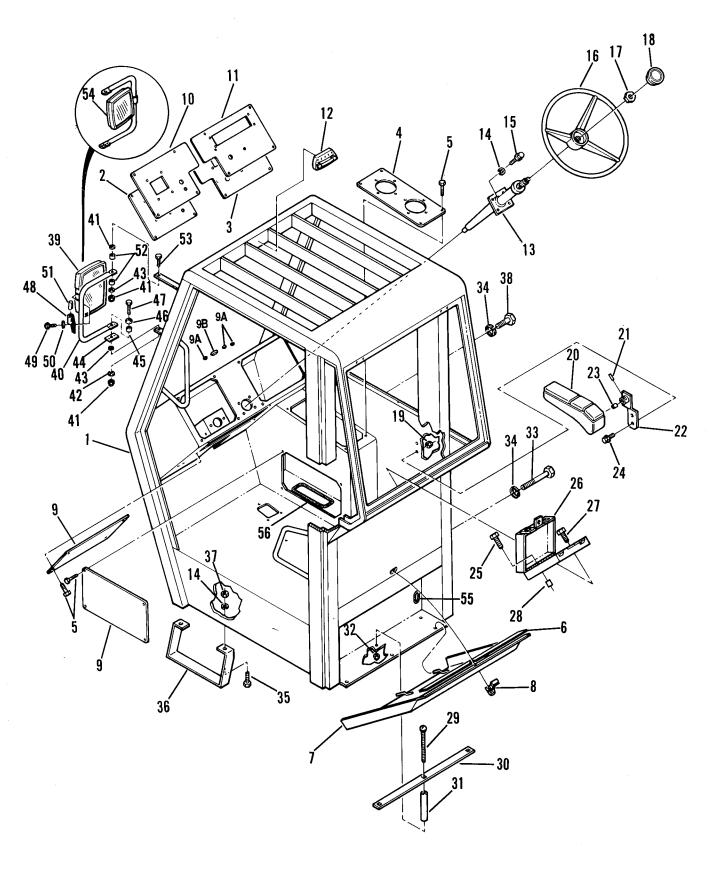


PA0811

OPERATOR'S CAB — OPEN

Item No.	Part Number	Qty.	Description
1	7080215 8033051 8033052 8033053 8033058 8033058 8033022 8033022 8033061 7088964 7088974 8466306 8721023 8307005 8303554 8720014 8305916 8720015 8305624 8864038 8302147 7084692 8065639 8303119 8303118 8990147 8303729 7772035-0008 8304014 7082971 8403217-0080 8305645 8310050 8307012 8303534 7084882 8305008 8310049 8866216 See Kits	111120111123111111641111211112312131332421221246222222	Cab Assembly, FOPS (Includes items 2 thru 9) Panel, Left Front Console Panel, Right Front Console Panel, Right Front Console Panel, Side Console Screw, Cap, Hex Hd, 1/4-20 x 3/4 Gasketing, Sponge Rubber, 251/4" Cover, Battery Lock, Cam Panel, Lower Plug, Hole Plug, Hole Overlay, Left Console Overlay, Right Console Gauge, Tilt Angle Column, Steering Lockwasher, 3/8 Screw, Fig Hd, 3/8NC x 1-1/4 grade 5 Wheel, Steering Nut, Steering Column Cap, Steering Wheel Nut, Lock Arm Rest Pin, Roll Bracket, Arm Rest Bushing, Sleeve Screw, Fig Hd, 1/4 x 5/8 Screw, Fig Hd, 1/4 x 1-3/4 Cad grade 5 Holder, Manual Screw, Hex Hd, 1/4 x 1-3/4 Cad grade 5 Holder, Manual Screw, Hex Hd, 1/4 x 5/8 grade 5 Spacer, 5/8 OD x 1/8 W x 3/4 Bolt, Carriage Bar, Battery Hold-down Hose Nut, Lock Screw, Cap, Hex Hd, 1NC x 6.0 grade 5 Lockwasher, 1" Screw, Cap, Hex Hd, 1NC x 2-3/4 grade 5 Mirror Head (See Kits) Loop, Mirror (See Kits) Look Masher, Int-Ext Plate, Lock Washer, Flat Lockwasher, Int-Ext Plate, Lock Washer, Tension Cap, Retaining Bolt, Hex Clamp
		2 2 2 2 4 2 1 1 1	Clamp Bolt, Acorn Lockwasher Gasket, Clamp Washer, Fiber Bolt, Hex Head, Mirror (Convex) (See Kits) Conduit, 1/4 ID x 11.0 Conduit, 1/4 ID x 26.0
	8866214	1	KITS Mirror Kit (Includes Items 42 thru 54)

OPERATOR'S CAB — CLOSED (OPTIONAL)

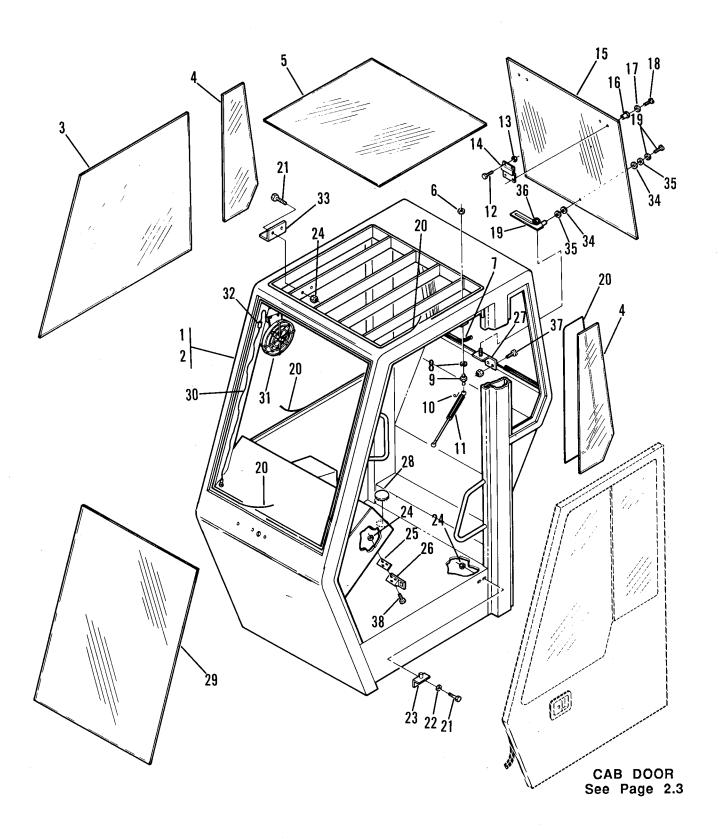


PA0821

OPERATOR'S CAB — CLOSED

(OPTIONAL)

Item No.	Part Number	Qty.	Description
1	7084515	1	Cab , Enclosed (Includes all parts on this page
			and all parts on pages 2.3 and 2.11)
2	7080215	1	Cab Assembly, FOPS (See Page 2.1)
3	8033082	1	Window, Right Side
4	8033079	2	Window, Wing
5	8033081	1	Window, Skylight
6	8305602	1	Locknut, 5/16-18
7	8033072	1	Seal, Rubber, 120 in.
8	8033059	2	Washer, Flat, 5/16
9	8033070	2	Stud, Ball
10	8033069	2	Clip
11	8033055	1	
12		-	Spring, Gas
	8033089	4	Screw, Whizlock, #10-24 x 1/2
13	8305002	4	Nut, Hex, #10-24
14	8033085	2	Hinge, Spring
15	8033084	1	Window, Rear
16	8033086	4	Nut, Well
17	8033087	4	Washer, Nylon
18	8033088	4	Screw, Phil Hd, #10-32 x 3/4
19	8033044	1	Window Hold Slide Assembly, w/Hardware
20	8585135	5	Tape, Butyl, 1/4 sq x 15' Roll
21	8033058	4	Screw, Hex Hd Cap,1/4-20 x 3/4
22	8307109	2	Washer, Flat 1/4
23	8033064	1	Bracket, Door Mounting
24	8305601	2	Locknut, 1/4-20
25	8585142	1	Shim, Door Striker
26	8585141	1	Striker
27	8585138		Weldment, Latch Bracket
28	8580315	4	Plug, Hole
29	8033083		
30	· ·	1	Window, Front
	8033076	4	Wire Assembly, Fan
31	8033078	1	Fan, Defroster
32	8033077	1	Connector, Wire
33	8585140	1	Bracket, Circulation Fan
34	8585139	2	Washer, Flat Plastic 3/8
35	8307204	2	Washer, Flat 3/8
36	8580115	1	Knob
37	8383776	2	Screw, Hex Hd Cap, 1/4-20 x 1/2
38	8033036	3	Screw, Hex Hd Cap, 1/4-20 x 1.00
39	8585134	AR	Sealant, Urathene, 10 oz Cartridge (Not Shown)
			<u>KITS</u>
	8585133	1	Window Glue Kit (Includes items 20, 39, 4 Setting Blocks and 1 Set of Installation Instructions)

CAB DOOR

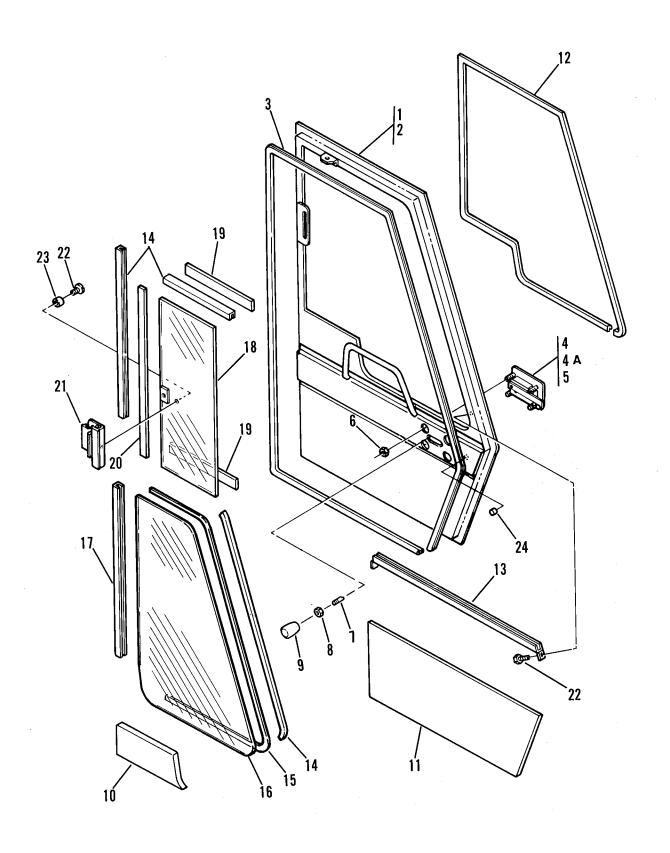


PA0052

CAB DOOR

Item No.	Part Number	Qty.	Description
1 2	8033010	1	Door Assembly (Includes Items 2 thru 28)
3	8033011	1	Door
4	8033023	1	Seal, Rubber Door,200 inch
4 4A	8342405	1	Latch, Paddle
	8033060	1	Tumbler, Paddle Latch
5	8342808	1 1	Key (Not Shown)
6	8305004	4	Nut, Hex, 1/4 -20
7	8033026	1	Rod, Threaded, 3/8-16 x 1.88
8	8305008]	Nut, Hex, 3/8-16UNC
9	8033019	1	Knob, Latch
10	8033029]	Soundproofing, Upper Door
11	8033030]	Soundproofing, Lower Door
12	8033020]	Trim, Rubber,144 inch
13	8033013	1	Track, Side Window
14	8033024	1	Channel, Window,120 inch (Cut to length)
15	8033032	1	Sponge Rubber, Adhesive Backed, 80 inch
16	8033014	1	Window, Door
17	8033016	1	Channel, Wiper, 31 inch
18	8033015	1	Window, Sliding
19	8033033	2	Spacer, Plastic
20	8033028	1	Spacer, Plastic, 29 inch
21	8033018	1	Latch Assembly
22	8033835	2	Screw, #10-24 x 1/2
23	8033021	1	Bushing, Plastic
24	8033047	1	Bumper, Rubber
•			
ľ			
l l			

OPERATOR'S SEAT

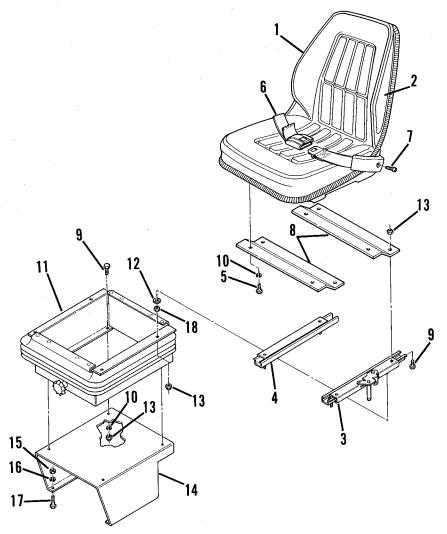


PA0063

Item No.	Part Number	Qty.	Description
1	8864037	1	Seat Assembly (Includes Items 2 thru 5)
2	8864041	1	Cushion, Seat (one piece)
3	8864039	1 1	Slide, w/Handle
4	8864040	1 1	Slide,w/o Handle
4 5	N.S.S.	4	Screw
6	8864034	1 1	Belt, Seat
7	8303604	2	Screw, Hex Hd Cap, 7/16-20 x 1-1/4
8	7090751	2	Mount, Seat
9	8303697	8	Screw, Cap, 5/16NC x 3/4
10	8307004	8	Lockwasher, 5/16
11	8864036	1 1	Suspension
- 12	8307232	4	Washer, Flat, 5/16
13	8305626	12	Nut, Lock, 5/16NC Cad
14	7083963	1	Support, Suspension
15	8305008	4	Nut, Hex , 3/8
16	8307005	4	Lockwasher, 3/8
17	8303534	4	Screw, Cap, Hex Hd, 3/8 NC x 1-1/4 Gr 5
18	8305006	4	Nut, Hex 5/16-18

CONTROL CONSOLE


(FORD, PERKINS & JOHN DEERE)

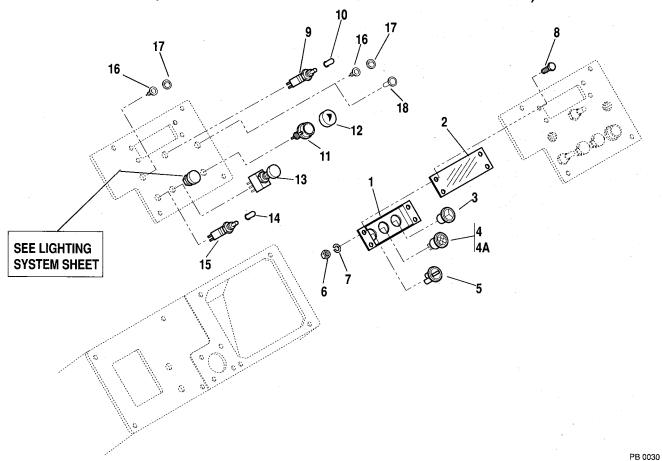

Item No.	Part Number	Qty.	Description		
1	7084902	1	Plate, Gauge Mounting		
2	7082292	1	Cover		
3	8464212	1 1	Gauge, Fuel		
4	8466305	1 1	Gauge, Warning Lights		
4A	8469030	4	Bulb (Not Shown)		
5	8467014	1 1	Hourmeter		
6	8305004	4	Nut, Hex, 1/4-20		
7	8307002	4	Lockwasher, 1/4		
8	8310075	4	Screw, Hex Flange, 1/4-20 x 3/4 Gr 5		
9	8223442	1	Switch Test		
10	8580312	1	Cap, Seal		
11	8223405	1	Button, Horn		
12	8580311	1	Cap, Seal		
13	8033201	1	Switch, Washer/Wiper (optional)		
14	8580309	2	Cap Seal		
15	8223001	1 1	Switch, Steer Select		
16	7071342	AR	Socket, Light (2 on Funk - 1 on Clark)		
17	8469012	AR	Lens, Red (2 on Funk - 1 on Clark)		
18	8580314	1 1	Plug (Clark Transmission Only)		

CONTROL CONSOLE

(DEUTZ)

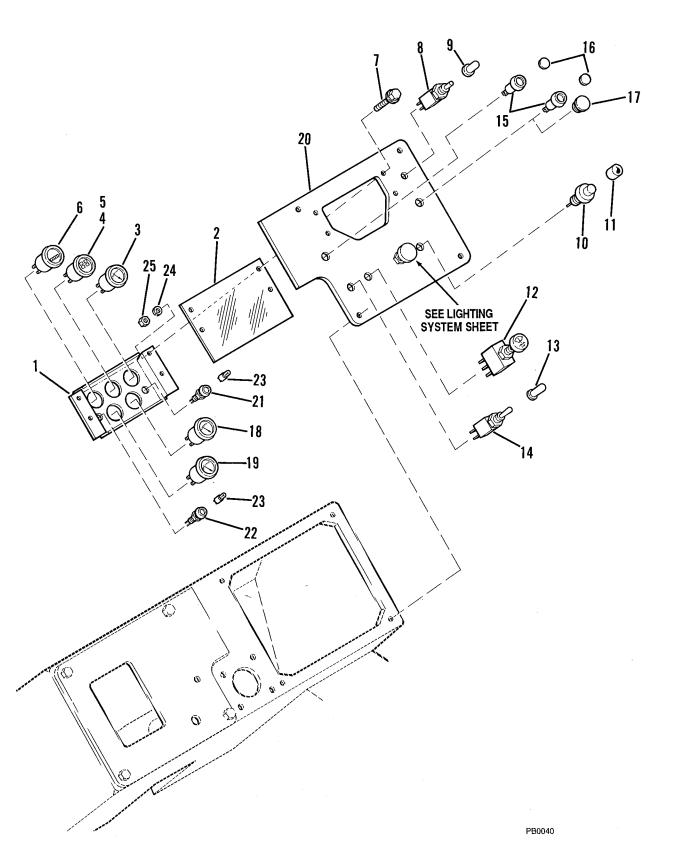


CONTROL CONSOLE

(DEUTZ)

Item No.	Part Number	Qty.	Description
1	7089173	1	Plate, Mounting
2	7089182	1	Cover, Window
3	8464212	1	Gauge, Fuel
4	8466305	1	Gauge, Warning Lights
5	8469030	4	Bulb (Not Shown)
6	8467014	1	Hourmeter
7	8310075	4	Screw, Flg Hd Cap, 1/4 NC x 3/4 Gr5
8	8223442	1	Switch Test
9	8580312	1	Cap, Seal
10	8223405	1	Button, Horn
11	8580311	1	Cap, Seal
12	8033201	1	Switch, Washer/Wiper (optional)
13	8580309	2	Cap Seal
14	8223001	1	Switch, Steer Select
15	7071342	2	Socket, Light
16	8469012	2	Lens, Red
17	8580314	1	Plug (Clark Transmission Only)
18	8462014	1	Gauge, Oil Temperature
19	8460025	1	Gauge, Oil Pressure
20	7089192	1	Panel, R. H. Console
21	8469032	1	Socket, Red Light
22	8469034	1	Socket, Amber Light
23	8469033	2	Bulb
24	8307002	4	Lockwasher, 1/4
25	8305004	4	Nut, Hex 1/4-20
	:		
		l	
	*		

TRANSMISSION SHIFT CONTROLS (CLARK)

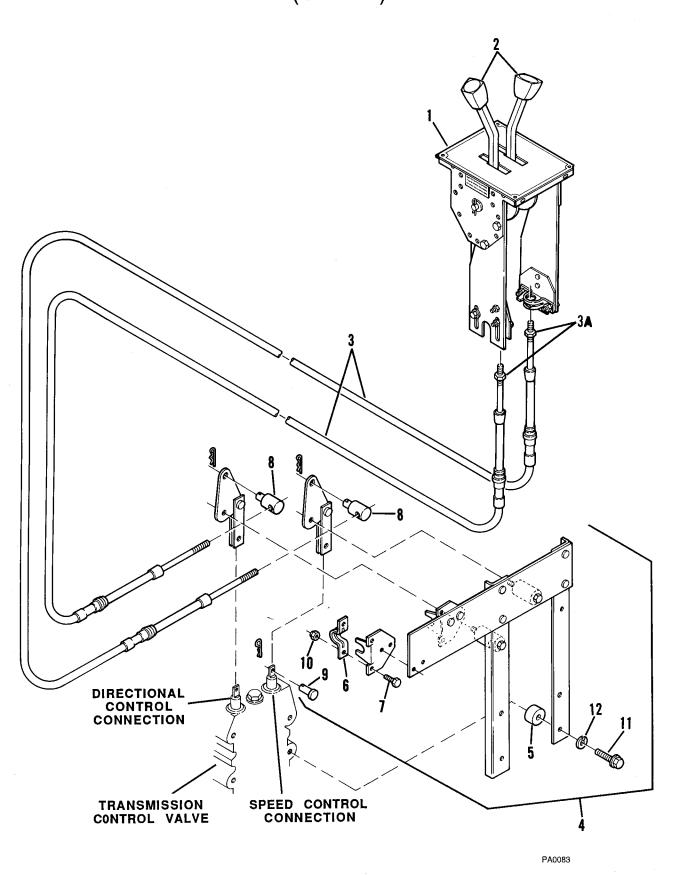


TRANSMISSION SHIFT CONTROLS

(CLARK)

Item No.	Part Number	Qty.	Description
1 2 3 3A 4 5 6 7 8 9 10 11 12	7090312 8580111 8160042 8305402 8160417 8033240 8033241 8303540 8033242 8033243 8305601 8303771 8307005	1 2 2 2 1 4 2 4 2 2 4 4 4	Shifter, Transmission (Includes Item 2) Knob Cable, Control Nut, Jam 1/4-28 NF Transmission Connector Kit (Includes items 5 thru 12 plus all other parts not identified with an item number) Spacer Clamp Screw, Cap, Hex Hd, 1/4-20 x 1 grade 5 Swivel Pin, Clevis Nut, Lock Screw, Cap, Hex Hd, 3/8-16 x 2-1/2 grade 5 Lockwasher, 3/8

TRANSMISSION SHIFT CONTROLS

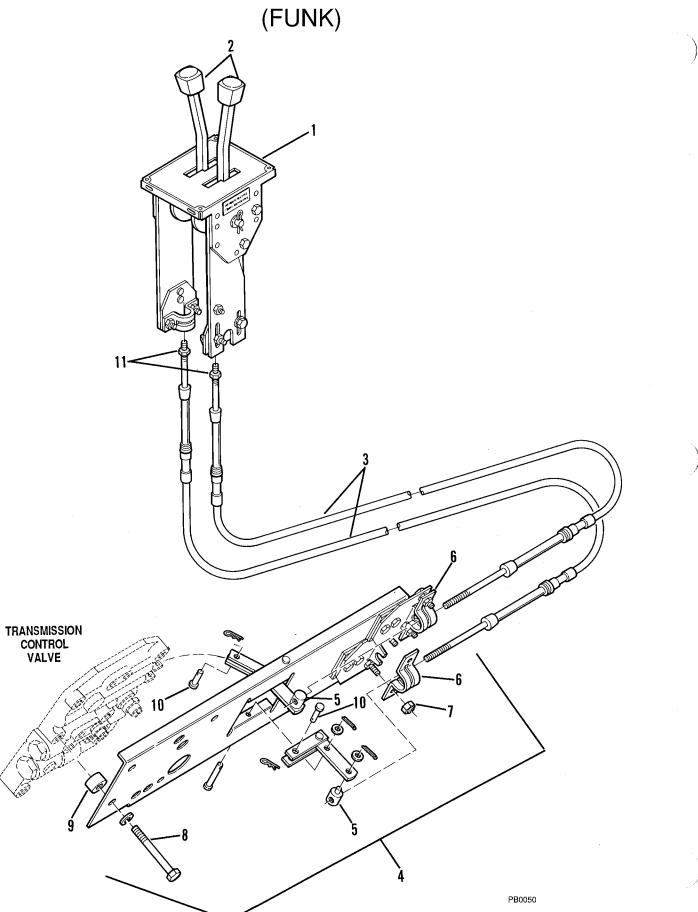

2.8


9038

TRANSMISSION SHIFT CONTROLS

(FUNK)

Item No.	Part Number	Qty.	Description
	8160411 8580111 8160042 8160420 8033242 8033241 8033246 8303766 8033244 8033245 8305402	Qty. 1 2 2 4 4 2 2	Shifter, Transmission (Includes Item 2) Knob Cable, Control Transmission Connector Kit (Includes items 5 thru 10 plus all other parts not i dentified with an item number) Swivel Clamp Nut, Lock Screw, Hex Hd Cap, 5/16-18 x 2-3/4 Spacer Pin, Clevis Nut, Jam 1/4NF

BOOM RAISE/LOWER & EXTEND/RETRACT CONTROL (CABLE CONTROL JOYSTICK)

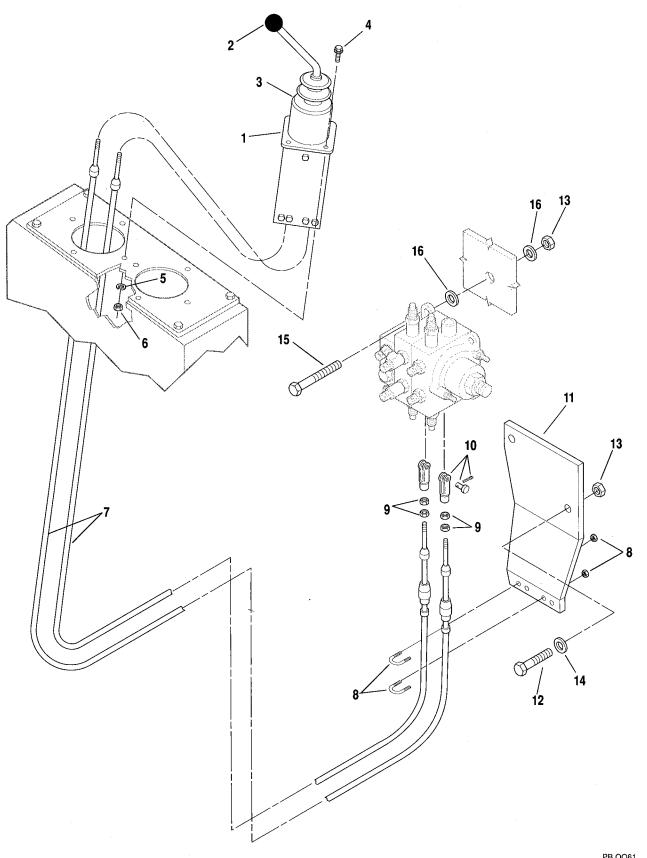

PB 0061

BOOM RAISE/LOWER & EXTEND/RETRACT CONTROL


(CABLE CONTROL JOYSTICK)


Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	7080843 8580110 8160419 8303553 8307002 8305004 8160053 8160615 8305402 8301439 7089922 8303658 8305644 8307112 8303692	1 1 4 4 4 2 4 2 1 2 5 8 3	Joystick (Includes Items 2 and 3) Knob Boot Screw, Flange Head, 1/4 x 1.25 Lockwasher, 1/4 Nut, Hex, 1/4 Cable, Control Clamp w/Nuts Nut, Jam 1/4 NF Clevis (w/Pin) Bracket, Cable Anchor Screw, Hex Hd Cap, 1/2-13 x 2.00 Gr 5 Nut, Hex Lock, 1/2-13 Washer, Flat 1/2 Screw, Hex Hd Cap, 1/2-13 x 2.75 Gr 5

BOOM RAISE/LOWER & EXTEND/ RETRACT CONTROL

(ELECTRONIC JOYSTICK W/TLC)


Item No.	Part Number	Qty.	Description
1	8224016	1	Joystick, Electronic, w/ 50° Gate (See Page 7. 9 for Breakdown)
2	7088533	1	Cover, Console
3	7088232	1	Sensor, Vehicle Attitude
4	7086772	1	Harness, Wire
5	7090072	1	Controller, Electronic
6	7088122	1	Display
7	7088202	1	Horn, Signal
8	7088212	1	Sensor, Boom Length
9	7088222	1	Sensor, Boom Angle
10	7088242	1	Pulley, 30 Grooves
11	7088252	1	Pulley, 120 Grooves
12	7088262	1	Belt
13	8580313	4	Plug, Trim
14	7088042	1	Bracket, Boom Angle Sensor
15	7088052	1	Bracket, Pulley
16	7088062	1	Cover, Angle Sensor Bracket
17	7088092	1	Bracket, Boom Length Sensor
18	7088653	1	Panel, Lower Front
19	7088081	1	Clamp, Half
20	8769141	1	Clamp, Half
21	8584018	1	Mount, Cable Tie
22	8584002	14	Tie, Plastic
23	8303615	5	Screw, Hex Hd Cap, 1/4-20 x 1.250 Gr 5
24	8307202	17	Washer, Flat, 1/4
25	8307002	15	Lockwasher, 1/4
26	8305004	9	Nut, Hex, 1/4-20
27	8406005	1	Support
28	8769147	2	Clamp, Single Set 1-1/2 ID
. 29	8303703	4	Screw, Hex Hd Cap, 1/4-20 x 2.50 Gr 5
30	8303758	2	Screw, Hex Hd Cap, 1/4-20 x 2 Gr 5
31	7088161	2	Shim, Sensor Bracket
32	8310001	4	Nut, Retainer, 1/4-20
33	8310026	2	Screw, Hex Hd Cap, 1/4-20 x .75 Gr 5
34	8310027	2	Screw. Hex Hd Cap, 1/4-20 x 3.25 Gr 5
35	8303675	2	Screw, Hex Hd Cap, 3/8-16 x 1.25 Gr 5
36	8305008	1	Nut, Hex, 3/8-16
37	8307204	3	Washer, Flat, 3/8
38	8307005	1	Lockwasher, 3/8
39	8303679	l i	Screw, Hex Hd Cap, 3/8-16 x 1.75 Gr 5
40	8220060	l i	Adapter
41	8303981	4	Screw, Mach Washer Hd, 10-24 x .50
42	8307003	4	Lockwasher, #10
43	8305002	4	Nut, Hex, #10-24
43 44	8303739	1 1	Screw, Hex Hd Cap, 5/16-18 x 1-1/4 Gr 5
45	8307004	li	Lockwasher 5/16
46	8305006		Nut, Hex 5/16-18
47	7090641	1 1	Guard
47 48	8310022	2	Screw, Machine #4-40 x 3/8
49	8307050	2	Lockwasher #4
49 50	8303119	2	Screw, Hex Flange, 1/4-20 x .625
50 51	8584001	1	Tie Wrap
52	8033058	4	Screw, Hex Hd Cap, 1/4-20 x .75
			USED ON EARLY MODELS ONLY
53	7090781	1	Conversion Kit, Attitude Sensor Mount (Includes items 54 thru 59)
			USED ON LATER MODELS ONLY
54	7090432	1	Bracket, Attitude Sensor Mount
55	7090432	li	Support
56	8310001	2	Nut, Retainer 1/4-20
56 57	8310026	2	Screw, Hex Hd Cap, 1/2-20 x 3/4 Gr5
57 58	8307202	2	Washer, Flat 1/4
58 59	8307202	2	Lockwasher #4
59	030/002		LOOKWAGIIGI #7

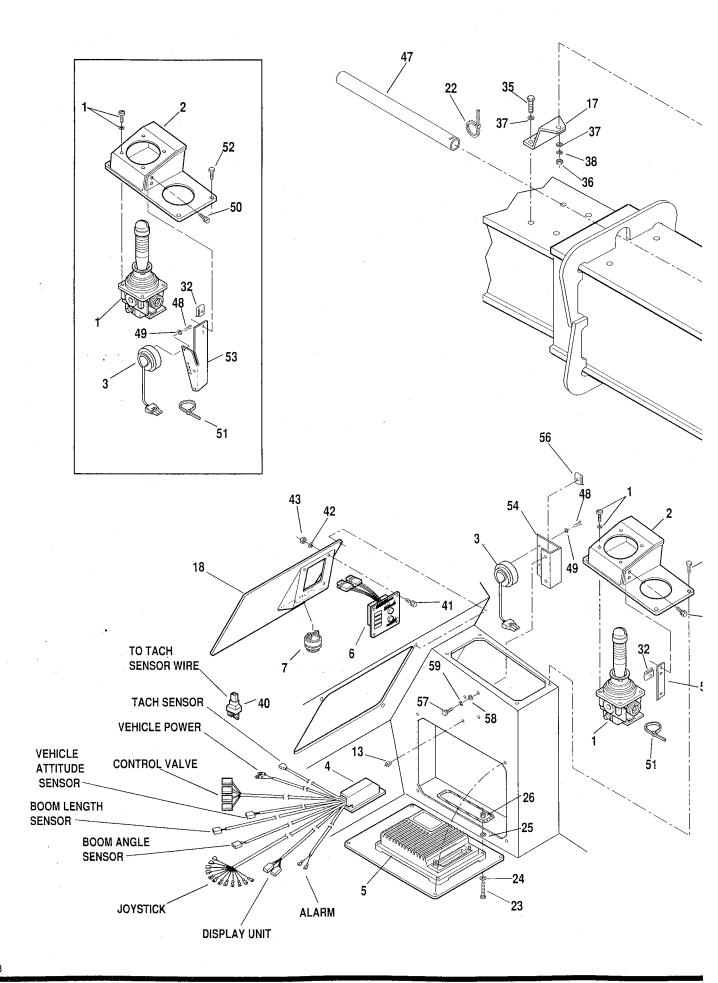

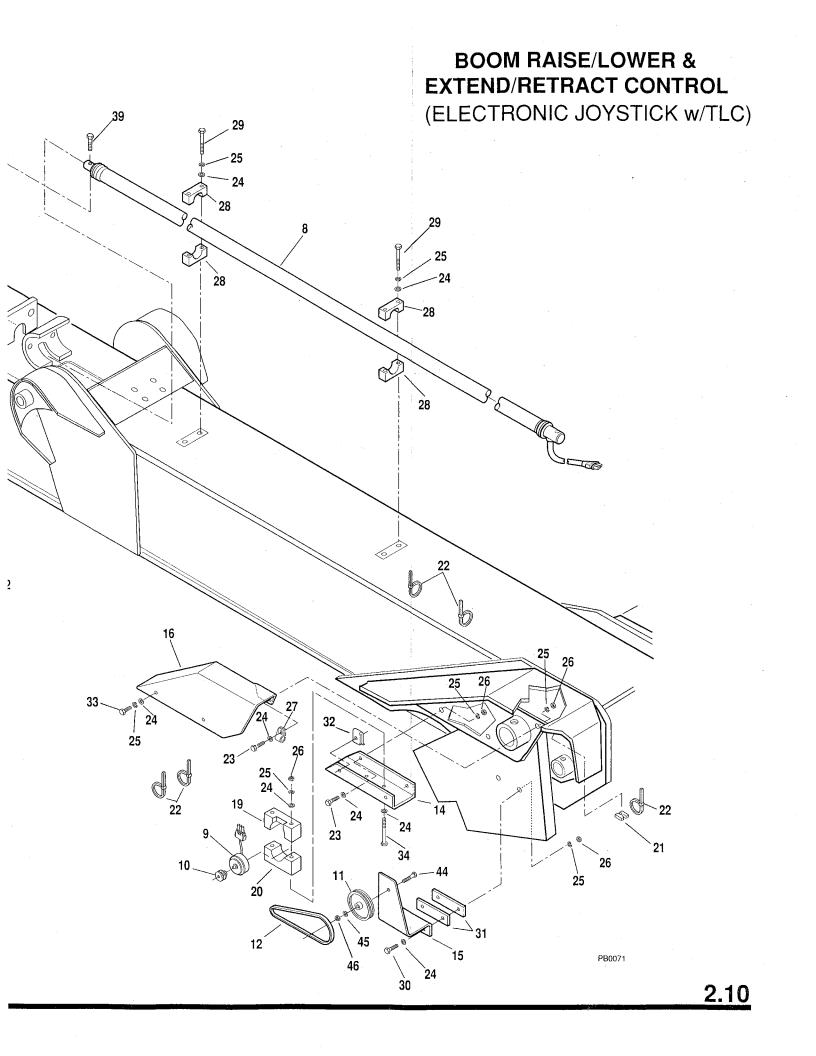

BOOM RAISE/LOWER & EXTEND/RETRACT CONTROL

(ELECTRONIC CONTROL JOYSTICK W/O TLC)

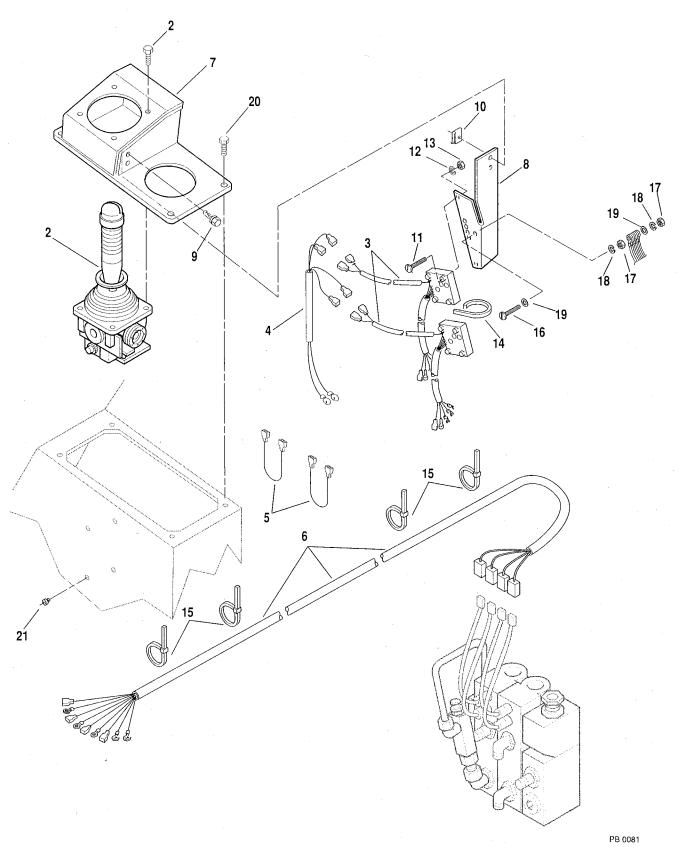


2.11

9038

BOOM RAISE/LOWER & EXTEND/RETRACT CONTROL (ELECTRONIC CONTROL JOYSTICK W/O TLC)

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21	7087383 8224016 7086762 7086752 7087361 7089322 7088533 7088952 8033119 8310023 8307050 8305049 8584001 8584002 8303932 8305002 8307003 8307111 8033058 8580313	1 1 2 1 2 1 1 1 2 2 4 4 4 1 4 1 2 2 2 4 4	Electronic Control Joystick (Includes items 2 thru 5) Joystick, Electronic (See Figure 7.9 for breakdown) Module, Driver Harness, Wire Wire Assembly Harness, Wire Cover, Console Bracket Screw, Hex Flanged, 1/4-20 x .625 Nut, Retainer, 1/4-20 Screw, Mach Pan Hd, #4-40 x 1.25 Lockwasher, #4 Nut, Hex, #4-40 Tie, Wrap Tie, Wrap Screw, Mach Rd Hd, #10-24 x 1.25 Nut, Hex, #10-24 Lockwasher, #10 Washer, Flat #10 Screw, Hex Hd Cap1/4-20 x 3/4 Plug, 7/16

FRAME LEVEL & GRILLE TILT CONTROL

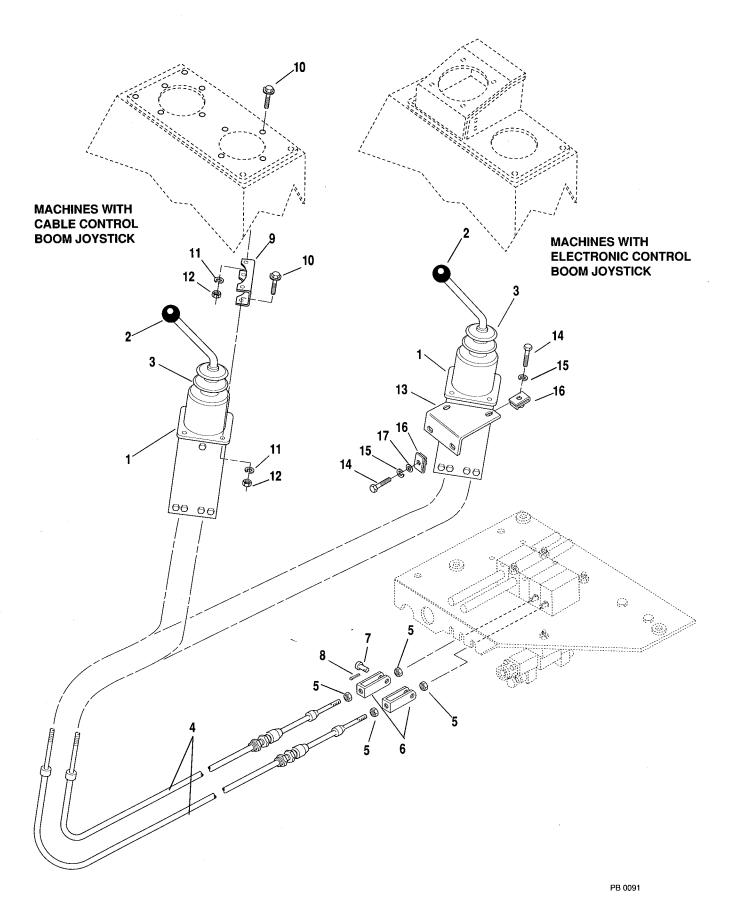


2.12

9038

FRAME LEVEL & GRILLE TILT CONTROL

Item No.	Part Number	Qty.	Description
1	7084543	1	Joystick (Includes Items 2 and 3)
2	8580110	1	Knob
3	8160419	1	Boot
4	8160060	2	Cable, Control, 30" Long
5	8305005	4	Nut, Hex 1/4-28 NF
6	8160617	2	Clevis, Cable
7	8301443	2	Pin Clevis, 3/16 x 1
8	8302470	2	Pin, Hair, 1/16
			FOR MACHINES WITH CABLE CONTROL BOOM JOYSTICK
9	7080942	2	Spacer
10	8303553	8	Screw, Flange Hd, 1/4-20 x 1-1/4
11	8307002	8	Lockwasher 1/4
12	8305004	8	Nut, Hex 1/4-20
	:		FOR MACHINES WITH ELECTRONIC CONTROL BOOM JOYSTICK
13	7088942	2	Bracket
14	8310026	8	Screw, Hex Hd Cap, 1/4-20 x 3/4
15	8307002	8	Lockwasher 1/4
16	8310001	8	Nut, Retainer 1/4-20
17	8307202	4	Washer, Flat 1/4
1			


THROTTLE PEDAL CONTROL

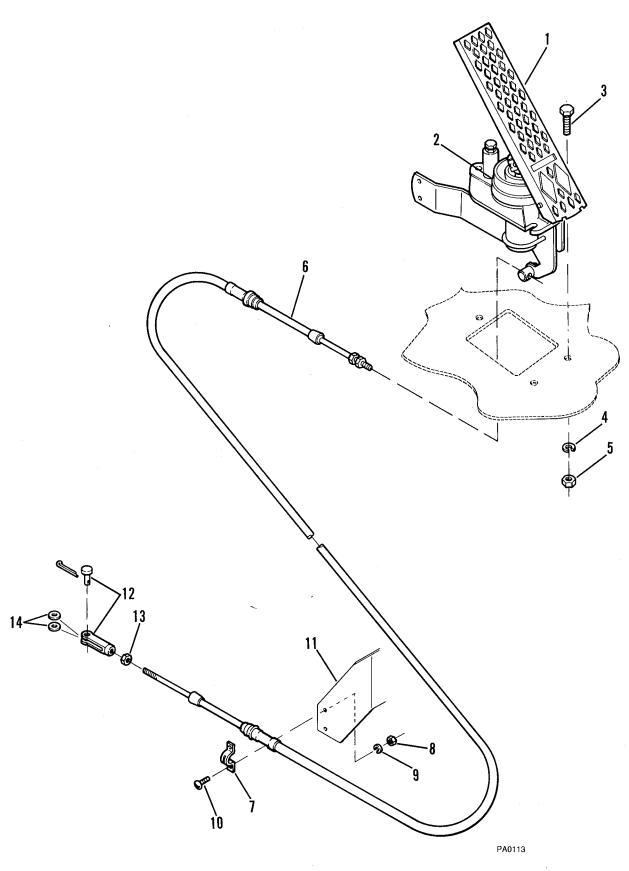

THROTTLE PEDAL CONTROL

Item No.	Part Number	Qty.	Description
1	8162003	1	Pedal, Throttle (Includes item 2)
2	8033178	1	Bellows, Throttle Pedal
3	8303553	3	Screw, Flange Hd, 1/4NC x 1-1/4 grade 5
4	8307002	3	Lockwasher 1/4
5	8303004	3	Nut, Hex, 1/4
6	8160046	1	Cable, Throttle (Perkins & John Deere)
	8160037	1	Cable, Throttle (Ford & Deutz)
7	8160610	1	Clamp Cable
8	8305002	4	Nut, Hex, #10-24
9	8307003	4	Lockwasher, #10
10	8303837	4	Screw, Round Hd, #10-24 x 3/4
11	7077782	1	Bracket, Throttle Cable (Perkins Shown)
	7090162	1	Bracket, Throttle Cable (Ford) (S/N 0A0660 and Before)
	7091892	1	Bracket, Throttle Cable (Ford) (S/N 0A0661 and After)
	7071132	1	Bracket, Throttle Cable (John Deere)
	7084482	1	Bracket, Throttle Cable (Deutz)
12	8301002	1	Clevis, 1/4-28 x 2 (w/pin)
13	8305402	1	Nut, Jam, 1/4NF
14	8307202	3	Washer, Flat, 1/4
15	7068711	1	Lever, Throttle Extension (Ford) (Not Shown) (S/N 0A0660 and Before Only)
	7084461	1	Lever, Throttle Extension (Deutz) (Not Shown)

SERVICE BRAKE PEDAL CONTROL

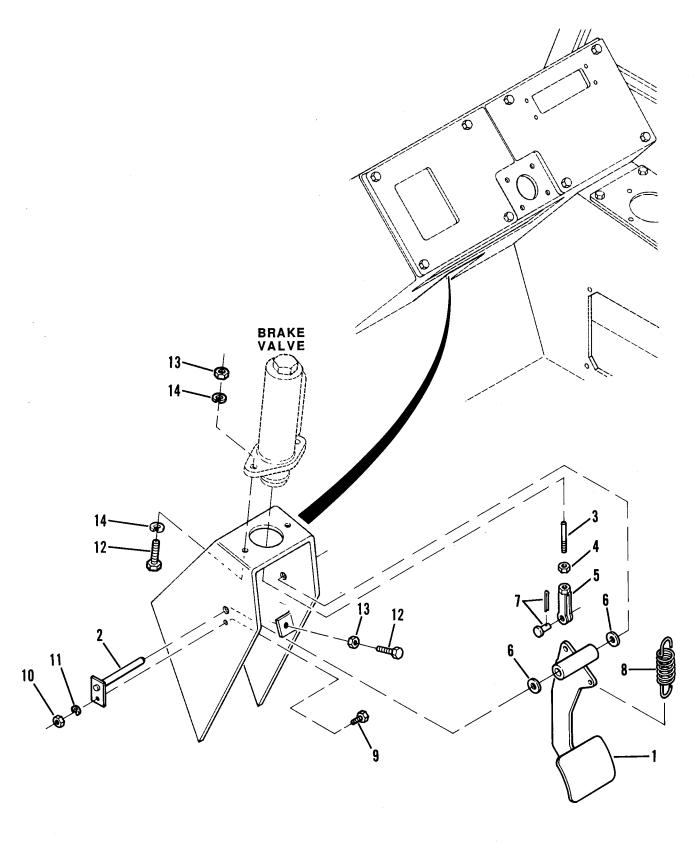


PA0113

SERVICE BRAKE PEDAL CONTROL

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13 14	7080853 7081031 7080891 8305410 8301210 8307104 8301410 8700120 8303615 8305004 8307002 8303534 8305405 8307005	1 1 1 1 2 1 1 1 1 3 2 3	Pedal, Brake Shaft Rod, Push Nut, Jam,1/2-20 Yoke Washer, Flat, 3/4 Pin, Clevis (w/cotter pin) Spring Screw, Cap, Hex Hd,1/4NC x 1-1/4 grade Nut, Hex, 1/4 Lockwasher,1/4 Screw, Cap, Hex Hd, 3/8NC x 1-1/4 Grade 5 Nut, Jam, 3/8 Lockwasher, 3/8

PARKING BRAKE CONTROL

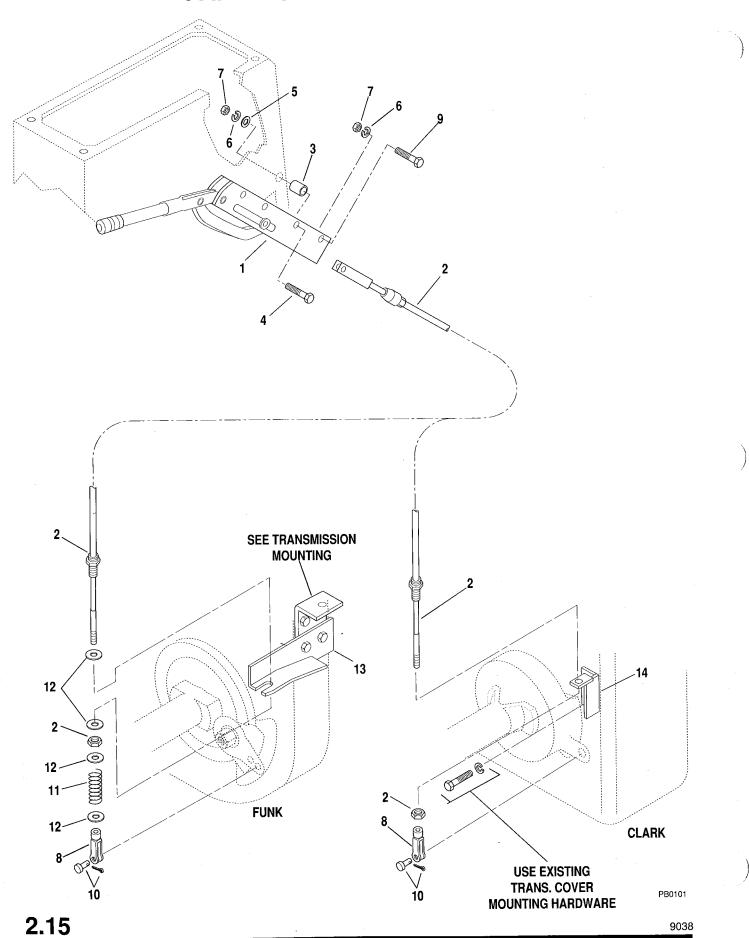


Origin 2/90

PARKING BRAKE CONTROL

Item	Part Number	Qty.	Description
No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14	8162206 7077003 7089641 8303766 8310053 8307004 8305006 8301004 8303715 8301409 8702140 8307107 7073612 7078162	1 1 2 2 2 3 3 1 1 1 4 1 1	Lever Assembly, Parking Brake Cable, Control Spacer Screw, Hex Hd Cap 5/16-18 x 2-3/4 Gr 5 Washer, Flat 5/16 Lockwasher, 5/16 Nut, Hex 5/16-18 Clevis Screw, Hex Hd Cap 5/16-18 x 1-1/2 Gr5 Pin, Clevis w/cotter Spring (Funk) Washer, Flat 5/8 (Funk) Bracket, Anchor (Funk) Bracket, Anchor (Clark)


WINDSHIELD WIPER

(OPTIONAL CLOSED CAB ONLY)

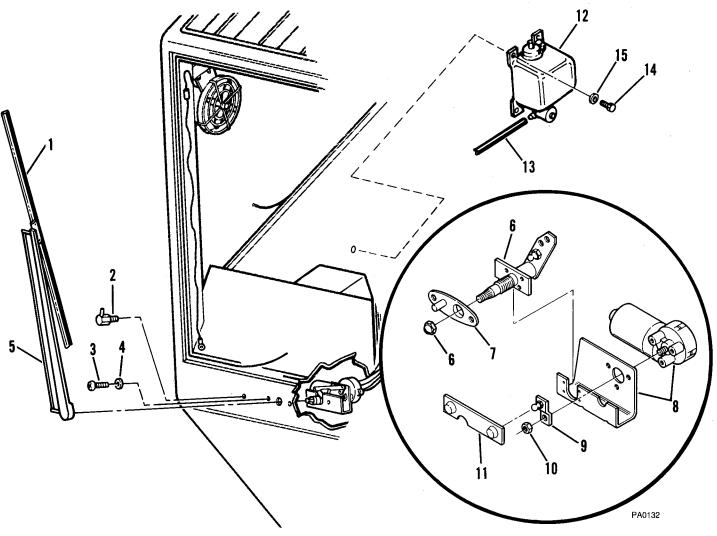


Item No.	Part Number	Qty.	Description
1	8866220	1	Blade, Wiper
2	8033101	1 1	Nozzle, Washer
3	8033110	2	Screw, 1/4-28 x 3/4
4	8307109	2	Washer, Flat, 1/4
5	8033048	1	Arm, Wiper
6	8866218	1	Shaft and Pivot Assembly
7	8033107	1 1	Adapter, Panto
8	8033049	1	Motor Assembly, Wiper
9	8866217	1	Arm, Drive
10	8305006	1	Nut, Hex, 5/16-18
11	8033104	1	Link, Connection
12	8033065	1	Washer Reservoir Assembly
13	8033075	1	Hose, Washer (120")
14	8033045	3	Bolt, 1/4-20 x 1/2
15	8307109	3	Washer, Flat 1/4

CAB HEATER

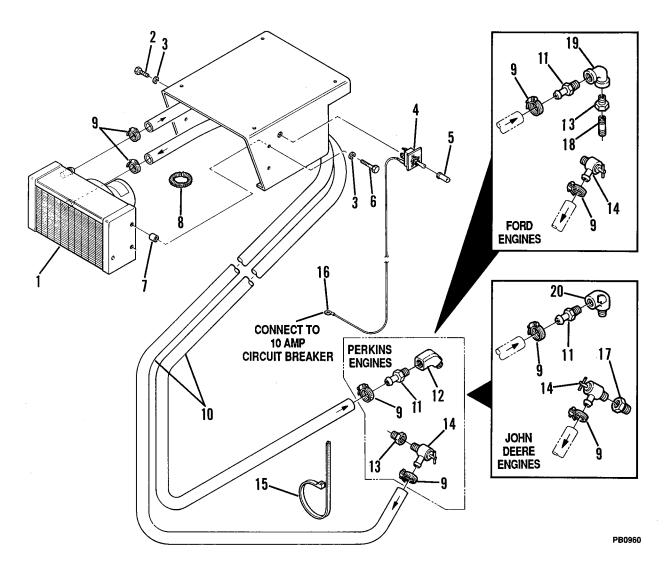

Item No.	Part Number	Qty.	Description
1	8360008	1	Heater (Includes Items 2 and 3)
2	N.S.S.	2	Screw, Cap, Hex Hd, 1/4-20 x 1/2
3	N.S.S.	4	Lockwasher, 1/4
4	8223024	1	Switch Kit
5	8580309	1	Cap
6	8303615	2	Screw, Cap, 1/4-20 x 1-1/4
7	7772035-0008	2	Spacer, 3/4
8	8221022-0050	2	Conduit, 1/4 ID x 5
9	8405007	4	Clamp
10	8401012-1340	2	Hose
11	8420201	1	Connector, Hose, 5/8 Hose x 1/2NPT
12	8540231	1	Elbow, 45° 1/2 NPT
13	8540023	1	Reducer, 3/8NPT x 1/2NPT
14	8360005	1	Valve, Shutoff
15	8584001	4	Tie Wrap
16	8220008	1	Terminal, #10
17	8540002	1	Bushing, Reducing 1 NPT x 3/8 NPT
18	8551203	1	Nipple, pipe 3/8 NPT x 1-1/2
19	8540263	1	Elbow, 90° pipe, 1/2 NPT
20	8540218	1	Elbow, 90° street, 1/2 NPT

AUXILIARY HYDRAULIC CONTROL (OPTIONAL)

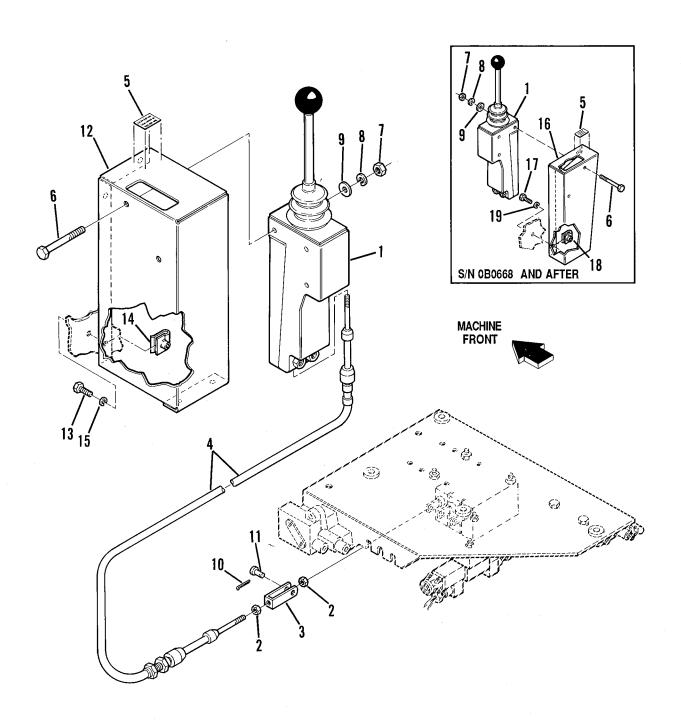


PB 0111

AUXILIARY HYDRAULIC CONTROL

(OPTIONAL)

Item No.	Part Number	Qty.	Description
1	8160406	1	Controller, Auxiliary Hydraulics
2	8305005	2	Nut, Jam, 1/4-NF
3	8160617	1	Clevis, Cable
4	8160059	1	Cable
5	4105621	1	Decal
6	8303758	2	Screw, Cap, Hex Hd, 1/4-20 x 2
7	8305004	2	Nut, Hex, 1/4-20
8	8307002	2	Lockwasher, 1/4
9	8307109	2	Flat Washer, 1/4
10	8302470	1	Pin, Hair
11	8301443	1	Pin, Clevis
			Items 12 thru 15 S/N 9A0550 thru S/N 0B0667
12	7085403	1 1	Support, Controller
13	8303697	5	Screw, Hex Hd Cap, 5/16-18 x 3/4
14	8305906	5	Nut, Retainer
15	8307004	5	Lockwasher 5/16
			Items 16 thru 19 S/N 0B0668 And After
16	7091323	1	Support, Controller
17	8303697	3	Screw, Hex Hd Cap, 5/16-18 x 3/4
18	8305906	3	Nut, Retainer
19	8307004	3	Lockwasher 5/16
		:	
1			
1 1			
[]			
] .]			
]			

CONVERTER AND TRANSMISSION HOUSINGS (FUNK)

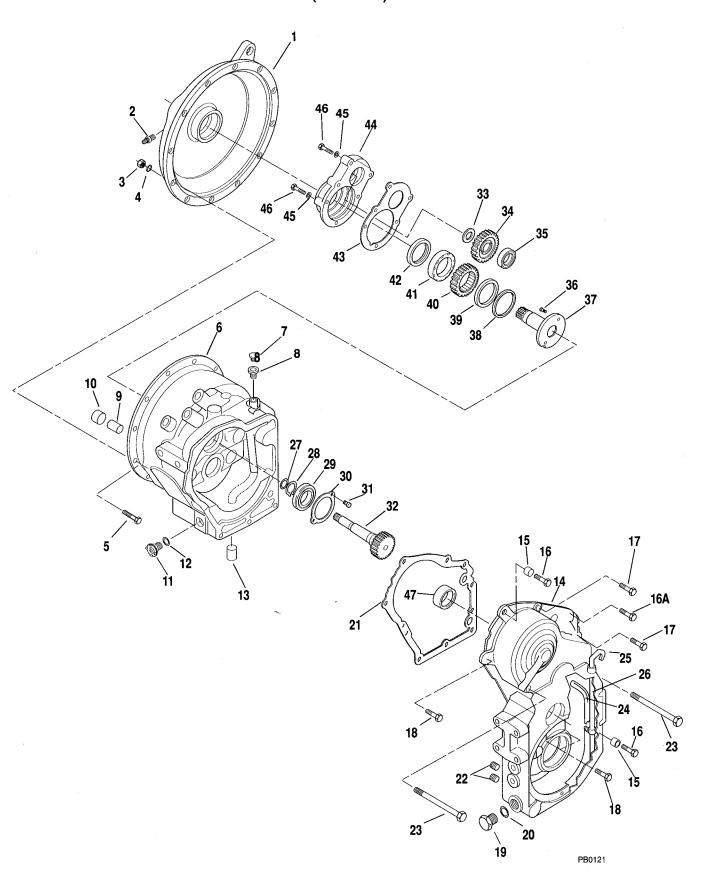


CONVERTER AND TRANSMISSION HOUSINGS

(FUNK)

Item		_	(1.0141.4)
No.	Part Number	Qty.	Description
1	CF4001899	1	Cover, Input
2	CFF66012S	1	Fitting, Grease
3	CFF13005000	12	Nut, Hex
4	CFF15003	12	Lockwasher, External Tooth
5	CFF1003028	12	Capscrew
6	CF4005430	1	Front Housing Assembly
7	CFF68105	1	Breather
8	CFF321006	. 1	Bushing, Reducer
9	CF40A1556	1	Converter Release Valve Assembly
10	CFF1900316	1	Plug, Pipe
11	CF40A6018	1	Plug, Sump Screen
12	CF4006404	1	Gasket
13	CFF1900312	1	Plug, Pipe
14	CF4104019	1	Rear Housing Assembly
15	CF4001123	2	Bushing, Locating
16	CFF1005032	1	Capscrew
16A	CFF1005028	1	Capscrew
17	CFF1005040	2	Capscrew
18	CFF1005036	4	Capscrew
19	CF4004531	1	Drain Plug Assembly
20	CFF37060916	1	O-Ring
21	CF4104067	1	Gasket, Main
22	CFF190034	2	Plug, Pipe
23	CFF1005088	2	Capscrew
24	CF4004530	1	Tube, Suction
25	CF4104010	1	Dipstick
26	CF4005072	1	Tube, Dipstick
27	CF4000855	1	Ring, Seal
28	CFF39010156	1	Ring, Snap
29	CFF41308R	1	Bearing
30	CF4004100	1	Retainer, Plate
31	CFF100108	2	Capscrew
32	CF4004990	1	Shaft, Input (23T)
33	CFF5551625	1	Thrust, Race
34	CF4004111	1	Gear, Aux. Pump
35	CFF621305K	1	Bearing
36	CFF1121810	2	Screw, Cap
37	CF40A4009	1	Support, Turbine Stator
38	CFF5524458]	Race, Thrust
39	CFF5514458	1	Bearing, Needle Thrust
40	CF4004112	1	Gear, Aux. Pump Drive
41 42	CF4003001		Bearing Seel Oil
42	CF4003091	! 4	Seal, Oil
43	CF4004700 CF4004119		Gasket, Housing
45	CF4004119 CFF18002	1	Housing, Impeller Gear Washer
46	CFF1002032	6 6	
47	CF4005296	1	Screw, Cap Sleeve Bore, Rear Cover
7′	01 7000280	'	Oleeve Dule, Fiedi Guvel
Ц	<u>_</u>		

CONVERTER GROUP

(FUNK)

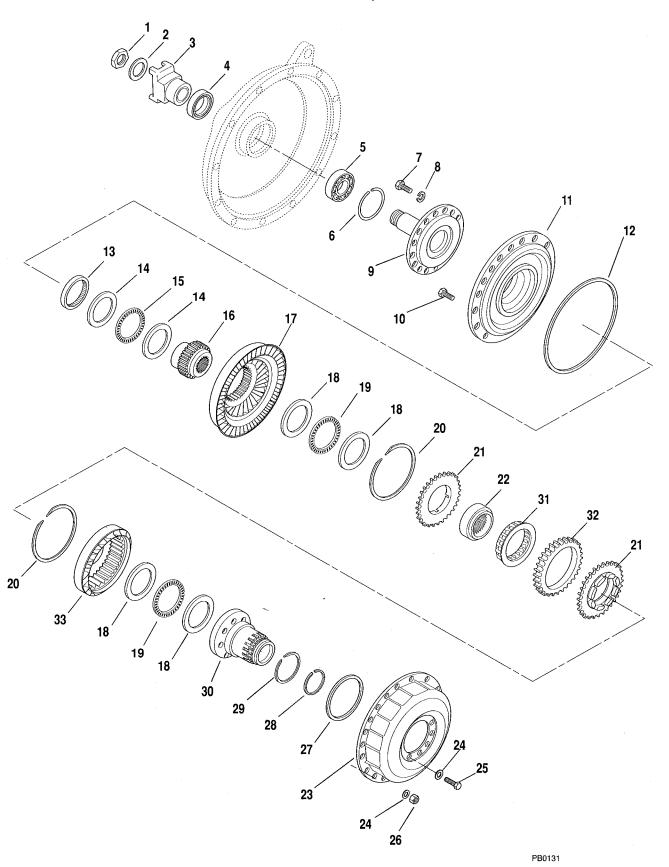


CONVERTER GROUP

(FUNK)

Item	Part Number	Qty.	Description
No.			
1 2	CFF79117G5	1	Nut
3	CF4005552 CF4101231	1	Washer, Flat
4	1 1	1	Yoke, Front
5	CFF65181 CFF40208S	1 1	Seal, Oil
6	CFF39000315	1	Bearing Bing Span
7	CFF1003020	12	Ring, Snap
8	CFF16202	12	Screw, Cap Lockwasher
9	CF4145198	1	Shaft, Converter Input
10	CFF1002520H8NP		Capscrew
11	CF4045767	1	Front Cover Assembly
12	CF4045236	1	Seal
13	CFF460268	1	Bearing
14	CFF5543244	2	Race, Thrust
15	CFF5503244	1	Bearing, Needle Thrust
16	CF4045887	1	Hub, Turbine
17	CF4045884	1	Turbine
18	CF4045901	4	Washer, Thrust
19	CFF5513650	2	Bearing, Needle Thrust
20	CF4003456	2	Ring, Internal Retaining
21	CF4045899	2	Retainer, Clutch
22	CF4045493	1	Race, Inner Clutch
23	CF4045577	1	Impeller
24	CF4003680	28	Washer, Flat
25	CFF100208	8	Bolt, Place
26	CFF1300400U	20	Nut, Hex
27	CFF37010045	1	O-Ring
28	CF4000497	1	Seal, Ring
29	CFF80100231	1	Ring, Retaining
30	CF4045607	1	Hub, Impeller
31	CF4045081	1	Sprag Clutch Assembly
32	CF4045726	1	Race, Outer Clutch
33	CF4045911	1	Stator
ļ			
1			
ŀ		· ·	
	1		
Ė			
		,	
L			

TRANSMISSION IDLER, PUMP, OUTPUT & BRAKE

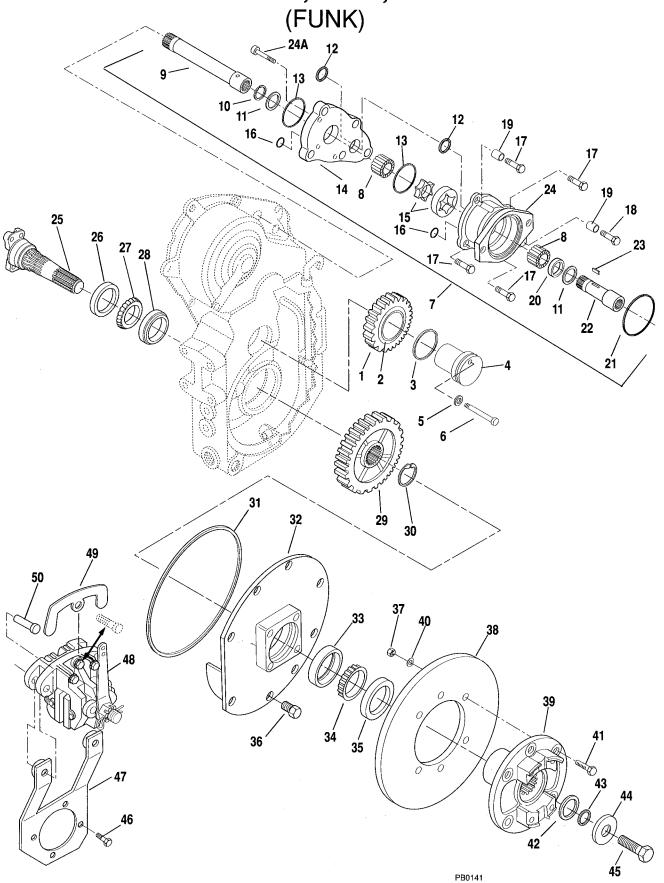


TRANSMISSION IDLER, PUMP, OUTPUT & BRAKE

(FUNK)

1	(1 01414)			
Item No.	Part Number	Qty.	Description	
1	CF4004519	1	Gear, Idler	
2	CFF58602	1	Bearing	
3	CFF37030231	1	O-Ring O-	
4	CF4004518	1	Shaft, Idler	
5	CFF18005	1	Washer	
6 I	CFF1005088	1	Capscrew	
7	CF40A4282	1	Pump Assembly (Includes Items 8 thru 24A)	
8	CFF460168	2	Bearing	
9	CF4004952	1	Drive Shaft Assembly	
10	CFF81598	1	Ring, Retaining	
11	CFF5531625	2	Race, Thrust	
12	CFF37030220	2	O-Ring	
13	CFF37020152	2	O-Ring	
14	CF40A4279	1	Plate, Wear	
15	CF4003256	1	Gerotor, Pump	
16	CFF37010014	2	O-Ring _	
17	CFF1003036	4	Screw, Cap	
18	CFF1003040	1	Screw, Cap	
19	CF4004464	2	Bushing, Locating	
20	CFF65257	1	Seal, Oil	
21 22	CFF37030242	1	O-Ring	
23	CF40A4148	1	PTO Šhaft Assembly Key, PTO Shaft	
23	CF4004339	1	Ney, PTO Strait	
24A	CF40A4281 CFF1141412	1 2	Housing, Pump PTO Screw, Soc Head	
25	CF4004551	1	Shaft, Output	
26	CFF65239	1	Seal, Oil	
27	CFF58051	i	Cone, Bearing	
28	CFF58544	i	Cup, Bearing	
29	CF4004550	1	Gear, Output	
30	CFF39010287	1	Ring, Snap	
31	CFF37030276	1	O-Ring	
32	CF4004731	1	Retainer, Bearing	
33	CFF58540	1	Cup, Bearing	
34	CFF58047	1	Cone, Bearing	
35	CFF65270	1	Seal, Oil	
36	CFF1005020	8	Capscrew	
37	CFF13006000	6	Nut, Hex	
38 39	CF40A4255	1	Disk, 11" Yoke	
40	CF4004545 CFF16202	1 6	Washer, Lock	
41	CFF10202 CFF1003520	6	Capscrew	
42	CF4004534	1	Shim Pack (Includes 2 of each of the following sizes-	
	255 .65 .	·	.002, .003, .005, .010, & .020)	
43	CF4001217	1	O-Ring, Flange	
44	CF4010464	1	Washer, Yoke	
45	CFF1007520H8	1	Screw,Cap	
46	CFF1005024	4	Capscrew	
47	CF40A4254	1	Bracket, Support	
48	CF4003783	1	Caliper Assembly w/Pads	
49	CF40A1311	1	Retainer, Pin	
50	CFF2400775	2	Pin, Clevis	
			WITO	
			<u>KITS</u>	
	8102406	1	Service Kit, Brake Pads	

TRANSMISSION GEAR AND CLUTCH (FUNK)

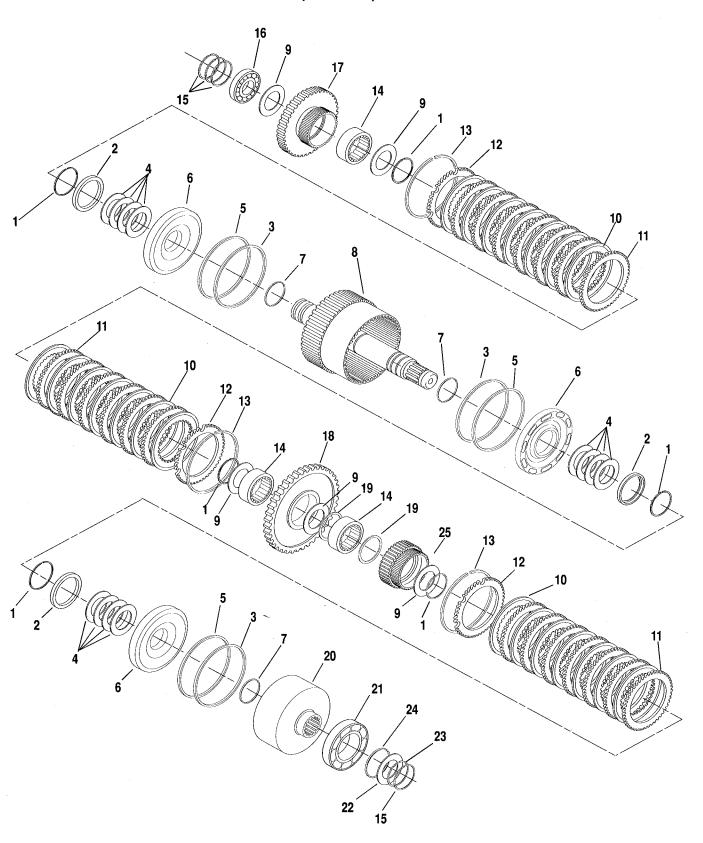


PB0151

TRANSMISSION GEAR AND CLUTCH

(FUNK)

			(1 01411)
Item No.	Part Number	Qty.	Description
	CFF81687 CF4004957 CF4005413 CF4007180 CF4104077 CF4104012 CFF37020131 CF4005322 CF4004144 CF4005524 CF400855 CF4003640 CFF4003640 CFF400316 CFF4004184 CFF400411 CFF81500225 CF40A4034 CFF40211 CFF5532435 CFF81650 CFF37020129 CF4004670	Oty. 6 3 3 12 3 3 1 5 21 21 3 3 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Ring, Retainer Retainer Seal, Lip Ring Spring Ring, Backup Piston, Clutch O-Ring Clutch Shaft Assembly Washer, Thrust Plate, Clutch Plate, Clutch Separator Retainer, Clutch Ring, Snap Bearing Seal, Ring Bearing Gear & Hub Assembly (53T) Ring, Snap Hub Clutch Assembly Bearing Race, Thrust Ring, Snap O-Ring Gear & Hub Assembly Gear & Hub Assembly
			Godi d Tibo / Goothisty (211)

TRANSMISSION GEAR AND CLUTCH 2nd STAGE (FUNK)

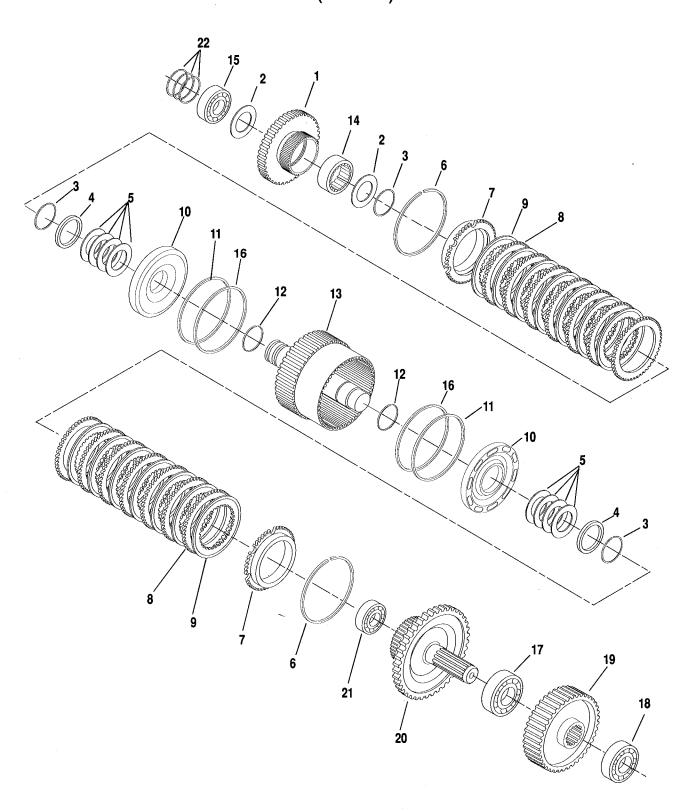


PB0161

TRANSMISSION GEAR AND CLUTCH 2nd STAGE

(FUNK)

Item No.	Part Number	Qty.	Description
1	CF4004161	1	Gear & Hub Assembly (33T)
2	CF4004144	2	Washer, Thrust
3	CFF81687	3	Ring, Retainer
4	CF4004957	2	Ring, Ret. Snap
5	CF4007180	8	Spring
6	CF4003640	2	
7	CF4003640 CF4004839	2	Ring, Snap
8	CF4004839 CF40RC7951	14	Retainer, Clutch
9	CF40AC7951	14	Plate, Clutch Separator Plate, Clutch
10	CF4104012		
11	CF4104072	2 2	Piston, Clutch
12	CFF37020131		Ring, Backup
)	2 1	O-Ring
13 14	CF4005321	1	Outer Shaft Assembly
15	CF4903016		Bearing
16	CF4003778 CF4005413	1 2	Bearing
			Seal, Ring
17	CFF621309W	1	Bearing
18	CFF41209	1	Bearing
19	CF4004520	1	Gear, (36T)
20	CF4004507	1	Shaft & Gear Assembly
21	CFF40108	1	Bearing
22	CF4000855	3	Seal, Ring
	1		
			•
	 		
	1		
			·
ł	i		

CONTROL VALVE ASSEMBLY (FUNK)

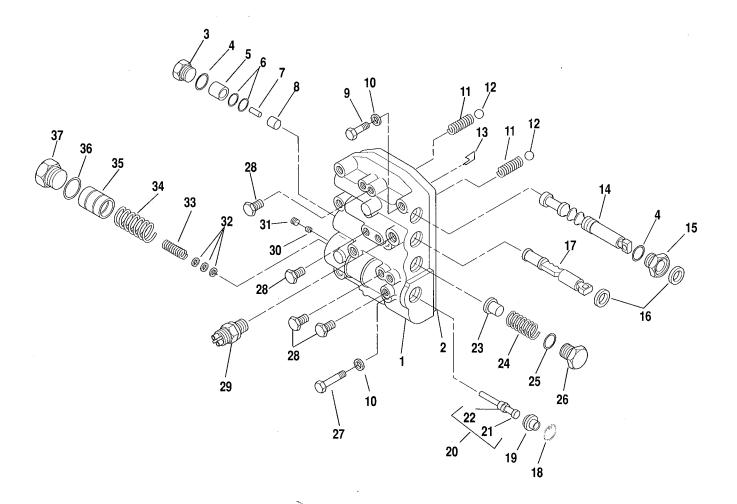


PB 0171

CONTROL VALVE ASSEMBLY

(FUNK)

Item No.	Part Number	Qty.	Description
1	CF4005006	1	Valve Body
2	CF4104020	1	Gasket, Valve Body
3	CF4004248	1	Plug, Brake Cutoff
4	CFF37060916		O-Ring
5	CF40A4291	1	Piston
6	CF4004237	2	O-Ring
7	CFF56870	1	Needle, Roller
8	CF4004236	1	Valve, Press. Regulator
9	CFF1002036	7	Screw, Cap
10	CFF17030516	10	
11	CF4001079		Washer, Flat
		2	Spring, Detent
12	CFF7400012D	2	Ball
13	CF4004699	1	Fork, Stop
14	CF4004737	1	Stem Assembly
15	CF4001091	1	Plug
16	CFF65227	2	Seal, Oil
17	CF4004698	1	Stem
18	CFF3900093	1	Ring, Snap
19	CF40A4229	1	Seat
20	CF40A4259	1	Poppet Assembly (Includes items 21 & 22)
21	CF40A4258	1	Poppet
22	CFF3901037	1	Ring, Snap
23	CF4001617	1	Guide, Spring
24	CF4004240	1	Spring, Return Feathering
25	CF4001284	1	O-Ring
26	CF4001618	1	Plug, Spring Return
27	CFF1002044	3	Screw, Cap
28	CFF190012	4	Plug, Pipe
29	CFF91001	1	Switch, Neutral Start
30	CF4004247C	1	Plug, Orifice
31	CFF190032	1	Plug, Pipe
32	CF4004993	3	Spacer, Spring
33	CF40A4252	1	Spring, Main Reg.
34	CF4004243	1	Spring, Accumulator
35	CF40A4046	1	Piston, Accumulator
36	CFF37060916	1	O-Ring
37	CF4001080	1	Plug, Dump Valve
·	3. 1001000	•	riog, bump vaivo
.]			
ļ			
ļ			
ļ			
		i	

CONVERTER AND TRANSMISSION HOUSINGS

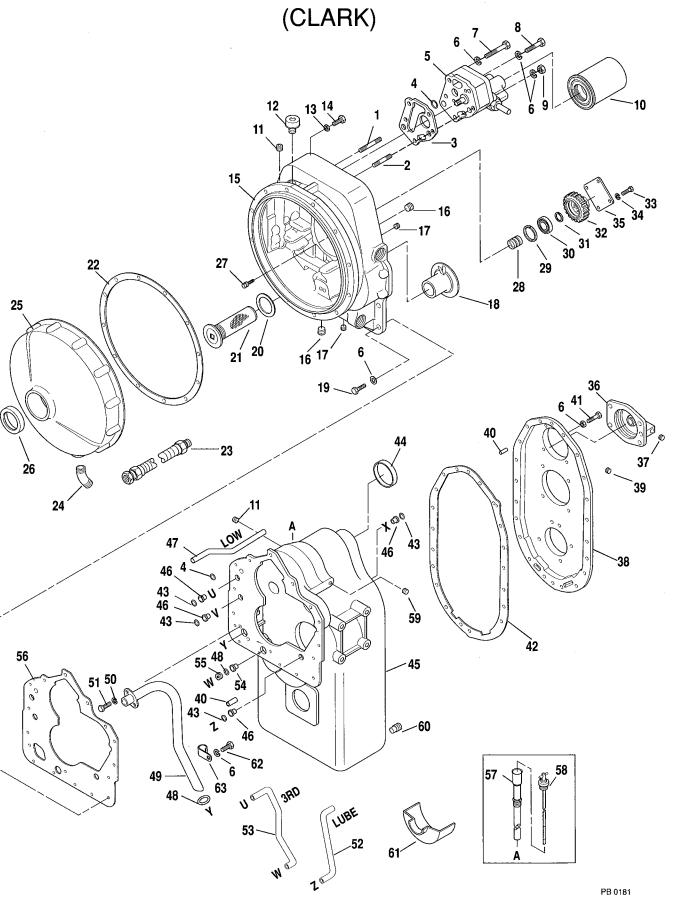


<u>3.7</u>

CONVERTER AND TRANSMISSION HOUSINGS

(CLARK)

lan m		I	<u> </u>
Item No.	Part Number	Qty.	Description
1 1	8032510	1	Stud, Pump Mounting
2	8032511	i	Stud, Pump Mounting
3	8032500	l i	Gasket, Pump to Converter Housing
4	8032501	2	O-Ring
5	8032502	1	Charging Pump Assembly
6	8032503	42	Lockwasher
7	8032504	i	Screw
8	8032505	2 2	Screw
9	8032506	2	Nut, Stud
10	8320254	1	Filter Assembly
11	8032508	2	Plug, Pipe
12	8032509	1	Breather, Air
13 14	8032561	11	Lockwasher
15	8032547 8032548	11 1	Screw Housing, Converter
16	8032515	ر ا	Plug, Pipe
17	8032516	2 2	Plug, Pipe
18	8032517	1	Sleeve, Converter Housing
19	8032520	16	I Screw
20	8032519	1	Gasket, Screen
21	8032518	1	Screen Assembly
22	8032549	1	Gasket, Front Cover
23	8033188	1	Drain Hose Assembly
24	8033189	1	Adaptor, Hose
25	8033193	1 1	Cover, Converter Housing Front
26	8033198	1	Seal, Front Cover Oil
27	8032541	2	Screw and Lockwasher
28 29	8032542	1	Support, Bearing
30	8032543 8033199	1 1	Ring, Retaining Bearing, Pump Drive Gear
31	8032545		Bearing, Fump brive dear Ring, Locating
32	8032546	i	Gear, Drive
33	8033296	غ ا	Capscrew
34	8033297	2 2	Lockwasher
35	8033298	1	Cover, Pump Mounting
36	8033299	1	Rear Brg. Cap Assembly, Low Shaft (Includes item 37)
37	8032526	1	Plug
38	8033300	1	Rear Cover and Plug Assembly (Includes item 39)
39	8032516	1	Plug, Pipe
40	8032521	3	Pin, Dowel
41 42	8033301	20	Screw
43	8033302 8032523	1 4	Gasket, Rear Cover to Case O-Ring
44	8033303	1	Plug, Bore
45	8033314	1	Transmission Case Assembly (Includes items 46 thru 55)
46	8032522	4	Sleeve, Tube
47	8032538	1	Tube, Pressure
48	8032532	2	O-Ring
49	8033304	1	Suction Tube Assembly
50	8032535	2 2	Lockwasher
51	8032536	2	Screw
52	8033305	1	Lube Tube, Clutch
53 54	8033306	1	Tube, Third Speed
55	8033307 8033308	1	Sleeve, Tube Plug, Pressure
56	8032537		Gasket, Housing to Case
57	80333309	li	Tube Assembly, Dipstick
58	8033310	i	Dipstick
59	8032539	Ιi	Plug, Pipe
60	8032528	2	Plug, Drain
61	8033311	1	Baffle, Oil
62	8033312	1	Screw
63	8033313	1	Clip, Suction Tube
L	L	L	L

CONVERTER GROUP

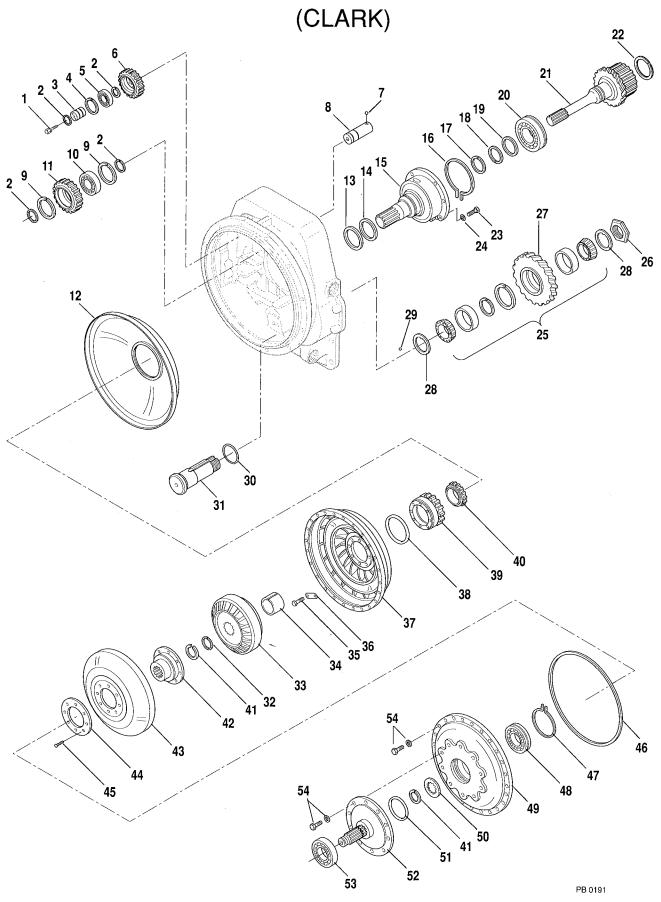


CONVERTER GROUP

(CLARK)

'		Qty.	Description
1	8032541	2	Screw & Lockwasher, Bearing Support
2	8032545	4	Ring, Locating
3	8032542	1	Support, Bearing
4	8032550	1	Ring, Retaining
5	8032551	1	Bearing, Gear
6	8032552	1	Gear, Pump Drive
7	8032554	1	Lockball, Stub Shaft
8	8032555	1	Shaft, Stub
9	8042543	2	Ring, Retaining
10	8033199	1	Bearing Shaft
11	8032553	1	Gear , Idler
12	8032556	1	Oil Baffle Assembly
13	8032558	1	Ring, Piston
14	8032559	1	Spring, Expander
15	8032560	1	Support, Stator
16	8032563	1	Ring, Snap
17	8032564	1	Ring, Piston
18	8032565	1	Ring, Retaining
19	8032566	1	Washer, Locating
20	8032567	1	Bearing, Shaft
21	8032568	1	Turbine Shaft & Ret. Ring (Includes Item #22)
22	8032620	1	Ring, Retaining
23	8032562	6	Screw, Stator Support
24	8032561	6	Lockwasher, Stator Support
25	8032574	1	Rev. Idler Gear Bearing Assembly
26	8033195	1	Nut, Ret. Plate
27	8032573	1	Gear, Idler
28	8033194	2	Plate, Thrust
29	8033192	1	Lockball, Idler Shaft
30	8033191	1	O-Ring, Idler Shaft
31	8033190	1	Shaft, Reverse Idler
32	8032578	1	Ring, Retaining
33	8032579	1 1	Member, Reaction
34	8032580	1	Spacer, Impeller to Hub Bearing
35	8032581	8	Screw, Impeller to Hub
36	8032582	4	Locktab, Impeller to Hub Bearing
37	8032583	1	Impeller
38	8032584	1	O-Ring, Impeller Hub
39	8032585	1	Gear, Impeller Hub
40	8032586	i	Bearing, Gear
41	8032587	2	Ring, Retaining
42	8032588	1	Hub, Turbine
43	8032589	li	Turbine
44	8033196	ĺi	Ring, Screw
45	8033197	12	Screw, Turbine to Hub
46	8032595	1	O-Ring, Impeller to Cover
47	8032592	1	Ring, Locating
48	8032593	1	Bearing, Hub
49	8033384	1	Cover, Impeller
50	8032594	'1 .	Washer, Retaining
51	8033385		O-Ring, Input Shaft
52	8033386		Shaft, Input
53	8033373		Bearing, Input Shaft
54	8032597	34	Screw & Washer Assembly
	3002007		on on a magnor mooning


TRANSMISSION GEAR GROUPS —FORWARD, REVERSE, LOW & 2ND (CLARK)

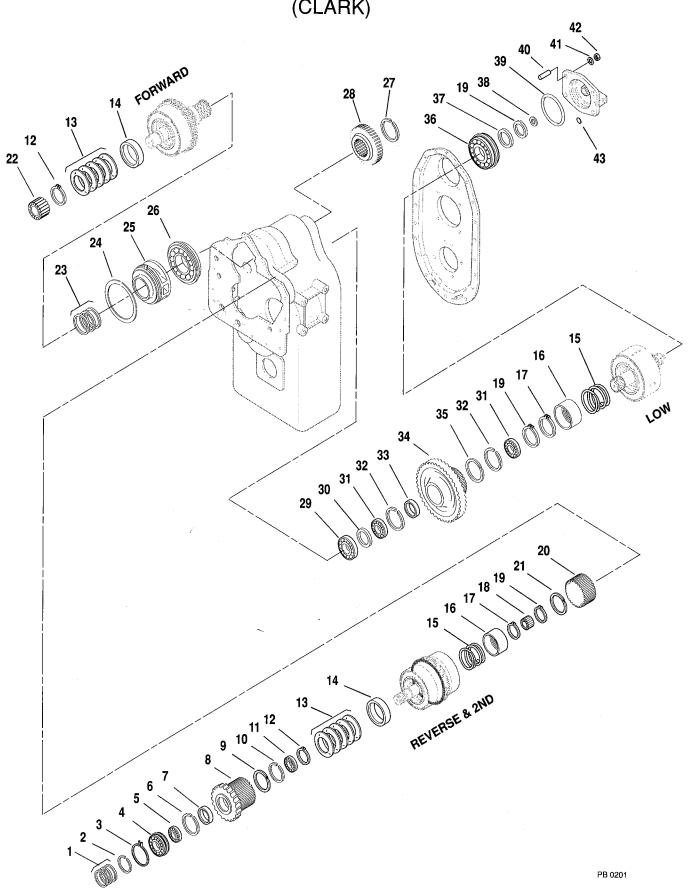

TRANSMISSION GEAR GROUPS—FORWARD, REVERSE, LOW & 2ND (CLARK)

Item No.	Part Number	Qty.	Description
140.			
1 1	8032652	3	Ring, Piston
2	8032651	1	Ring, Retaining
3	8032650	1	Ring, Snap
4	8032649	1 ,	Bearing, Front
5	8032648	1	Bearing, Gear
6	8032645	1	Ring, Retaining
7	8032647	1	Spacer, Bearing
8	8032646	1	Rev. Clutch Gear & Ret. Ring Assembly (Includes Item 9)
9	8032620	1	Ring, Retaining
10	8032645	1	Ring, Retaining
11	8032644	1	Bearing, Gear
12	8032640	2	Ring, Snap
13	8032639	10	Spring, Return
14	8032638	2	Spacer, Spring
15	8032615	2	Spring, Return
16	8032616	2	Retainer, Spring
17	8032617	2	Ring, Snap
18	8032643	1	Bearing, Rear
19	8032623	3	
20	8032642	1	Ring, Snap
21	8032620		2nd Clutch Gear & Ret. Ring Assembly (Includes Item 21)
22		1	Ring, Retaining
23	8032641	1	Bearing, Pilot
	8032637	3	Ring, Piston
24	8033355]	Ring, Retaining
25	8032635	1	Sleeve, Ring
26	8032634	1	Bearing, Rear
27	8033356	1	Ring, Retaining
28	8033357	1	Gear, Forward Shaft
29	8032633	1	Bearing, Front
30	8032632	1	Spacer, Bearing
31	8032628	2	Bearing, Gear
32	8032629	2	Ring, Locating
33	8032631	1	Spacer, Gear
34	8033358	1	Low Shaft Gear, Hub & Ret. Ring Assembly (Includes Item 35)
35	8032620	1	Ring, Retaining
36	8032622	1	Bearing, Rear
37	8032566	1	Washer, Support
38	8032614	1	Ring, Piston
39	8032624	1	O-Ring, Cap
40	8032626	4	Stud, Cap
41	8032503	4	Lockwasher, Stud
42	8032506	4	Nut, Stud
43	8032625	1	O-Ring, Cap
	1		
	!		
	İ		

TRANSMISSION GEAR GROUPS — OUTPUT, IDLER & THIRD (CLARK)

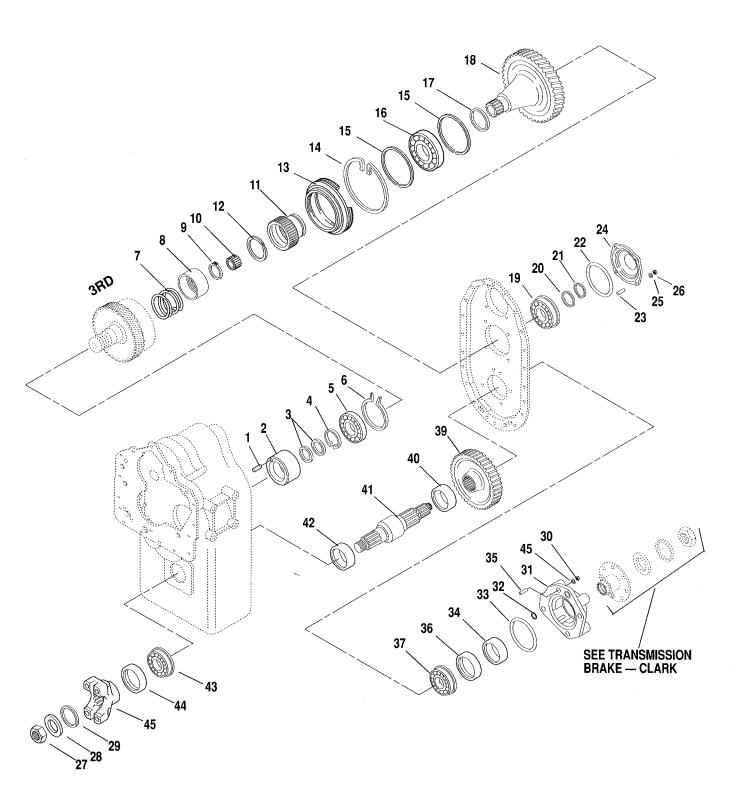

PB 0211


TRANSMISSION GEAR GROUPS — OUTPUT, IDLER & THIRD

(CLARK)

) [Item			
	No.	Part Number	Qty.	Description
	1	8033353	1	Pin, Roll
	2	8033352	1	Race, Piston Ring Outer
	3	8032652	2	Ring, Piston
	4	8033350	1	Ring, Retaining
	5	8032628	1	Bearing, Front
	6	8033351	1	Ring, Locating
	7	8032615	1	Spring, Return
	8	8032616	1	Retainer, Spring
	9	8032617	1	Ring, Snap
	10	8032643	1	Bearing, Pilot
	11	8033359	1	3rd Clutch Disc Hub & Ret. Ring Assembly (Includes Item #12)
İ	12	8032620	1	Ring, Retaining
ĺ	13	8033360	1	Carrier, Bearing
	14	8033361	1	Ring, Locating
	15	8033362	2	Ring, Locating
	16	8033363	1	Bearing, Hub
	17	8033364	1	Ring, Retaining
	18	8033370	1	Idler Gear & Shaft Assembly
	19	8033365	1	Bearing, Rear
	20	8033366	1	Washer, Support
	21 22	8033367	1	Ring, Retainer
	23	8033368 8032626	1 4	O-Ring, Cap
$) \mid$	23 24	8033369	1	Stud, Cap Cap, Bearing
	25	8033509	4	•
	26	8032506	4	Lockwasher, Bearing Cap Nut, Bearing Cap
	27 27	8033372	1	Nut, Flange
	28	8033371	1 1	Washer, Flange
	29	8032611	1	O-Ring, Flange
	30	8032609	4	Nut, Stud
	31	8033378	1	Cap, Rear Bearing
	32	8033379	1	O-Ring, Cap
	33	8033380	1	O-Ring, Cap
	34	8033381	1	Spacer, Bearing to Flange
	35	8032627	4	Stud, Cap
	36	8032605	1	Seal, Oil
	37	8032604	1	Bearing, Rear
	38	8033375	1	Gear, Output Shaft (46T)
	39	8033376	1	Spacer, Gear
	40	8033377	1	Shaft, Output
	41	8033374	1	Spacer, Gear
	42	8033373	1	Bearing, Front
	43 44	8033198 8033383	1	Seal, Oil
	45	8032608	4	Flange, Front Output
	40	0002006	4	Lockwasher
\		ļ		
)				
	-	<u> </u>		

TRANSMISSION CLUTCH GROUPS

(CLARK)

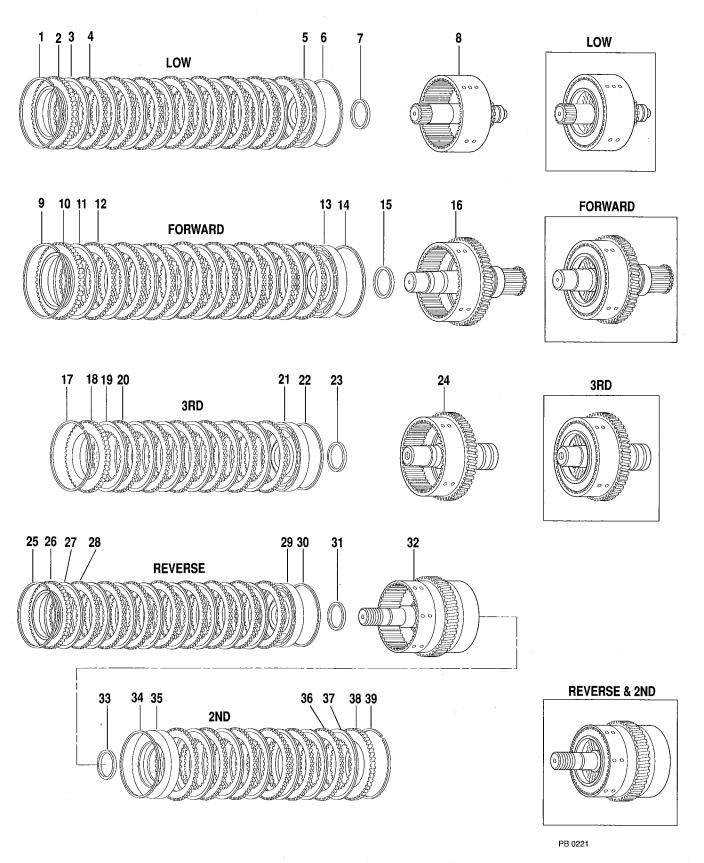


TRANSMISSION CLUTCH GROUPS

(CLARK)

No.	Part Number	Qty.	Description
1	8032653	1	Ring, Snap
2	8032654	1	Backing Plate
3	8032655	8	Disc, Clutch Inner
4	8032656	8	Disc, Clutch Outer
5	8032657	1	Piston, Clutch
6	8032658	1	Ring, Outer Piston
7	8032659	1	Seal, Inner Piston
8	8033387	1	Low Clutch, Shaft, Drum & Bleed Valve Assembly
9	8032653	1	Ring, Snap
10	8032654	1	Backing Plate
11	8032661	8	Disc, Clutch Inner
12	8032656	8	Disc, Clutch Outer
13	8033346	1	Piston, Clutch
14	8032658		Ring, Clutch Piston - Outer
15	8032659		Ring, Clutch Piston - Uniter
16			
	8033347	1	Forward Shaft, Drum & Plug Assembly
17	8032653	1	Ring, Snap
18	8032654	1	Backing Plate
19	8032661	6	Disc, Clutch Inner
20	8032656	6	Disc, Clutch Outer
21	8032663	1	Clutch Piston Assembly
22	8032658	1	Seal, Outer Clutch Piston
23	8032659	1	Seal, Inner Clutch Piston
24	8033344	1 1	3rd Clutch Shaft, Drum & Plug Assembly
25	8032653	1	Ring, Snap
26	8032654	1	Backing Plate
27	8032661	8	Disc, Clutch Inner
28	8032656	8	Disc, Clutch Outer
29	8033346	1	Piston, Clutch
30	8032658	1	Seal, Outer Clutch Piston
31	8032659	1	Seal, Inner Clutch Piston
32	8032665	1	Rev. & 2nd Shaft, Drum & Plug Assembly
33	8032659	1	Seal, Inner Clutch Piston
34	8032658	1	Seal, Outer Piston Clutch
35	8032663	1 1	Piston, Clutch
36	8032656	6	Disc, Clutch Outer
37	8032661	6	Disc, Clutch Inner
38	8033345	1	Backing Plate
39	8032653	1	Ring, Snap
		İ	

CONTROL VALVE ASSEMBLY (CLARK)

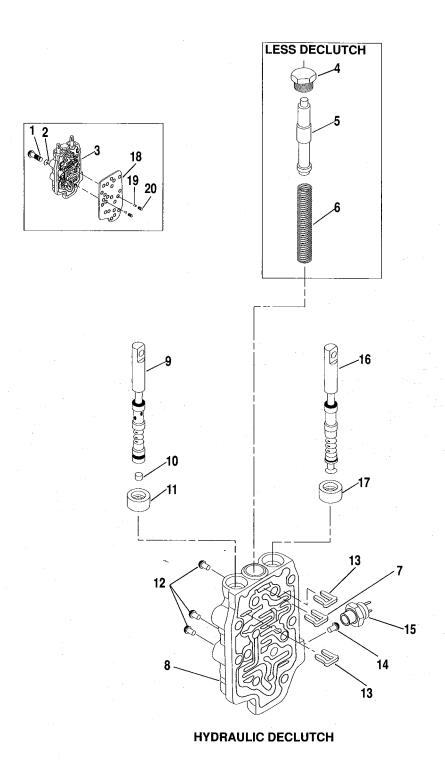


PB 0231

CONTROL VALVE ASSEMBLY

(CLARK)

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	8032666 8032561 8032667 8032671 8032672 8032673 8032676 8032679 8032682 8032681 8032675 8032680 8032676 8032676 8032676 8032677 8032674 8032675 8032668 8032669 8032670	9 9 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Screw, Valve To Converter Hsg. Lockwasher, Valve To Converter Hsg. Screw Control Valve Assembly (Includes Items 4 thru 8) Plug Spool, Valve Spring, Control Valve Spool Stop, Valve Control Valve Hsg. Assembly (Includes Items 9 thru 17) Speed Selector Spool & Plug Assembly (Includes Item 10) Plug Seal, Oil Plug, Pipe Spool Stop, Valve Pin, Switch Actuating Switch, Neutral Spool, Forward & Reverse Valve Seal, Oil Gasket, Control Valve Ball, Detent Spring, Detent
20	0002070	<u>-</u>	oping, betem
i			


TRANSMISSION BRAKE — CLARK

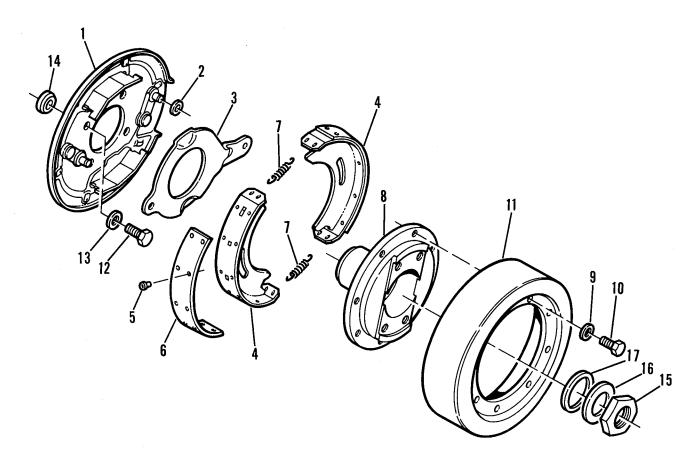

PB 0241

Item No.	Part Number	Qty.	Description
	8033206	1	Brake Assembly (Includes Items 1 thru 7)
1	8033207	1	Plate, Backing
2	8033208	1	Roller
3	8033209	1	Lever, Actuating
4	8033210	1 1	Brake Shoe and Lining Assembly (Includes Items 5 & 6)
5	See Kits	40	Rivet, Lining
6	See Kits	2	Lining
7	8033211	2	Spring, Return
8	8033382	1	Flange, Brake
9	8032561	6	Lockwasher, Drum to Flange
10	8033212	6	Screw
11	8033213	1	Drum, Brake
12	8033214	4	Screw, Backing Plate
13	8033217	4	Lockwasher, Backing Plate
14	8033224	4	Spacer
15	8033372	1	Nut, Flange
16	8033371	1	Washer, Flange
17	8032611	1	O-Ring, Flange
			<u>KITS</u>
	8033227	1 20 1	Kit, Brake Lining & Rivet (Includes the following) Rivet, Lining Lining


TRANSMISSION MOUNTING — CLARK

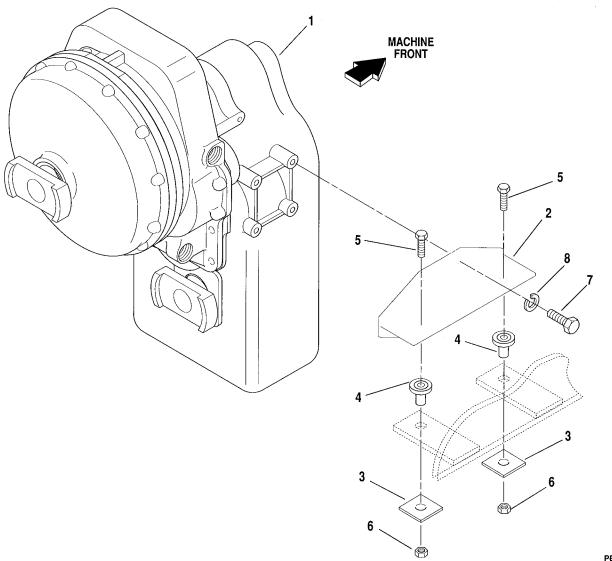

PB	025


Item No.	Part Number	Qty.	Description
1	8841013	1	Transmission
2	7077842	2	Bracket, Trans. Mounting
3	7054351	4	Washer, Rebound
4	8278007	4	Mount, Rubber
5	8303639	4	Screw, Hex Hd. Cap, 3/4 -10 x 3" GR.5
6	8305619	4	Locknut, Hex 3/4 - 10
7	8303527	8	Screw, Hex Hd. Cap, 3/4 - 10 x 1 1/4 GR.5
8	8307010	8	Lockwasher, 3/4
			<u>KITS</u>
	8033223	1	Long Drop Transmission Gasket & Sealing Kit
	8032959	1	Converter Section Gasket & Sealing Kit
			·
1			

TRANSMISSION MOUNTING

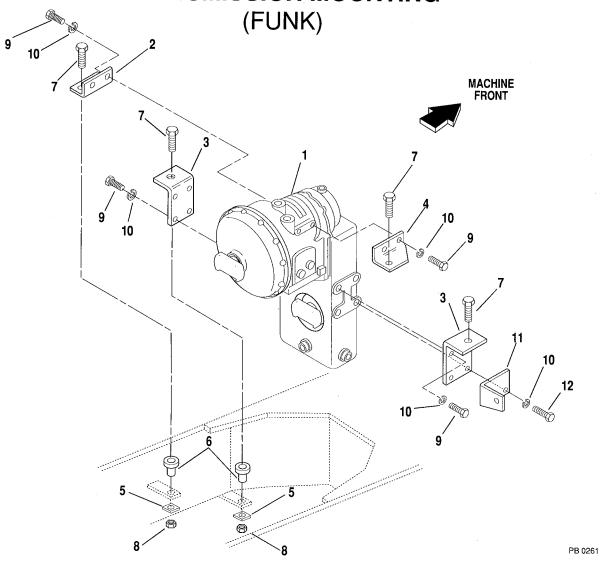

Item No.	Part Number	Qty.	Description
1	8841017	1	Transmission
2	7068502	1	Bracket, Trans. Left Rear
3	7068422	2	Bracket, Trans. (Right & Left Front)
4	7077692	1 1	Bracket, Trans. (Right Rear)
5	7054351	4	Washer, Rebound
6	8278007	4	Mount, Rubber
7	8303639	4	Screw, Hex Hd Cap, 3/4 - 10 x 3 Gr 5
8	8305619	4	Nut, Lock 3/4 - 10
9	8303699	10	Screw, Hex Hd Cap, 5/8 -11 x 1-1/4 Gr 5
10	8307009	12	Washer, Lock 5/8
11	7092921	1	Bracket Kit, Filter Mount (S/N 9A0550 thru S/N 0B0682)
	7092882	1	Bracket, Filter Mount (S/N 0B0683 and After)
12	8303712	2	Screw, Hex Hd Cap, 5/8-11 x 1-1/2 Gr 5
	, ,		

DRIVE SHAFT — ENGINE TO TRANSMISSION (DEUTZ ONLY)

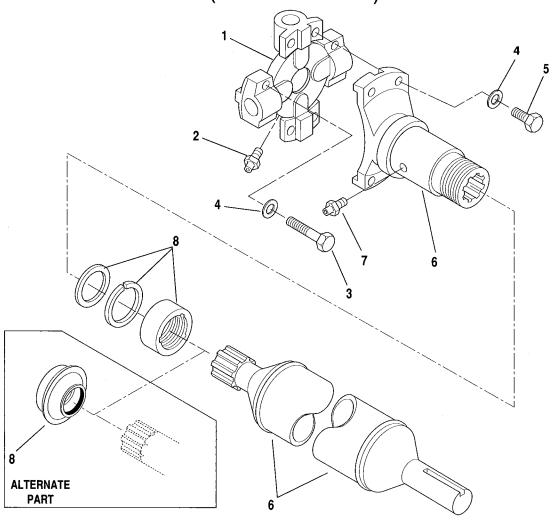


PB 0271

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8	7084092 8880009 8520001 8303116 8307005 8303115 NSS* 8520001 8882005	1 1 4 8 4	Drive Shaft Complete - Engine to Transmission (Includes Items 1 thru 8) Spider & Bearing Assembly (Includes Items 2 thru 5) Fitting, Grease 1/8 NPT Screw, Hex Hd. 3/8 -24 x 2 GR 8 Lockwasher 3/8 Screw, Hex Hd. Cap, 3/8 - 24 x 1 GR 8 Slip Yoke & Tube Assembly (Includes Items 7 & 8) Fitting, Grease 1/8 NPT Kit, Dust Cap * Item 6 is serviced as a balanced assembly only. Order drive shaft complete.

DRIVE SHAFT — ENGINE TO TRANSMISSION

(JOHN DEERE, PERKINS, FORD)

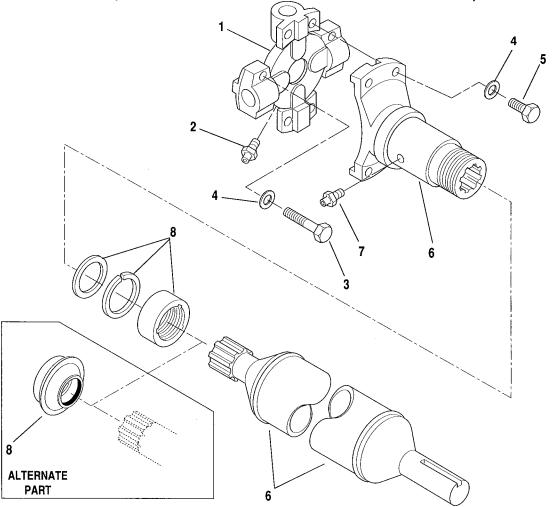


PB 0271

Item No.	Part Number	Qty.	Description
	7068832	1	Drive Shaft Complete - Engine to Transmission (Includes items 1 thru 8)
1	8880009	1	Spider & Bearing Assembly (Includes Items 2 thru 5)
2	8520001	1	Fitting, Grease 1/8 NPT
3	8303116	4	Screw, Hex Hd., 3/8 - 24 x 2 GR. 8
4	8307005	8	Lockwasher 3/8
5	8303115	4	Screw, Hex Hd., 3/8 - 24 x 1 GR. 8
6	NSS*	1	Slip Yoke & Tube Assembly (Includes Items 7 & 8)
7	8520001	1	Fitting, Grease 1/8 NPT
8	8882005	1	Kit, Dust Cap
			* Item 6 is serviced as a balanced assembly. Order drive shaft complete.

<u>3.17</u>


DRIVE SHAFT — FRONT & REAR (CLARK)

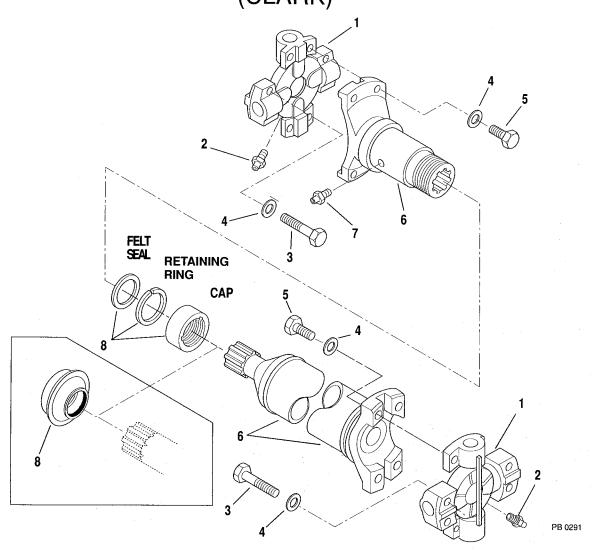

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8	7068812 7068822 8880009 8520001 8303116 8307005 8303115 NSS* 8520001 8882005	1 1 2 1 4 8 4	Front Drive Shaft Assembly - Complete (Includes items 1 thru 8) Rear Drive Shaft Assembly - Complete (Includes items 1 thru 8) Spider & Bearing Assembly (Includes Items 2 thru 5) Fitting, Grease 1/8 NPT Screw, Hex Hd. 3/8 -24 x 2 GR 8 Lockwasher 3/8 Screw, Hex Hd. Cap, 3/8 - 24 x 1 GR 8 Slip Yoke & Tube Assembly (Includes Items 7 & 8) Fitting, Grease 1/8 NPT Kit, Dust Cap * Item 6 is serviced as a balanced assembly only. Order drive shaft complete.

<u>3.18</u>


DRIVE SHAFT — FRONT & REAR

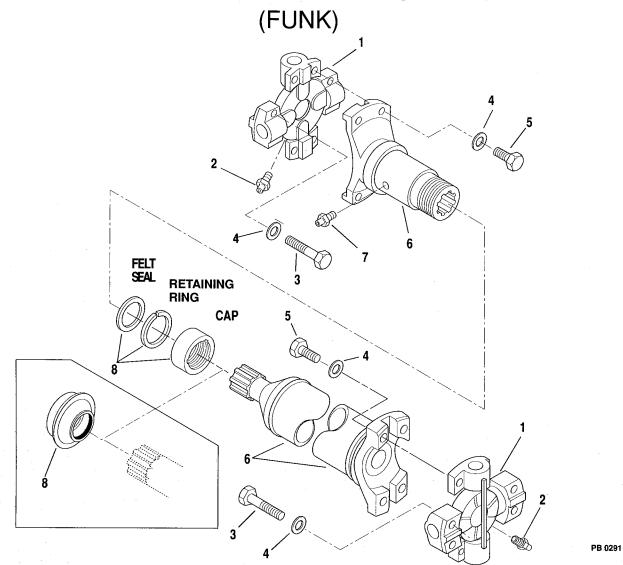

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8	7073802 7077152 8880009 8520001 8303116 8307005 8303115 NSS* 8520001 8882005	1 1 2 1 4 8 4 1 1	Front Drive Shaft Assembly - Complete (Includes items 1 thru 8) Rear Drive Shaft Assembly - Complete (Includes items 1 thru 8) Spider & Bearing Assembly (Includes Items 2 thru 5) Fitting, Grease 1/8 NPT Screw, Hex Hd. 3/8 -24 x 2 GR 8 Lockwasher 3/8 Screw, Hex Hd. Cap, 3/8 - 24 x 1 GR 8 Slip Yoke & Tube Assembly (Includes Items 7 & 8) Fitting, Grease 1/8 NPT Kit, Dust Cap * Item 6 is serviced as a balanced assembly only. Order drive shaft complete.

3.19


DIFFERENTIAL CARRIER — FRONT AND REAR AXLE

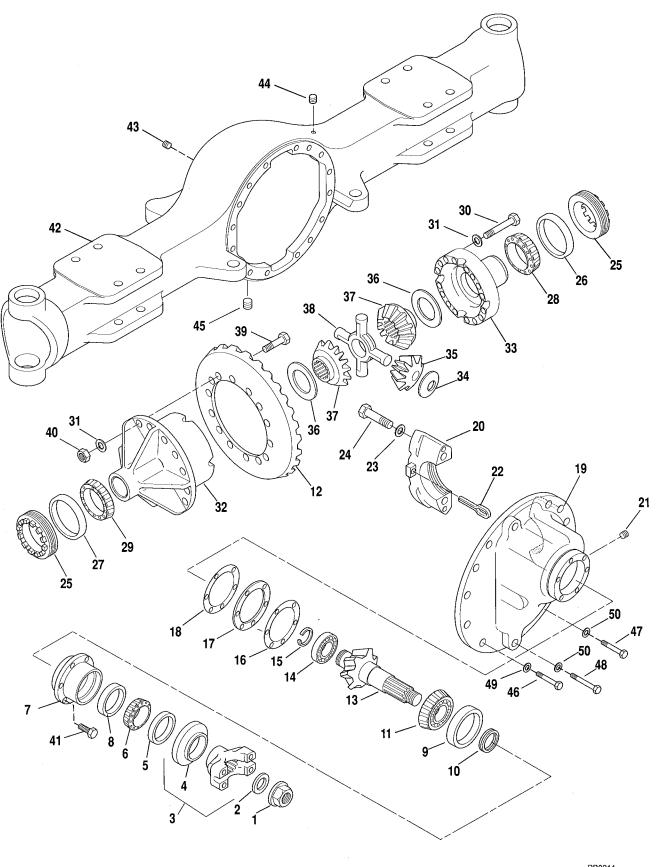

DIFFERENTIAL CARRIER — FRONT AND REAR AXLE

Item					
No.	Part Number	Qty.	Description		
1 2	8040634	1	Nut, Bevel Pinion		
2	8040635 8040670	1	Washer, Bevel Pinion Nut		
1 1		1	Yoke, Companion (Includes item 4)		
5	8040669 8040637		Deflector, Yoke Seal, Oil		
4 5 6	8040638	i	Cone, Bearing Outer		
7	8040640	1	Cage, Bevel Pinion Bearing (Includes items 8 & 9)		
8	8040639	i	Cup, Bevel Bearing Outer		
9	8040651	i	Cup, Bevel Bearing Unier		
10	See Kits	AR	Spacer, Bevel Pinion Bearing .153		
	See Kits	AR	Spacer, Bevel Pinion Bearing .154		
	See Kits	AR	Spacer, Bevel Pinion Bearing .155		
	See Kits	AR	Spacer, Bevel Pinion Bearing .156 Use combinations of		
	See Kits	AR	Spacer, Bevel Pinion Bearing .157 — two of these spacers		
	See Kits	AR	Spacer, Bevel Pinion Bearing 158 for service		
	See Kits	AR	Spacer, Bevel Pinion Bearing .164		
	See Kits	AR	Spacer, Bevel Pinion Bearing .170		
	See Kits See Kits	AR AR	Spacer, Bevel Pinion Bearing .182		
11	8040652	4H 1	Spacer, Bevel Pinion Bearing .176 Cone, Pinion Bearing Inner		
12	8040675		Bevel Gear 5.83 -1 (Includes item 13)		
13	NSS	i	Pinion, Bevel		
14	8040737	i	Bearing, Bevel Pinion - Rear		
15	8040679	1	Lockring, Pinion		
16	8040654	3	Shim, Pinion Bearing Cage .005		
17	8040655	4	Shim, Pinion Bearing Cage .010		
18	8040656	1	Shim, Pinion Bearing Cage .003		
19	8040657	1	Carrier, Differential (Includes item 20)		
20 21	NSS	2	Cap, Differential Carrier		
22	8040625 8040659	1	Plug Level		
23	8040663	2 4	Pin, Cotter Washer		
24	8040662	4	Capscrew		
25	8040664	2	Ring, Adjusting		
26	8033315	1	Cup, Differential Case Bearing - Plain Half		
27	8040665	1	Cup, Differential Case Bearing - Flange Half		
28	8033316	1	Cone, Differential Case Bearing - Plain Half		
29	8040666	1	Cone, Differential Case Bearing - Flange Half		
30	8040667	8	Capscrew		
31	8040629	20	Washer		
32 33	8040676 NSS	1	Differential Case (Includes item 33)		
34	8040660	1 4	Differential Case, Plain Half Washer, Thrust		
35	8040661	4	Pinion, Differential		
36	8040671	2	Washer, Thrust		
37	8040672	2	Gear, Side		
38	8040673	1	Spider		
39	8040674	12	Capscrew		
40	8040678	12	Nut		
41	8040636	8	Capscrew		
42 43	8040626	1	Housing, Axle		
43 44	8040625 8033317	1	Plug Plug		
45	8040628	1 1	Plug, Oil Drain		
46	8040633	12	Capscrew, Short		
47	8040631	2	Capscrew, Short		
48	8040632	2	Capscrew, Long		
49	8033324	12	Washer		
50	8040630	4	Washer		
			<u>KITS</u>		
	8040738	AR	Bevel Pinion Bearing Spacer Kit (Includes two each of item 10)		

AXLE STEERING JOINTS

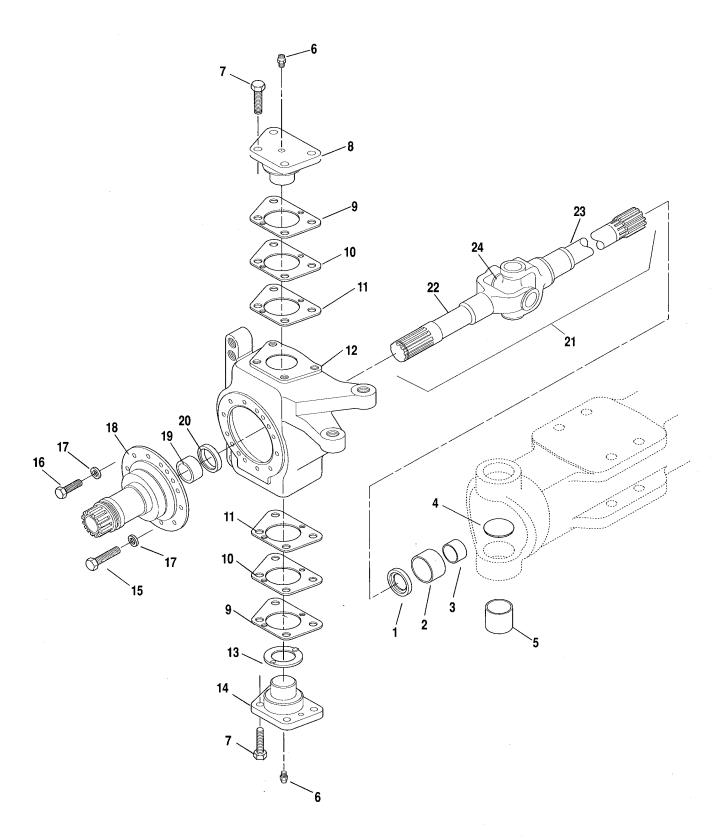


PB0321

AXLE STEERING JOINTS

Item No.	Part Number	Qty.	Description
			NOTE: Quantities listed are for one complete axle
1 1	8040717	2	Seal, Oil - Differential Housing & Universal Joint
2	8040622	2	Sleeve Assembly
3	8040722	2	Bushing, Differential Housing & Universal Joint
4	8040623	4	Plug, Trunnion Arm King Pin
5	8040624	4	Bushing, Trunnion Arm King Pin
6	8033319	4	Fitting, Grease
7	8040706	16	Capscrew
8	8040720	2	Cap, Steer Knuckle - Upper
9	8040709	10	Shim, Steer Knuckle Cap .003
10 11	8040710	8	Shim, Steer Knuckle Cap .005
12	8040711 8040732	4	Shim, Steer Knuckle Cap .020
'4	8040732 8040733	1	Flange, Steer Knuckle (Right Front, Left Rear)
13	8040733	2	Flange, Steer Knuckle (Left Front, Right Rear) Washer, Steer Knuckle Thrust
14	8040707	2	Cap, Steer Knuckle - Lower
15	8033320	8	Capscrew
16	8040712	20	Capscrew
17	8040663	28	Washer
18	8033321	2	Spindle, Wheel Bearing (Includes items 19 & 20)
19	8040716	1	Bushing, Spindle
20	8040717	2	Seal, Oil - Spindle & Universal Joint
21	8040700	2	Universal Joint Assembly
22	8040734	4	Shaft, Outer Yoke
23	8040735	4	Shaft, Inner Yoke
24	8040736	4	Universal Joint
			<u>KITS</u>
	8040477	1	Kit, Heavy Duty Trunnion Arm King Pin Bushing For use in highly abrasive soil conditions.
			NOTE: If this kit is ever installed on an axle, the standard service parts listed above cannot
İ			be used to service the parts in this kit.
			(This kit includes enough new service parts
ľ			of items 1, 5, 7 thru 11, 13, 14, 20 and item 20 on page 3.22 to service both wheel
]			ends of one complete axle)
			2ss st sits complete axis,
		1	
k			
- AP -			


WHEEL END — FRONT AND REAR AXLE

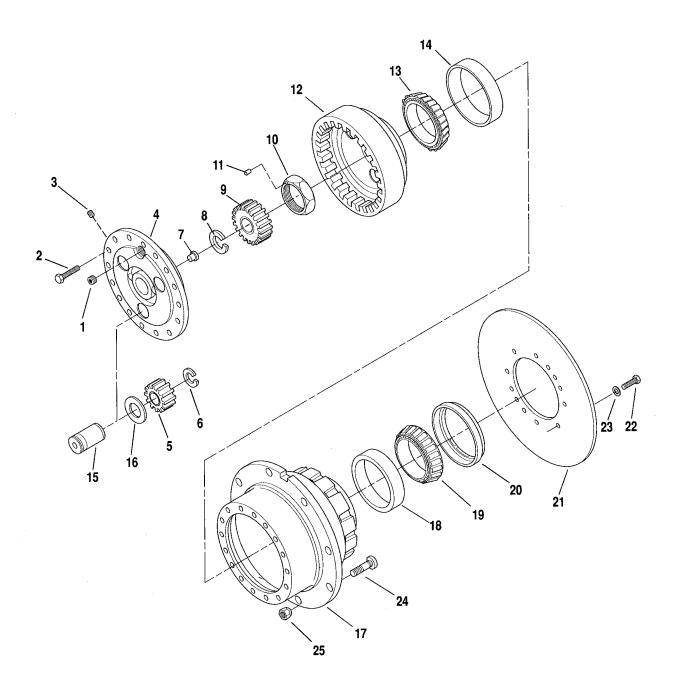

WHEEL END — FRONT AND REAR AXLE

art Number	Qty.	Description
040628 040682 040683 040684 040695 040686 040686 040687 040689 040691 040692 040693 040694 033322 040692 040691 040702 040703 033323 040663 040698 040697	Qty. 1 16 3 1 3 3 1 1 1 1 1 3 3 1 1 1 1 1 1 2 1 2	NOTE: Quantities listed are for one wheel end assembly. Plug, Oil Level Capscrew, Spider to Hub Setscrew, Pinoin Shaft Spider, Planetary Gear (Includes items 5 & 6) Pinion, Planetary (19T) Ring, Snap Button, Thrust Ring, Snap - Universal Joint Retainer Gear, Planetary Sun (20T) Nut, Hub Bearing (Includes item 11) Pin, Adjusting Nut Gear, Planetary Ring (46T) Cone, Hub Outer Bearing Cup, Hub Outer Bearing Shaft, Planetary Pinion Washer, Thrust Hub, Wheel (Includes items 18 & 19) Cup, Hub Inner Bearing Cone, Hub Inner Bearing Seal, Oil - Wheel End Housing Disc, Brake Capscrew Washer Stud, Wheel Nut, Wheel Stud
	040682 040683 040684 040695 040685 040685 040687 040689 040689 040691 040692 040693 040694 033322 040692 040691 040702 040703 033323 040663 040663	040682 16 040683 3 040684 1 040695 3 040696 3 040685 1 040687 1 040689 1 040689 1 040690 1 040691 1 040692 1 040693 3 040694 3 033322 1 040692 1 040691 1 040692 1 040691 1 040693 1 040694 3 033322 1 040693 1 040694 3


DISC BRAKE ASSEMBLY

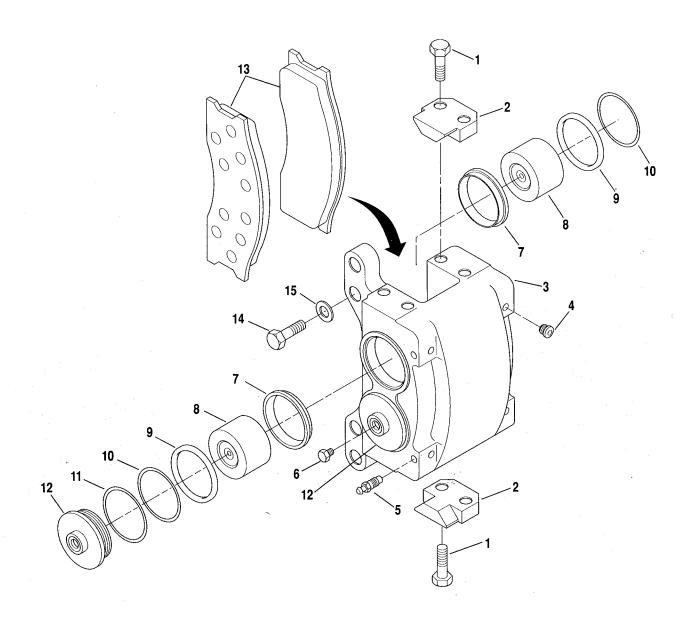

DISC BRAKE ASSEMBLY

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	8040677 8033326 8033327 8033328 8033329 8033330 8033331 8033332 8102012 8033334 8033335 8033336 8033337 See Kits 8040658 8040668	1 8 4 1 4 2 1 4 4 4 4 2 2 8 8	NOTE: Quantities listed are for one brake assembly. Four assemblies used per machine. Disc Brake Assembly (Includes items 1 thru 13) Capscrew Plate, Housing Housing, Brake Plug Bleed screw, Brake Plug Seal, Dust Piston Ring, Backing O-Ring O-Ring Cap Brake Lining Assembly Capscrew, Brake Mounting Washer, Brake Mounting
	8102611 8102407	1 1	KITS Seal & Dust Cover Kit (Includes items 7, 9, 10 & 11) Brake Lining Kit


TIE ROD & STEERING CYLINDER MOUNTING

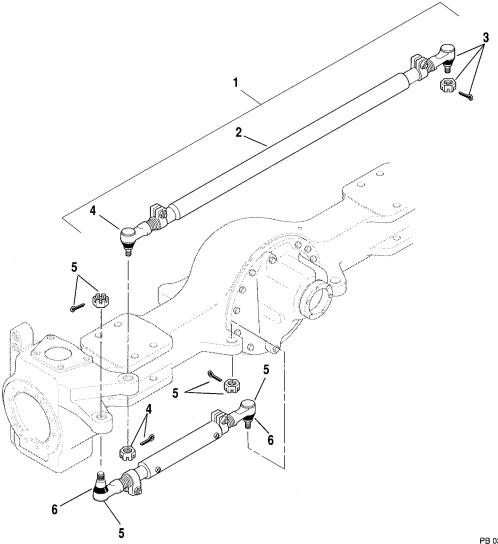

PB 0351

Item No.	Part Number	Qty.	Description
1	8040701	2	Tie Rod Assembly (Includes items 2 thru 4)
2	NSS See item1	1	Tube, Tie Rod
3	8340032	1	Socket Assembly, R. H. Thread (Includes nut, cotter pin)
4	8340033	1	Socket Assembly, L. H. Thread (Includes nut, cotter pin)
5	8340025	8	Socket Assembly, Steering Cylinder (Includes item 6, nut, cotter pin & clamp)
6	8032816	8	Boot

WHEELS AND TIRES

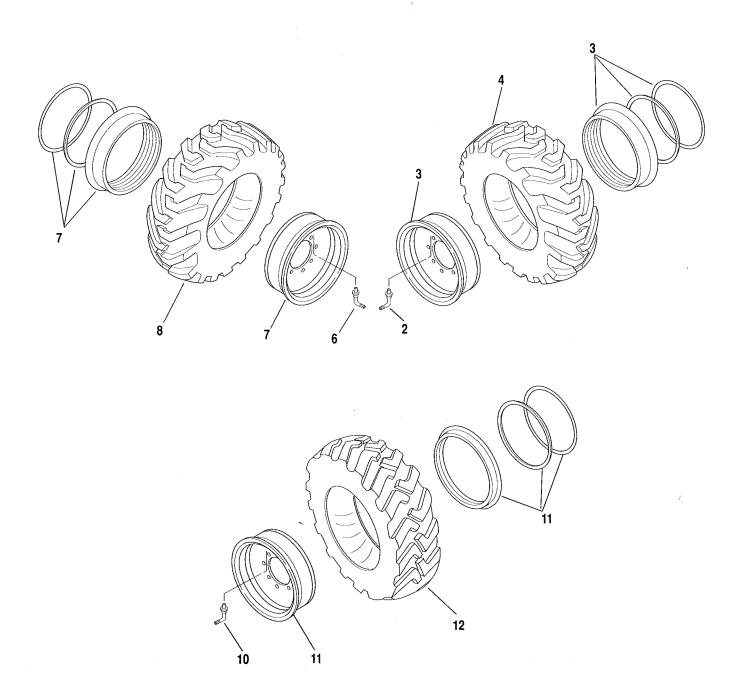


PB 0361

3.25

WHEELS AND TIRES

Item No.	Part Number	Qty.	Description
1	7088732	2	Tire & Wheel Assembly, Right Side -14.00 x 24, 10 ply (Includes items 2 thru 4)
2	8786549	1	Stem, Valve
3	7069683	1	Wheel, 8.00 - 24 TGF
4	8780254	1	Tire, 14.00 - 24, 10 Ply
5	7088742	2	Tire & Wheel Assembly, Left Side - 14.00 x 24, 10 ply (Includes items 6 thru 8)
6	8786549	1	Stem, Valve
7	7069683	1	Wheel, 8.00 - 24 TGF
8	8780254	1	Tire, 14.00 - 24, 10 Ply
9	7091992	4	Tire & Wheel Assembly - Nondirectional - 13.00 x 24, 14 ply (Includes items 10 thru 12)
10	8786549	1	Stem, Valve
11	7069683	1	Wheel, 8.00 - 24 TGF
12	8780264	1	Tire, 13.00 x 24 Michelin Radial
ļ			
			·


(FORD — BSD 444T)

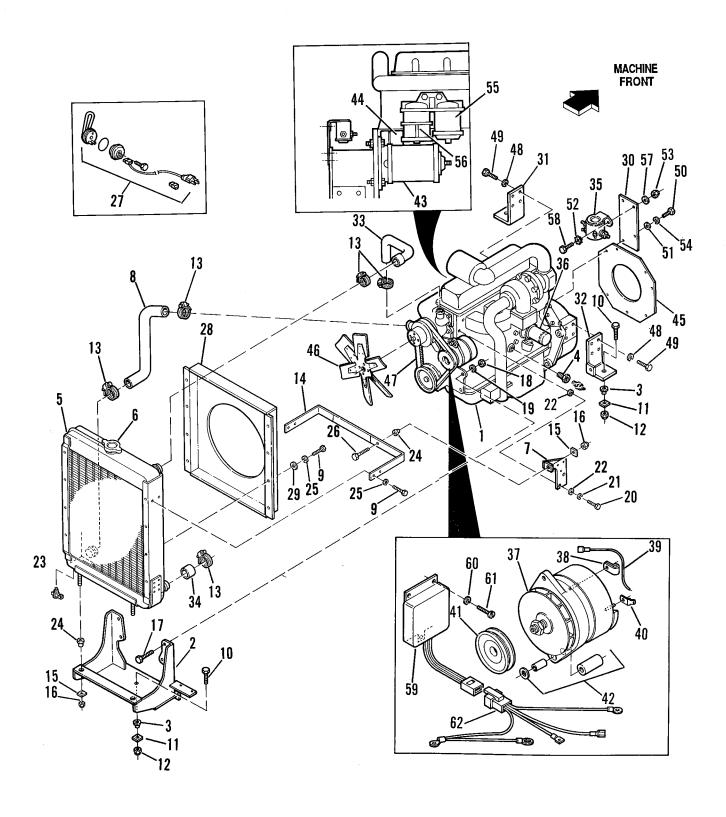

(FORD — BSD 444T)

	(1 0110 800 4441)						
Item No.	Part Number	Qty.	Description				
1	8262112	1	Engine, Ford BSD - 444T Diesel				
2	7077813	1	Bracket, Engine & Radiator Mount				
3	8278007	3	Mount, Rubber				
4	8541030	1	Reducer, 1/4 NPT x 1/8 NPT				
5 6	7079304	1	Radiator (Includes item 6)				
7	8180306 7067522	1 1	Cap Radiator Bracket, Top Rad. Support				
8	7079313		Hose, Lower Radiator				
9	8303729	12	Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5				
10	8303638	3	Screw, Hex Hd Cap, 3/4-10 x 2-3/4 Gr5				
11	7054351	3	Washer, Rebound				
12	8305619	3	Nut, Hex Lock, 3/4-10				
13	8405104	5	Clamp, Hose, 2-1/4"				
14	7058602	1	Bracket, Radiator Mount				
15	7057141	3	Washer, Rebound				
16	8305618	3	Nut, Hex, 3/8-16				
17	8303639	4	Screw, Hex Hd Cap, 3/4-10 x 3.00 Gr 5				
18 19	8305017 8307010	4	Nut, Hex 3/4-10				
20	8303681	4	Lockwasher, 3/4 Screw, Hex Hd Cap, 3/8-16 x 3/4 Gr 5				
21	8307005	2 2	Lockwasher, 3/8				
22	8307204	4	Washer, Flat 3/8				
23	8904001	i	Cock, Drain, 1/4NPT				
24	8278008	3	Mount, Vibration				
25	8307002	12	Lockwasher, 1/4				
26	8303622	1	Screw, Hex Hd Cap, 3/8-16 x 2.00 Gr 5				
27	8277090	1	Coolant Heater, Engine - Optional				
28	7079543	1 1	Shroud, Radiator				
29	8307202	8	Washer, Flat 1/4				
30 31	7069202	1	Mount, Starter Relay				
32	7085452 7085462	1 1	Mount, Engine L. H. Mount, Engine R. H.				
33	7090172		Hose, Radiator Top				
34	8403221	li	Cap, Radiator Port				
35	8277065	li	Relay, Starter				
36	8033471	1	Element, Oil Filter				
37	8270213	1	Alternator				
38	8406008	1	Clamp				
39	7090091	1 1	Wire Assembly				
40	8220073	1 1	Terminal				
41	8276014	1 1	Pulley				
42 43	8277103	1 1	Adapter Kit				
43	8033468 8033469		Starter (Includes item 39) Solenoid, Starter				
45	7054632	¦	Cover, Flywheel Housing				
46	8033467	i	Fan, Cooling				
47	8033470	1 1	Belt, Fan				
48	8307007	8	Lockwasher, 1/2				
49	8303625	8	Screw, Hex Hd Cap,1/2-13 x 1-1/4 Gr 5				
50	8303620	2	Screw, Hex Hd Cap, 3/8-16 x 1.00 Gr 5				
51	8307204	2	Washer, Flat 3/8				
52	8310002	2	Lockwasher, External Tooth 1/4				
53 54	8305601	2	Locknut, 1/4				
54 55	8307005 8033472	2	Lockwasher, 3/8 Kit, Fuel Filter				
56	8033472		Bowl, Sediment				
57	8307109	2	Washer, Flat 1/4				
58	8303705	2	Screw, Flg Hd Cap, 1/4-20 x 3/4 Gr 5				
59	8022023	1	Regulator, Voltage				
60	8307003	3	Lockwasher, #10				
61	8303837	3	Screw, Slotted Pan Hd, #10-24 NC x 3/4				
62	7090182	1	Wire Assembly				


(PERKINS 4.236T — TURBO)

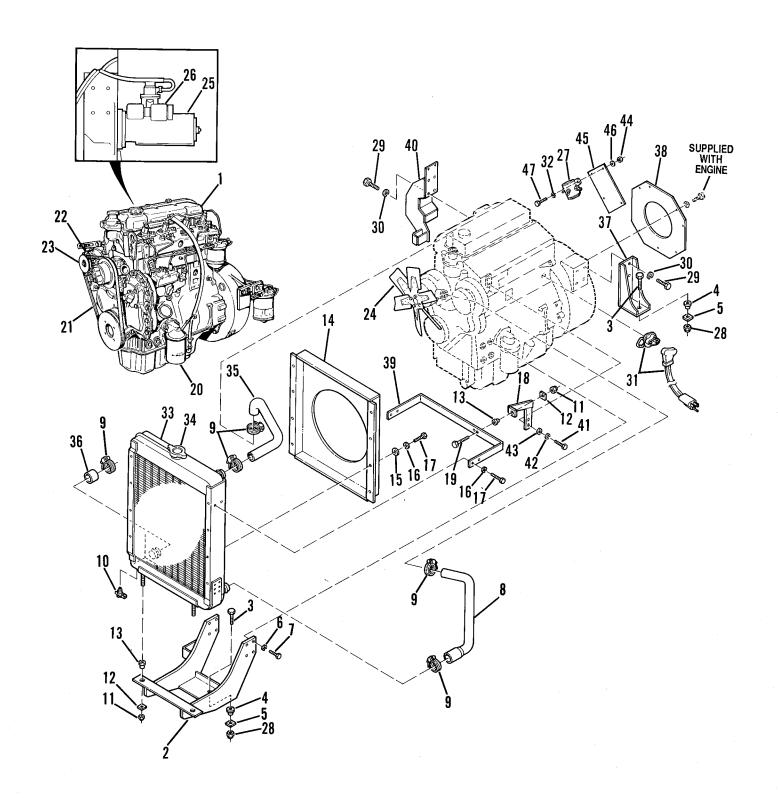

(PERKINS 4.236T — TURBO)

No. Part Number City. Engine, Perkins 4.236T Diesel	Item	D	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	<u> </u>
2 7077873 1 Mount, Engine Screw, Hex Hd Cap, 3/4-10 x 3" Gr 5 Mount, Woration Washer, Rebound Cokwasher, 7/16 Screw, Hex Hd Cap, 7/16-20 x 1-1/4 Hose, Radiator, Lower Hose, Radiator		Part Number	Qty.	Description
3			1	
4 8278007 3 Mount, Vibration 5 7054351 3 Washer, Rebound 6 8307006 8 Lockwasher, 7r16 8 7079523 1 Hose, Radiator, Lower 9 8405104 5 Clamp, Hose, 2-1/4 10 8904001 1 Draincock, 1/4 NPT 11 8305618 1 Locknut, 3/8-16 ESNA 12 7057141 3 Washer, Rebound 13 8278008 3 Mount, Vibration 14 7072733 1 Shroud, Radiator 15 8307002 2 Washer, Lock, 1/4 16 8307002 12 Washer, Lock, 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 20 8320242 1 Element, Engine Oil Filter 21 808023 1 Pale, Harring 28 8270219 Alternator 29				
5 7054351 3 Washer, Rebound 6 8307006 8 Screw, Hex Hd Cap, 7/16-20 x 1-1/4 7 8303604 8 Screw, Hex Hd Cap, 7/16-20 x 1-1/4 10 8904001 1 Draincock, 1/4 NPT 11 8305618 3 Locknut, 3/8-16 ESNA 12 7057141 3 Washer, Rebound 14 7072733 1 Shroud, Radiator 15 8307202 2 Washer, Flat, 1/4 16 8307020 12 Washer, Lock. 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 19 8303622 1 Screw, Hex Hd Cap, 3/8NC x 2.0 20 8320242 1 Element, Engine Oil Filter 21 8080023 1 Belt, Fan 22 8270411 1 Starter 26 8270411 1 Solenoid, Starter 28 8305619 1 Lockmashe				
6 8303006 8 Lockwasher, 7/16 7 8303604 8 Screw, Hex Hd Cap, 7/16-20 x 1-1/4 8 7079523 1 Hose, Radiator, Lower 10 8904001 1 Draincock, 1/4 NPT 11 8305618 3 Locknut, 3/8-16 ESNA 12 7057141 3 Washer, Rebound 14 7072733 1 Shroud, Radiator 15 8307202 8 Washer, Icok, 1/4 16 8307020 12 Washer, Lock, 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 19 8303622 1 Element, Engine Oil Filter 20 8320242 1 Element, Engine Oil Filter 21 8080023 1 Alternator 23 8270411 1 Starter 26 8270412 1 Sclew, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 28 8305619 3 Loc				l · · · · · · · · · · · · · · · · · · ·
7 8303604 8 Screw, Hex Hd Cap, 7/16-20 x 1-1/4 8 7079523 1 Hose, Radiator, Lower 9 8405104 5 Clamp, Hose, 2-1/4 10 8904001 1 Draincock, 1/4 NPT 11 8305618 3 Locknut, 3/8-16 ESNA 12 7057141 3 Washer, Rebound 13 8278008 3 Mount, Vibration 14 7072733 1 Shroud, Radiator 15 8307002 12 Washer, Lock. 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 19 8303622 1 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 19 8303622 1 Element, Engine Oil Filter 21 8080023 1 Belt, Fan 22 8270411 1 Alternator 24 8272005 1 Fall, Cooling 25 8270411 1 Sclenoid, Start				
8 7079523 1 Hose, Radiator, Lower 10 89405104 5 Clamp, Hose, 2-1/4 11 8305618 3 Jos7141 3 Washer, Rebound 12 7057141 3 Washer, Febound 13 8278008 3 Mount, Vibration 14 7072733 1 Shroud, Radiator 15 8307002 8 Washer, Flat, 1/4 16 8307002 12 Washer, Flat, 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 19 8303622 1 Screw, Hex Hd Cap, 3/8NC x 2.0 20 8320242 1 Belment, Engine Oil Filter 21 808023 1 Alternator 22 8270219 1 Alternator 23 8082113 1 Starter 24 8270412 1 Starter 25 8270411 1 Starter				
9			8 .	
10				
11 8305618 3 Locknut, 3/8-16 ESNA 12 7057141 3 Washer, Rebound 13 8278008 3 Mount, Vibration 14 7072733 1 Shroud, Radiator 15 8307202 8 Washer, Elat, 1/4 16 830702 12 Washer, Lock. 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 20 8320242 1 Element, Engine Oil Filter 21 8080023 1 Belt, Fan 21 8080023 1 Alternator 23 8082113 1 Pulley, Alternator 24 8272005 1 Fan, Cooling 25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 27 827065 1 Relay, Starter 28 8305619 3 Lockmut, 3/4-10NC 29			5	
12 7057141 3 Washer, Rebound 13 8278008 3 Mount, Vibration 14 7072733 1 Shroud, Radiator 15 8307202 8 Washer, Flat, 1/4 16 8307002 12 Washer, Lock, 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 19 8303622 1 Screw, Hex Hd Cap, 3/8NC x 2.0 20 8320242 1 Element, Engine Oil Filter 21 8080023 1 Belt, Fan 22 8270219 1 Alternator 23 8082113 1 Pulley, Alternator 24 8270019 1 Starter 26 8270411 1 Starter 27 8270412 1 Solenoid, Starter 28 8305619 3 Lockrud, 3/4-10NC 29 8306519 3 Lockrud, 3/4-10NC 29 <td></td> <td></td> <td></td> <td>Draincock, 1/4 NPT</td>				Draincock, 1/4 NPT
13 8278008 3 Mount, Vibration 14 7072733 1 Shroud, Radiator 16 8307002 12 Washer, Flat, 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 19 8303622 1 Screw, Hex Hd Cap, 3/8NC x 2.0 20 8320242 1 Element, Engine Oil Filter 21 808023 1 Belt, Fan Alternator Alternator Alternator 23 8082113 1 Pulley, Alternator 24 8270015 1 Fan, Cooling 25 8270412 1 Starter 26 8270412 1 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 29 8307007 8 Lockwasher, 1/2 Heater, Engine Coolant (Option) 20 28				
14 7072733 1 Shroud, Radiator 15 8307202 8 Washer, Flatt, 1/4 16 8307002 12 Washer, Lock. 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 20 8320242 1 Element, Engine Oil Filter 21 8080023 1 Belt, Fan 22 8270219 1 Alternator 24 8272005 1 Fan, Cooling 25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 27 8277065 1 Relay, Starter 28 8305619 3 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 20 8310002 2 Lockwasher, External Tooth 1/4 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 <t< td=""><td></td><td></td><td></td><td>Washer, Rebound</td></t<>				Washer, Rebound
15 8307202 8 Washer, Flat, 1/4 16 8307002 12 Washer, Lock. 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 19 8303622 1 Bracket, Radiator, Upper 20 8320242 1 Element, Engine Oil Filter 21 808023 1 Belt, Fan 22 8270219 1 Alternator 23 8082113 1 Pulley, Alternator 24 8272005 1 Fan, Cooling 25 8270411 1 Solenoid, Starter 26 8270412 1 Solenoid, Starter 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 20 8307007 8 Lockwasher, 1/2 40 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, Ex			3	Mount, Vibration
16 8307002 12 Washer, Lock. 1/4 17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 19 8303622 1 Screw, Hex Hd Cap, 3/8NC x 2.0 20 8320242 1 Element, Engine Oil Filter 21 8080023 1 Belt, Fan 22 8270219 1 Alternator 23 8082113 1 Pulley, Alternator 24 8272005 1 Fan, Cooling 25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 20 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079333 1 Radi		7072733		
17 8303729 12 Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5 18 7072772 1 Bracket, Radiator, Upper 19 8303622 1 Screw, Hex Hd Cap, 3/8NC x 2.0 20 8320242 1 Element, Engine Oil Filter 21 8080023 1 Belt, Fan 21 8080213 1 Alternator 23 8082113 1 Pulley, Alternator 24 8272005 1 Fan, Cooling 25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 28 8305619 3 Lockut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 4 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator		8307202		Washer, Flat, 1/4
18 7072772 1 Bracket, Radiator, Upper 19 8303622 1 Screw, Hex Hd Cap, 3/8NC x 2.0 20 8320242 1 Element, Engine Oil Filter 21 8080023 1 Belt, Fan 22 8270219 1 Alternator 23 8082113 1 Pulley, Alternator 24 8272005 1 Fan, Cooling 25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 27 8277065 1 Relay, Starter 28 8305619 3 Lockmut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 34 8180306 1 Cap, Ra		8307002		
19 8303622 1 Screw, Hex Hd Cap, 3/8NC x 2.0 20 8320242 1 Element, Engine Oil Filter 21 8080023 1 Belt, Fan 22 8270219 1 Alternator 23 8082113 1 Pulley, Alternator 24 8272005 1 Fan, Cooling 25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 27 8277065 1 Relay, Starter 28 8305619 3 Lockwaut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper		8303729	12	Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5
20 8320242 1 Element, Engine Oil Filter 21 8080023 1 Belt, Fan 22 8270219 1 Alternator 23 8082113 1 Pulley, Alternator 24 8272005 1 Fan, Cooling 25 8270412 1 Solenoid, Starter 26 8270412 1 Solenoid, Starter 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 39 7070572 1 Bracket, Radiator Mo		7072772	1	Bracket, Radiator, Upper
21 8080023 1 Belt, Fan 22 8270219 1 Alternator 23 8082113 1 Pulley, Alternator 24 8272005 1 Fan, Cooling 25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 27 8277065 1 Relay, Starter 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, I/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Engine Mount L. H.	19	8303622	1	Screw, Hex Hd Cap, 3/8NC x 2.0
22 8270219 1 Alternator 23 8082113 1 Pulley, Alternator 24 8272005 1 Fan, Cooling 25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 27 8277065 1 Relay, Starter 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Engine Mount R. H. 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1	20	8320242	1	Element, Engine Oil Filter
23 8082113 1 Pulley, Alternator 24 8272005 1 Fan, Cooling 25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 27 8277065 1 Relay, Starter 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 4 Heater, Engine Coolant (Option) 32 8310002 2 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cover, Flywheel Housing 37 7072392 1 Bracket, Engine Mount R. H. 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Lockwasher, 3/8 43 8307204 2	21	8080023	1	Belt, Fan
24 8272005 1 Fan, Cooling 25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 27 8277065 1 Relay, Starter 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 40 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 42 8307005 2 Lockwasher, 3/8	22	8270219	1	Alternator
25 8270411 1 Starter 26 8270412 1 Solenoid, Starter 27 8277065 1 Relay, Starter 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper Cap, Test Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Engine Mount L. H. 40 7072403 1 Bracket, Engine Mount S. H. 41 8303501 2 Lockwasher, 3/8 <t< td=""><td>23</td><td>8082113</td><td>1</td><td>Pulley, Alternator</td></t<>	23	8082113	1	Pulley, Alternator
26 8270412 1 Solenoid, Starter 27 8277065 1 Relay, Starter 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Engine Mount L. H. 40 7072403 1 Bracket, Engine Mount E. H. 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut,	24	8272005	1	Fan, Cooling
27 8277065 1 Relay, Starter 28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper Cap, Test Bracket, Engine Mount R. H. Cover, Flywheel Housing 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 <t< td=""><td>25</td><td>8270411</td><td>1</td><td>Starter</td></t<>	25	8270411	1	Starter
28 8305619 3 Locknut, 3/4-10NC 29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cop, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1	26	8270412	1	Solenoid, Starter
29 8303625 8 Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5 30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 <td>27</td> <td>8277065</td> <td>1</td> <td>Relay, Starter</td>	27	8277065	1	Relay, Starter
30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	28	8305619	3	Locknut, 3/4-10NC
30 8307007 8 Lockwasher, 1/2 31 8277094 1 Heater, Engine Coolant (Option) 32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	29	8303625	8	Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr 5
32 8310002 2 Lockwasher, External Tooth 1/4 33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	30	8307007	8	
33 7079304 1 Radiator (Includes Item 34) 34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	31	8277094	1	Heater, Engine Coolant (Option)
34 8180306 1 Cap, Radiator 35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	32	8310002	2	Lockwasher, External Tooth 1/4
35 7079533 1 Hose, Radiator, Upper 36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	33	7079304	1	Radiator (Includes Item 34)
36 8403221 1 Cap, Test 37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	34	8180306	1	Cap, Radiator
37 7072392 1 Bracket, Engine Mount R. H. 38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4		7079533	1	Hose, Radiator, Upper
38 7054632 1 Cover, Flywheel Housing 39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4		8403221	1	Cap, Test
39 7070572 1 Bracket, Radiator Mount 40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	37	7072392	1	
40 7072403 1 Bracket, Engine Mount L. H. 41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	38	7054632	1	Cover, Flywheel Housing
41 8303510 2 Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5 42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	39	7070572	1	Bracket, Radiator Mount
42 8307005 2 Lockwasher, 3/8 43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	40	7072403	1	
43 8307204 2 Washer, Flat 3/8 44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4	1 .	8303510	2	Screw, Hex Hd Cap, 3/8-24 x 1.00 Gr 5
44 8305601 2 Locknut, 1/4-20 45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4		8307005		
45 7069202 1 Bracket, Starter Relay 46 8307109 2 Washer, Flat 1/4				
46 8307109 2 Washer, Flat 1/4			2	
				· · · · · · · · · · · · · · · · · · ·
47 8303705 2 Screw, Hex Flange, 1/4-20 x 3/4				, ,
	47	8303705	2	Screw, Hex Flange, 1/4-20 x 3/4

(JOHN DEERE — 4239T TURBO)

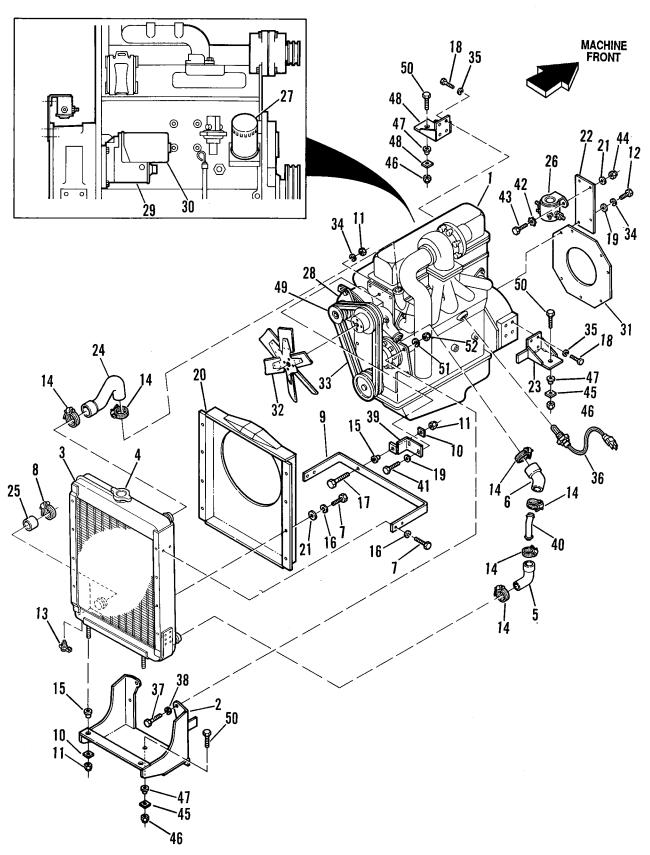


4.3

(JOHN DEERE — 4239T TURBO)

lk	(001111 DELITE — 42391 TOTOO)					
Item No.	Part Number	Qty.	Description			
1	8262116	1	Engine, John Deere- 4239T—Turbo			
2	7077913	1	Bracket, Engine & Radiator Mount			
3	7079304	1	Radiator (Includes item 6)			
4	8180306	1	Cap Radiator			
5	7079332	1	Hose, Lower Radiator 1-3/4"			
6	7079342	1	Hose, Lower Radiator 2"			
7	8303729	12	Screw, Hex Hd Cap, 1/4-20 x 5/8 Gr 5			
8	8405104	. 1	Clamp, Hose 2-1/4"			
9	7070572	1 . :	Bracket, Radiator Mount			
10	7057141	3	Washer, Rebound			
11	8305618	3	Nut, Hex, 3/8-16			
12	8303681	6	Screw, Hex Hd Cap, 3/8-16 x 3/4 Gr 5			
13	8904001	1	Cock, Drain, 1/4NPT			
14	8275201	6	Clamp, Hose			
15	8278008	3	Mount, Vibration			
16	8307002	12	Lockwasher 1/4			
17	8303622	1	Screw, Hex Hd Cap, 3/8-16 x 2.00 Gr 5			
18	8303625	8	Screw, Hex Hd Cap,1/2-13 x 1-1/4 Gr 5			
19	8307204	8	Washer, Flat 3/8			
20	7070703	1	Shroud, Radiator			
21	8307202	10	Washer, Flat 1/4			
22	7069202	1	Mount, Starter Relay			
23	7077962	1	Mount, Engine R. H.			
24	7079364	1	Hose, Radiator Upper 1-3/4"			
25	8403221	1	Cap, Radiator Port 1-3/4"			
26	8277065	1	Relay, Starter			
27	8320239	1 1	Element, Oil Filter			
28	8033438	1 1	Alternator			
29	8033439	1 1	Starter			
30	8033440		Solenoid, Starter			
31	7071232	1	Cover, Flywheel Housing	•		
32	8033476	1	Fan, Cooling	-		
33	8033441	1	Belt Set			
34	8307005	6	Lockwasher, 3/8			
35	8307007	8	Lockwasher, 1/2			
36	8277138	1	Heater, Engine Coolant			
37	8303699	4	Screw, Hex Hd Cap, 5/8-11 x 1-1/4 Gr 5			
38	8307009	4	Lockwasher, 5/8			
39	7070552	1	Bracket, Radiator Support			
40	7079352	1 1	Tube, Water			
41	8303621	2	Screw, Hex Hd Cap, 3/8-16 x 1-1/2			
42	8310002	2	Lockwasher, External Tooth, 1/4			
43	8303705	2	Screw, Hex Hd Cap, 1/4-20 x 3/4			
43	8305601	2	Nut, Lock 1/4-20 Nut, Lock 1/4-20			
45	7054351	3	Washer, Rebound			
46	8305619	3	Nut, Hex 3/4-10 UNC			
47	8278007	3	Mount, Vibration			
48	7071202	1	Mount, Vibration Mount, Engine L.H.			
49	8033442	1	Pulley, Alternator			
50	8303639			İ		
50	8307107	3	Screw, Hex Hd Cap, 3/4-10 x 3.00 Gr 5			
52	8305014	4 4	Washer, Flat 5/8	İ		
JZ	0000014	4	Nut, Hex 5/8-11			

ENGINE MOUNTING

(DEUTZ — BF4L 913)

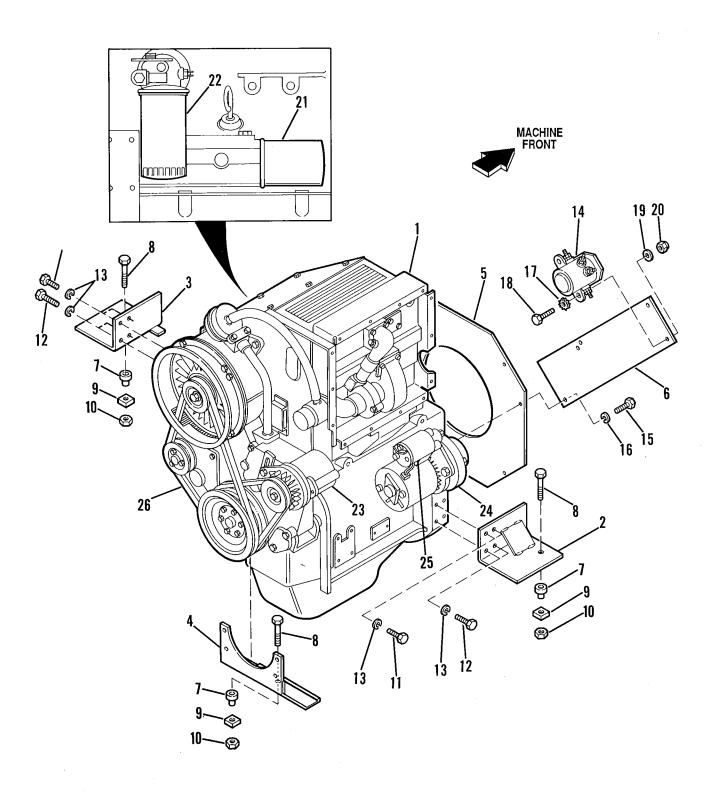


ENGINE MOUNTING

(DEUTZ — BF4L 913)

Item	Part Number	04	(DEUIZ — BF4L 913)		
No.	Part Number	Qty.	Description		
1 2	8262309 7084142	1 1	Engine, 106 HP Turbo, BF4L913 Bracket, Front Engine Mount R.H.		
3	7084142	1	Bracket, Front Engine Mount L. H.		
4	7084501	1	Bracket, From Engine Mount E. H. Bracket, Engine Mount, Rear		
5	7054632		Cover, Flywheel Housing		
6	7084181	1	Mount, Starter Relay		
7	8278007	3	Mount, Rubber		
8	8303639	3	Screw, Hex Hd Cap, 3/4 -10 x 3" Gr 5		
9	7054351	3	Washer, Rebound		
10	8305619	3	Nut, Hex Lock, 3/4 -10		
11	8303519	4	Screw, Hex Hd Cap, M12 x 1.75 x 35mm, PC 8.8		
12	8303618	4	Screw, Hex Hd Cap, M12 x 1.75 x 25mm, PC 8.8		
13	8307025	8	Lockwasher, M12		
14	8277065	1	Relay, Starter		
15	8303551	6	Screw, Hex Hd Cap, M 10 x 15mm, PC 8.8		
16	8307023	6	Lockwasher, M10		
17	8310002	2	Lockwasher,Ext. Tooth 1/4	11	
18	8303705	2	Screw, Hex Hd Cap, 1/4 NC x 3/4		
19	8307109	2	Washer, Flat 1/4		
20	8305601	2	Locknut 1/4 NC		
21	8320263	1	Element, Fuel Filter		
22	8320264	1	Element, Oil Filter		
23	8033443	1	Alternator		
24	8033444	1	Starter		
25	8033445	1	Solenoid, Starter		
26	8033446	1	V-Belt		
		-			
4.					
	'				
			·		
			,		
			, *		
			•		
		[

EXHAUST SYSTEM

(FORD)

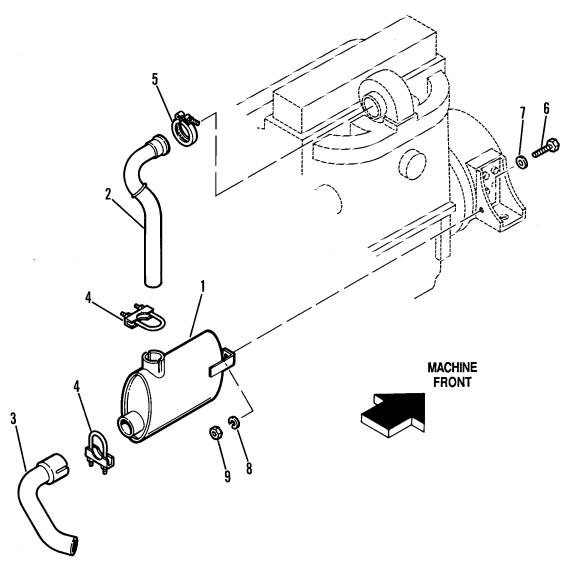


PB0410

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9	7066882 7080562 7089802 8275212 8275233 8303625 8307206 8307007 8305012	1 1 2 1 1 1 1	Muffler Pipe, Exhaust Pipe, Tail Clamp, Muffler 2-1/2 Dia. Clamp, "V" Screw, Hex Hd Cap, 1/2-13 x 1-1/4 Gr5 Washer, Flat 1/2 Lockwasher 1/2 Nut, Hex 1/2-13

EXHAUST SYSTEM

(PERKINS)

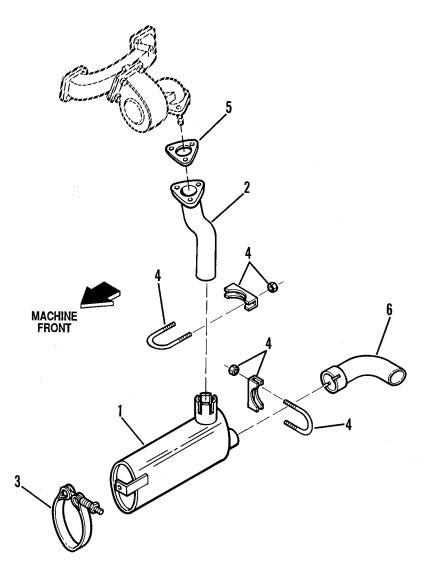


PB0420

Item No.	Part Number	Qty.	Description
1	7066882	1	Muffler
2	7076663	1	Pipe, Exhaust
3	8405604	2	Clamp, T-Bolt
4	8275212	2	Clamp, Muffler, 2-1/2 Dia.
5	8030128	1	Gasket, Exhaust Manifold
6	7089812	1	Pipe, Tail


EXHAUST SYSTEM

(JOHN DEERE)

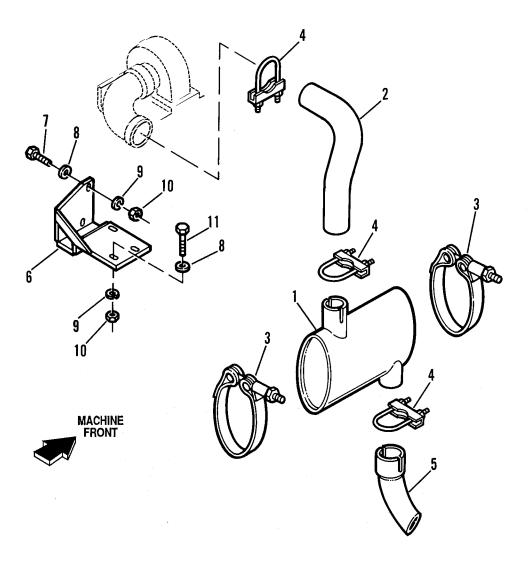

Item No.	Part Number	Qty.	Description
1	7070383	1	Muffler
2	7070392	1	Pipe, Exhaust
3	8405605	2	Clamp, T-Bolt
4	8275213	3	Clamp, Muffler, 4"
5	7070402	1	Pipe, Tail
6	7070832	1	Bracket, Exhaust Elbow Mounting
7	8303679	3	Screw, Hex Hd Cap, 3/8-16 x 1-3/4 Gr. 5
8	8307204	6	Washer, Flat, 3/8
9	8307005	6	Lockwasher, 3/8
10	8305008	6	Nut, Hex 3/8-16
11	8303622	3	Screw, Hex Hd Cap, 3/8-16 x 2 Gr. 5

EXHAUST SYSTEM (DEUTZ)

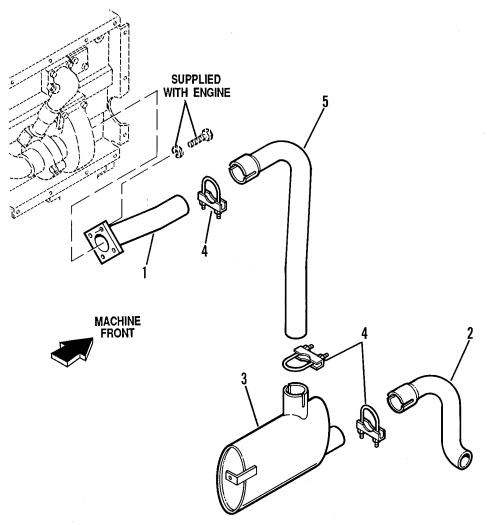


PB0440

Item No.	Part Number	Qty.	Description
1 2 3 4 5	7084172 7073632 7066882 8275212 7084272	1 1 3 1	Pipe, Exhaust Pipe, Tail Muffler Clamp, Muffler, 2-1/2" Dia. Tube

AIR CLEANER


(FORD)

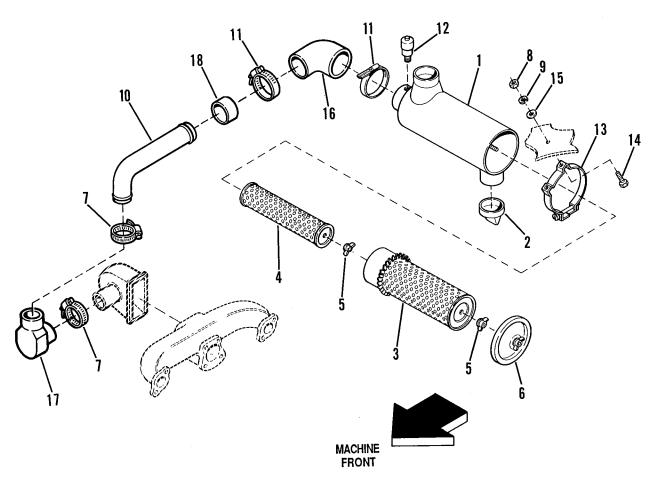

Item No.	Part Number	Qty.	Description
1	8273013	1	Air Cleaner Assembly (Includes items 2 thru 6)
2	8032764	1	Valve, Vacuator
3	8273237	1	Element, Primary
4	8273238	1	Element, Safety
5	8273272	2	Nut Assembly
6	8032762	1	Cover, End
7	8405202	2	Clamp, Hose 2-3/4
8	8305006	4	Nut, Hex 5/16-18 UNC
9	8307004	4	Lockwasher 5/16
10	7085282	1	Tube, Air Intake
11	8405301	2	Clamp, Hose 4" Max
12	8273241	1	Indicator, Air Service, 25 Inch
13	8273240	2	Band, Mounting 8"
14	8303697	4	Screw, Hex Hd Cap 5/16-18 x 3/4
15	8307203	4	Washer, Flat 5/16
16	8273262	1	Elbow, Reducing 3-1/2 to 3"
17	8273269	1	Elbow, 90° Reducing, 2-1/2 to 2-5/16
18	8402020-0025	1	Hose, 2-1/2 ID x 2-1/2' Long


AIR CLEANER

(PERKINS)

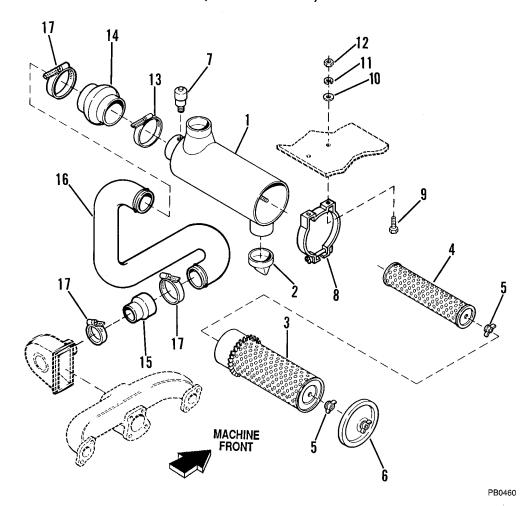

Item No.	Part Number	Qty.	Description
1	8273013	1	Air Cleaner Assembly (Includes Items 2 thru 6)
2	8032764	1	Valve, Vacuator
3	8273237	1	Element, Primary
4	8273238	1	Element, Safety
5	8273272	2	Nut Assembly
6	8032762	1	Cover, End
7	8273241	1	Indicator, Service, 25 inch
8	8273240	2	Band, Mounting, 8"
9	8303697	4	Screw, Cap, Hex Hd, 5/16NC x 3/4
10	8307203	4	Washer, Flat, 5/16
11	8307004	4	Lockwasher, 5/16
12	8305006	4	Nut, Hex, 5/16NC
13	8405301	1	Clamp, Hose, 4 inch
14	8273117	1	Hump Hose
15	8273118	1	Reducer, Hose
16	7082372	1	Tube, Air Intake
17	8405203	3	Clamp, Hose, 3"


AIR CLEANER (JOHN DEERE)

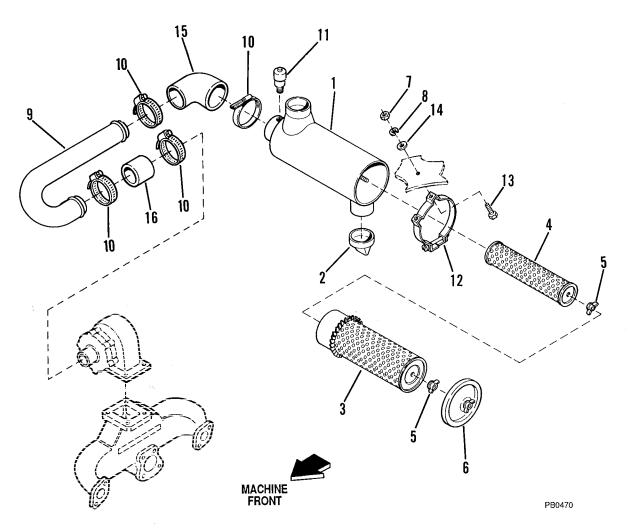

Item No.	Part Number	Qty.	Description
1	8273013	1	Air Cleaner Assembly (Includes items 2 thru 6)
2	8032764	1	Valve, Vacuator
3	8273237	1	Element, Primary
4	8273238	1	Element, Safety
5	8273272	2	Nut Assembly
6	8032762	1	Cover, End
7	8305006	4	Nut, Hex 5/16-18 UNC
8	8307004	4	Lockwasher 5/16
9	7079012	1	Tube, Air Intake
10	8405301	4	Clamp, Hose 4" Max
11	8273243	1	Indicator, Air Service, 25 Inch
12	8273240	2	Band, Mounting 8"
13	8303697	4	Screw, Hex Hd Cap 5/16-18 x 3/4
14	8307203	4	Washer, Flat 5/16
15	8273262	1	Elbow, Reducing 3-1/2 to 3"
16	8402018-0030	1	Hose 3 ID x 3" Long


AIR CLEANER

(DEUTZ)

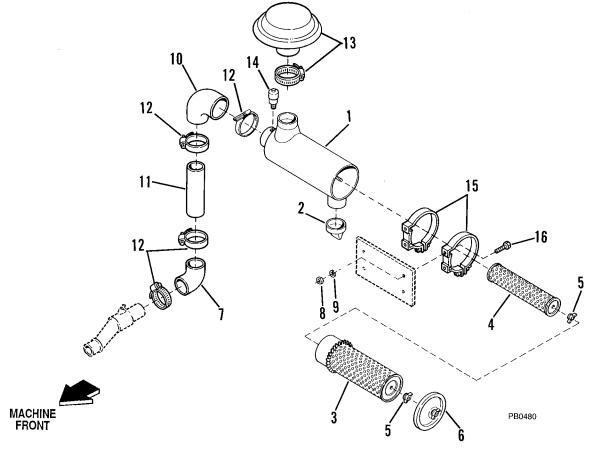

Item No.	Part Number	Qty.	Description
1	8273013	1	Air Cleaner Assembly (Includes items 2 thru 6)
2	8032764	1	Valve, Vacuator
3	8273237	1	Element, Primary
4	8273238	1	Element, Safety
5	8273272	2	Nut Assembly
6	8032762	1	Cover, End
7	8273119	1	Elbow, 90° 3" ID
8	8305006	4	Nut, Hex 5/16-18 UNC
9	8307004	4	Lockwasher 5/16
10	8273262	1	Elbow, Reducing, 3-1/2 to 3
11	7084191	1	Tube, Air Intake
12	8405301	4	Clamp, Hose 4" Max
13	8273239	1	Cap, Air Inlet (w/clamp)
14	8273243	1	Indicator, Air Service, 25 Inch
15	8273240	2	Band, Mounting 8"
16	8303697	4	Screw, Hex Hd Cap 5/16-18 x 3/4


(FORD)

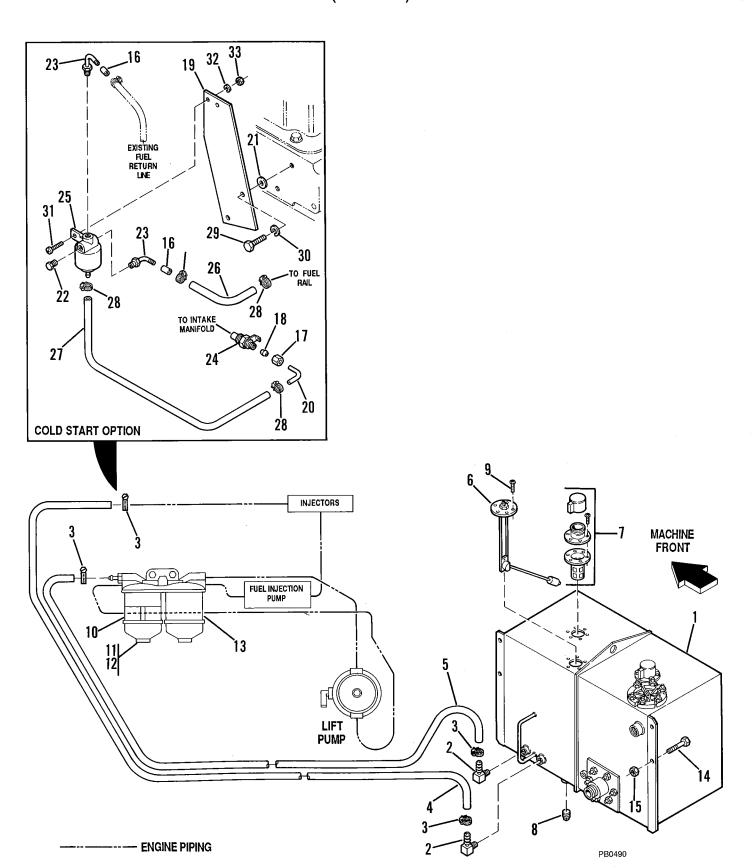

(FORD)

	(10112)			
Item No.	Part Number	Qty.	Description	
1.	7086664	1	Reservoir, Hydraulic/Fuel	
2	8420227	2	Elbow, 90°, 1/4 NPT x 1/4 Hose	
3	8405009	4	Clamp, Hose 5/8 Max. O.D.	
4	8403214-1350	1	Hose, Fuel	
5	8403214-1290	1	Hose, Fuel	
6	7088792	1	Fuel Level Sender AssemblY	
7	8322022	1	Filler/Breather Assembly	
8	8541409	1	Plug, Sq. Hd. 1 NPT	
9	8303839	5	Screw, Pan Hd. #10 x 1/2	
10	8033473	1	Bowl, Sediment	
11	8033474	1	Plug, Bowl Drain	
12	8033475	1	Washer	
13	8033472	1	Kit, Fuel Filter (Includes 1 seal, 2 gaskets and 1 element)	
14	8303632	4	Screw, Hex Hd Cap, 5/8-11 x 2-1/2 Gr 5	
15	8305643	4	Locknut, 5/8-11 ESNA	
			Items16 thru 33 are part of Cold Start Option	
			nomore and so are part of sold start opinon	
16	8582006-0010	2	Tube, 1/4 O.D. Nylon, 1" long	
17	8274212	1	Nut, 3/16 Tube	
18	8274211	1	Sleeve, 3/16 Tube	
19	7076842	1	Bracket, Reservoir	
20	7091151	1	Tube, Heater Inlet	
21	7076851	2	Spacer	
22	8022062	1	Plug	
23	8022069	2	Tube Assembly. 3/16 O.D.	
24	8022074	1	Heater Plug Assembly	
25	8022076	1	Reservoir	
26	8403214-0100	1	Hose, Fuel	
27	8403218-0180	1	Hose, Fuel	
28	8405009	4	Clamp, Hose 5/8 Max O. D.	
29	8303677	2	Screw, Hex Hd Cap, 7/16-14 x 1"	
30	8307006	2	Lockwasher 7/16	
31	8303837	2	Screw, Rd. Hd Machine, #10-24 x 3/4"	
32	8307003	2	Lockwasher #10	
33	8305002	2	Nut, Hex #10-24	
L	L		L	


(PERKINS)

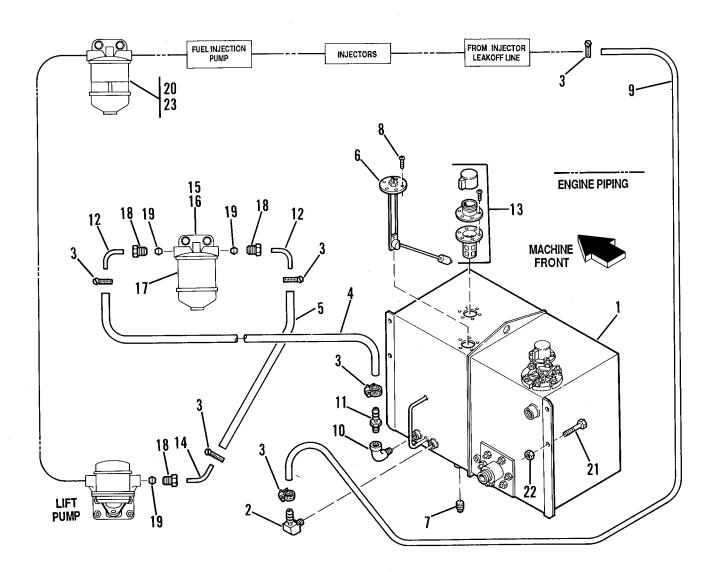

(PERKINS)

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8	7086664 8420227 8405009 8403219-1100 8403219-0200 7088792 8541409 8303839	1 1 6 1 1 1 5	Reservoir, Hydraulic/Fuel Elbow, 90°, 1/4 NPT X 1/4 Hose Clamp, Hose 5/8 Max. O.D. Hose, Fuel, 5/16 I.D. x 110.0 Hose, Fuel, 5/16 I.D. x 20.0 Fuel Level Sender Assembly Plug, Sq. Hd. 1/2 NPT Screw, Pan Hd. #10 x 1/2
9 10 11 12 13 14 15 16 17	8403214-1350 8541207 8420231 7076711 8322022 7076721 8303681 8307005 8274012 8274209	1 1 2 1 1 2 2 1 3	Hose, Fuel, 1/4 I.D. x 135.0 Elbow, 90° Street, 1/4NPT Coupling, 5/16 Hose x 1/4 NPT Tube, Fuel Filter Filler/Breather Assembly Tube, Fuel Pump Screw, Hex Hd Cap, 3/8-16 x 3/4 Lockwasher, 3/8 Fuel Pre-filter Hex Bushing, 1/2-20 UNF x 5/16 tube
19 20 21 22	8274210 8030943 8303632 8305643	3 1 4 4	Sleeve, 5/16 tube Fuel Filter Assembly (See Kits) Screw, Hex Hd Cap, 5/8-11 x 2-1/2 Gr 5 Locknut, 5/8-11 ESNA KITS
23	8320243	1	Kit, Fuel Filter Element

FUEL SYSTEM (JOHN DEERE)

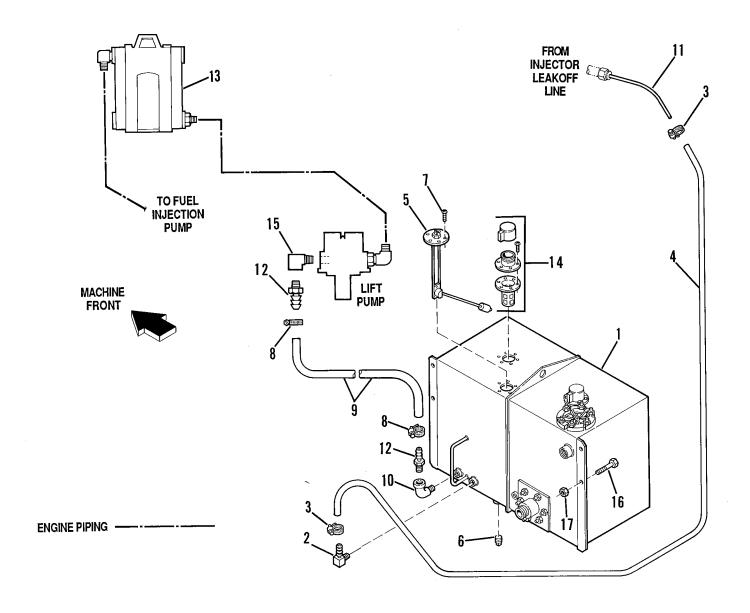


FUEL SYSTEM

(JOHN DEERE)

			(JOHN DEENE)
Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 2 3 14 15 16 17	7086664 8420227 8405009 8403214-1590 7088792 8541409 8303839 8405006 8403220-1350 8541207 7083661 8420232 8320238 8322022 8541260 8303632 8305643	1 1 2 1 1 1 2 1 1 1 2 1 1 1 4 4	Reservoir, Hydraulic/Fuel Elbow, 90°, 1/4 NPT x 1/4 Hose Clamp, Hose 5/8 Max. O.D. Hose, Fuel, 1/4 I.D. x 159" Fuel Level Sender Assembly Plug, Sq. Hd., 1/2 NPT Screw, Pan Hd. #10 x 1/2 Clamp, Hose 7/8" O.D. Hose, Fuel, 1/2 I.D. x 135" Elbow, 90° Street, 1/4 NPT Tube, Fuel Pipe Coupling, 1/2 Hose x 1/4NPT Element, Fuel Filter Filler/Breather Assembly Elbow, 90° Street, male 1/8 NPT x female 1/4 NPT Screw, Hex. Hd. Cap, 5/8-11 x 2-1/2 Gr 5 Locknut, 5/8-11 ESNA
		_	

FUEL SYSTEM

(DEUTZ)

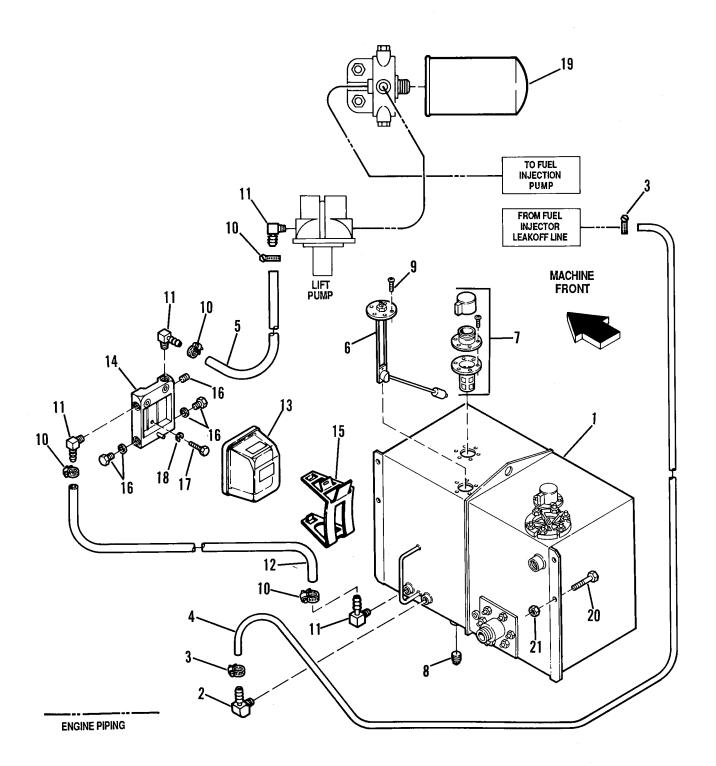


PB0520

FUEL SYSTEM

(DEUTZ)

Item			(02012)
No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21	7086664 8420227 8405009 8403214-1350 8403217-0380 7088792 8322022 8541409 8303839 8405006 8420229 8403217-1120 8274013 8274014 8274015 8274016 8303697 8307004 8320263 8303632 8305643	1 1 2 1 1 1 1 1 5 4 4 1 1 1 1 2 2 1 4 4 4 4 4 4	Reservoir, Hydraulic/Fuel Elbow, 90°, 1/4 NPT x 1/4 Hose Clamp, Hose 5/8 Max. O.D. Hose, Fuel 1/4 x 135" Hose, Fuel 3/8 x 38" Fuel Level Sender Assembly Filler/Breather Assembly Plug, Sq. Hd. 1 NPT Screw, Pan Hd. #10 x 1/2 Clamp, Hose Elbow, 90°, 1/4 NPT x 3/8 Hose Hose, Fuel 3/8 x 112" Element, Water Separator Base, Water Separator Clamp, Water Separator Plug Kit, Water Separator Screw, Hex Hd Cap, 5/16-18 x 3/4 Lockwasher, 5/16 Element, Fuel Filter Screw, Hex Hd Cap, 5/8-11 x 2-1/2 Gr 5 Locknut, 5/8-11 ESNA

POWER STEERING CIRCUIT

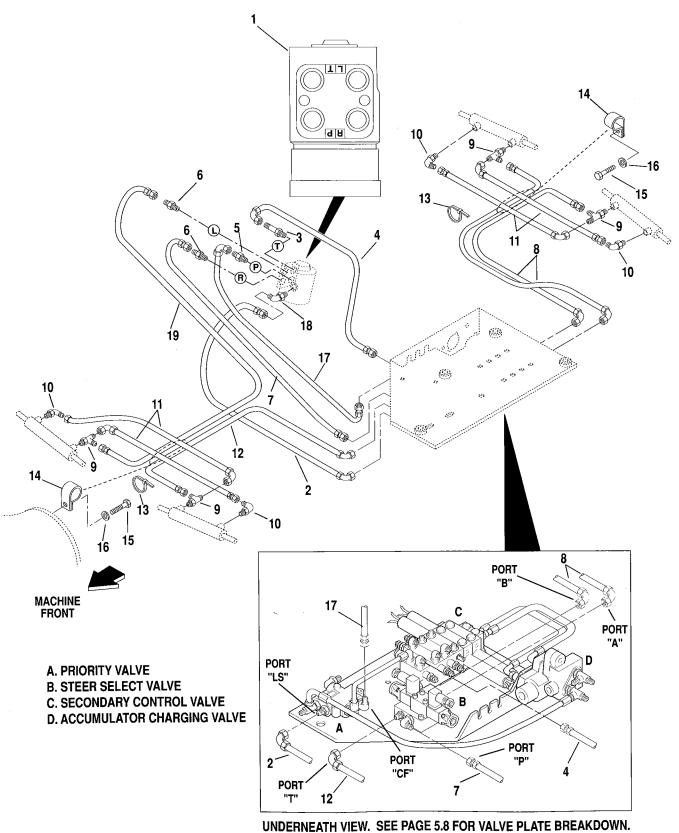


PB 0531

POWER STEERING CIRCUIT

Item No.	Part Number	Qty.	Description
No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	8721022 2712592 8760143 2711962 8760107 8760110 2711972 2712142 8760449 8760311 6604762 2712012 8584002 8406302 8303264 8307316 2712122 8760322 2712372	1 1 1 1 2 4 4 4 1 2 2 2 1 1 1	Power Steering Unit Hose Assembly, Priority Valve to Steering Valve Connector, Long Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring Hose Assembly, Control Valve to Steering Valve Connector, Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring Connector, Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring Hose Assembly, Steer Select Valve to Steering Valve Hose Assembly, Steer Select Valve to Rear Steering Cylinders Tee, Run SAE 6-6, male JIC 37° x male str. thd. o-ring Elbow, 90° SAE 6-6, male JIC 37° x male str. thd. o-ring Hose Assembly, Steering Crossover Hose Assembly, Steering Valve to Front L.H. Steering Cylinder Tie Wrap Support, Hose Screw, Hex Hd Cap, 7/16-14 x 1-1/2 Gr 8 Washer, Flat 7/16 SAE Hose Assembly, Priority Valve to Steering Valve Elbow, 90°, SAE 4-4, male JIC 37° x male str. thd. o-ring Hose Assembly, Steering Valve to Front R. H. Steering Cylinder


MAIN CONTROL VALVE CIRCUIT — CABLE CONTROLLED VALVE

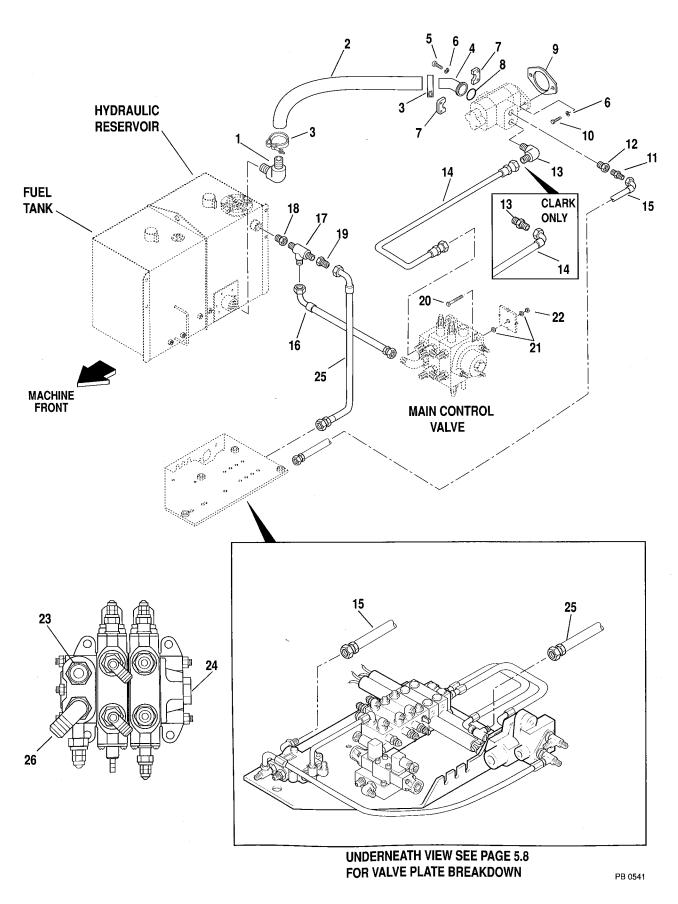

MAIN CONTROL VALVE CIRCUIT — CABLE CONTROLLED VALVE

Item No.	Part Number	Qty.	Description
-	0.40.400.4		
1	8424234	1	Elbow, 2" NPT - 2" Hose I. D.
2	8401004-0180	1	Hose, Suction - 2" I. D. (Funk)
	8401004-0280	1	Hose, Suction - 2" I. D. (Clark)
3	8405209	2	Clamp, T-Bolt
4	8424233	1	Elbow, 90° - 2"
5	8303626	4	Screw, Hex Hd Cap, 1/2-13 x 1-1/2
6	8307007	6	Lockwasher, 1/2
7	8546407	2	Clamp Half 2"
8	8640208	1	O-Ring, #228
9	7054902	1	Gasket
10	8303602	2	Screw, Hex Hd Cap, 1/2-13 x 1-1/4
11	8760107	1	Connector, Straight, SAE8-8, male JIC 37° x male str. thd. o-ring
12	8769545	1	Reducer, SAE 16-8, male str. thd. o-ring x female internal o-ring boss
13	8760102	1	Connector, Straight, SAE 16-16, male JIC 37° x male str. thd. o-ring (Clark)
	8760309	1	Elbow, 90°, SAE 16-16, male JIC 37° x male str. thd. o-ring (Funk)
14	2712282	1	Hose Assembly, Pump to Main Control Valve (Funk)
	6604592	1	Hose Assembly, Pump to Main Control Valve (Clark)
15	2711872	1	Hose Assembly, Priority Valve to Pump (Funk)
	6605062	1	Hose Assembly, Priority Valve to Pump (Clark)
16	2712402	1	Hose Assembly, Main Control Valve to Tank
17	8760553	1	Tee, Run, SAE 16-16P, male JIC 37° x male NPT
18	8540048	1	Bushing, Hex , SAE 20P-16P, male NPT x female NPT
19	8760533	1	Reducer , SAE 16-8, female JIC 37° x male JIC 37°
20	8303713	3	Screw, Hex Hd Cap, 1/2-13 x 2-1/4 Lg Gr 5
21	8307112	6	Washer, Flat 1/2
22	8305644	3	Nut, Hex Lock, 1/2-13
23	8760106	1	Connector , Straight, SAE 12-16, male JIC 37° x male str. thd. o-ring
24	8760446	1	Plug, SAE16
25	2712122	1	Hose Assembly, Acc. Chg. Valve to Tank
26	8760327	1	Elbow , 90°, SAE 16-12, male JIC 37° x male str. thd. o-ring
1			


MAIN CONTROL VALVE CIRCUIT — ELECTRONIC CONTROL VALVE

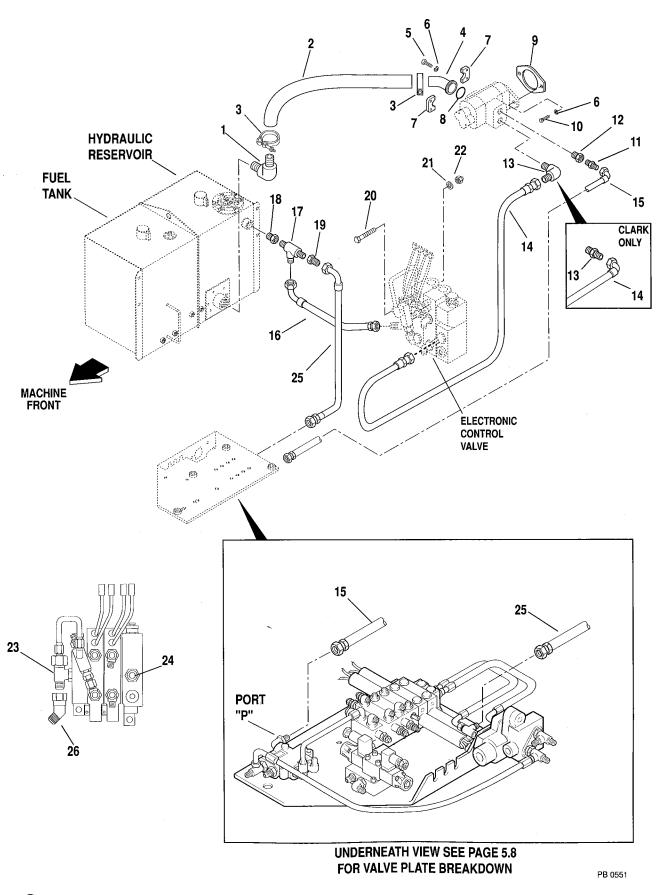

MAIN CONTROL VALVE CIRCUIT — ELECTRONIC CONTROL VALVE

Item No.	Part Number	Qty.	Description
1	8424234	1	Elbow, 2" NPT - 2" Hose I. D.
2	8401004-0180	1	Hose, Suction - 2" I. D. (Funk)
-	8401004-0280	1	Hose, Suction - 2" I. D. (Clark)
3	8405209	2	Clamp, T-Bolt
4	8424233	1	Elbow, 90° - 2"
5	8303626	4	Screw, Hex Hd Cap, 1/2-13 x 1-1/2"
6	8307007	6	Lockwasher, 1/2"
7	8546407	2	Clamp Half 2"
8	8640208	1	O-Ring, #228
9	7054902	1	Gasket
10	8303602	2	Screw, Hex Hd Cap, 1/2-13 x 1-1/4"
11	8760107	1	Connector, Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring
12	8760545	1	Reducer, SAE 16-8, male str. thd. o-ring x female internal o-ring boss
13	8760102	1	Connector, Straight, SAE 16-16, male JIC 37° x male str. thd. o-ring (Clark)
	8760309	1	Elbow, 90°, SAE 16-16, male JIC 37° x male str. thd. o-ring (Funk)
14	2712282	1	Hose Assembly, Pump to Main Control Valve (Funk)
	6604592	1	Hose Assembly, Pump to Main Control Valve (Clark)
15	2711872	1	Hose Assembly, Priority Valve to Pump (Funk)
	6605062	1	Hose Assembly, Priority Valve to Pump (Clark)
16	2712402	1	Hose Assembly, Main Control Valve to Tank
17	8760553	1	Tee, Run, SAE 16-16P, male JIC 37° x male NPT
18	8540048	1	Bushing, Hex , SAE 20P-16P, male NPT x female NPT
19	8760533	1	Reducer, SAE 16-8, female JIC 37° x male JIC 37°
20	8303713	3	Screw, Hex Hd Cap, 1/2-13 x 2-1/4 Lg Gr 5
21	8307112	3	Washer, Flat 1/2
22	8305644	3	Nut, Hex Lock, 1/2-13
23	8760552	1	Tee, Branch, SAE 16-16, male JIC 37° x male str. thd. o-ring
24	8760102	1	Connector, Straight, SAE 16-16, male JIC 37° x male str. thd. o-ring
25	2712122	1	Hose Assembly, Acc. Chg. Valve to Tank
26	8760273	1	Elbow, 45°, SAE 16-16, male JIC 37° x female JIC 37° swivel
•			
1			
1			
1			

BOOM RAISE/LOWER AND EXTEND/RETRACT CIRCUITS (CABLE CONTROLLED VALVE)

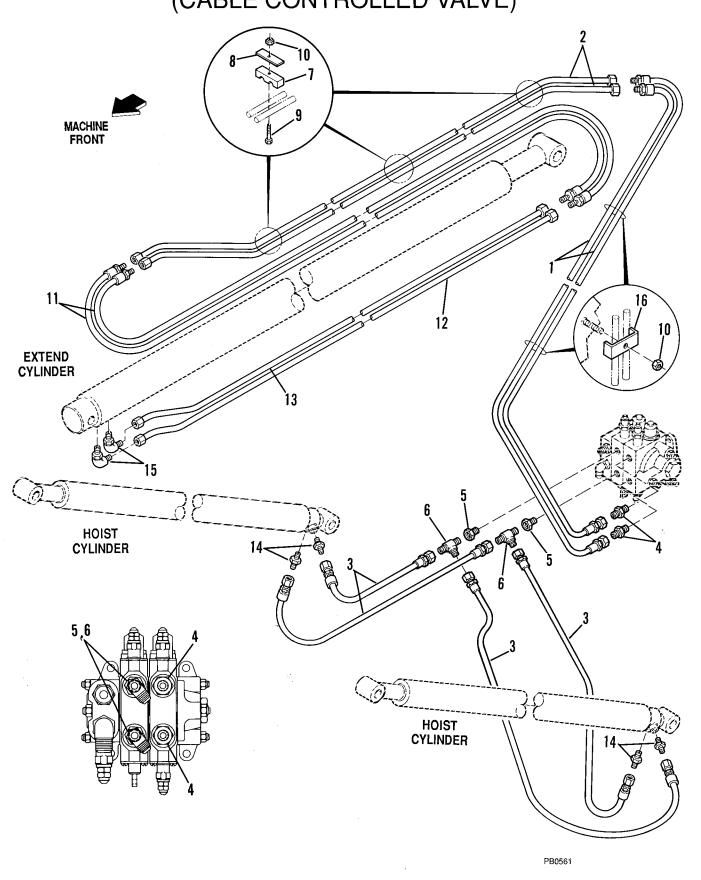


BOOM RAISE/LOWER AND EXTEND/RETRACT CIRCUITS (CABLE CONTROLLED VALVE)

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	Part Number 2712192 7065253 2711242 8760111 8760550 8760481 8769122 8769123 8303746 8305626 2712232 7079152 7079142 8760115 8760304 7065632	<u> </u>	Hose Assembly, Control Valve to Boom Tubes Tube Assembly, Hoist Cylinders Connector, Straight, SAE 8-12, male JIC 37° x male str. thd. o-ring Reducer, SAE 12-10, male str. thd. o-ring x female internal o-ring boss Tee, Run, SAE 10-10, male str. thd. o-ring x male JIC 37° Clamp Set 5/8 Tube Plate, Cover Screw, Hex Hd Cap, 5/16-18 x 1-3/4 Locknut, 5/16-18 Hose Assembly, Extend Cylinder Tube Assembly Tube Assembly Connector, Straight, SAE 10-10, male JIC 37° x male str. thd. o-ring Elbow, 90°, SAE 10-10, male JIC 37° x male str. thd. o-ring Clamp

BOOM RAISE/LOWER AND EXTEND/RETRACT CIRCUITS

(ELECTRONIC CONTROLLED VALVE)

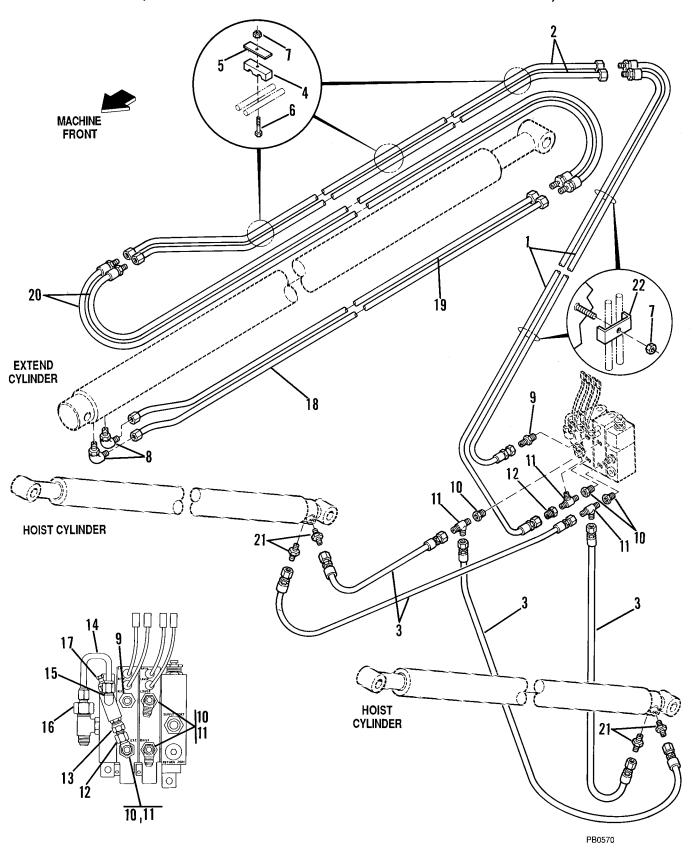


BOOM RAISE/LOWER AND EXTEND/RETRACT CIRCUITS

(ELECTRONIC CONTROLLED VALVE)

ll a sa	(-		THONIC CONTROLLED VALVE)
Item No.	Part Number	Qty.	Description
1	2712192	2	Hose Assembly, Control Valve to Boom Tubes
2	7065253	2	Tube Assembly
3	2711242	4	Hose Assembly, Hoist Cylinders
4	8769122	3	Clamp Set 5/8 Tube
5	8769123	3	Plate, Cover
6	8303746	1	Screw, Hex Hd Cap, 5/16-18 x 1-3/4
7	8305626	5	Locknut, 5/16-18
8	8760304	2	Elbow, 90°, SAE 10-10, male JIC 37° x male str. thd. o-ring
9	8760111	1 1	Connector, Straight, SAE 8-12, male JIC 37° x male str. thd. o-ring
10	8760550	3	Reducer, SAE 12-10, male str. thd. o-ring x female internal o-ring base
11	8760481	3	Tee,Run, SAE 10-10, male str. thd. o-ring x male JIC 37°
12	8760486	2	Reducer, SAE 10-16, male sit: titd. 0-mig x male sit 37° Reducer, SAE 10-8, female JIC 37° x male JIC 37°
13	8760142	1 1	Connector, Straight, SAE 8-8, female JIC 37° swivel x male str. thd. o-ring
14	7089292	¦	Tube Assembly, 1/2 O. D.
15	8760303		
16	8760533	1	Elbow, 90°, SAE 8-8, male JIC 37° x male str. thd. o-ring Reducer, SAE 16-8, female JIC 37° x male JIC 37°
17	8902655	· ·	
		1	Valve, Relief - Set at 2850 psi
18	7079152	1	Tube Assembly
19	7079142	1	Tube Assembly
20	2712232	2	Hose Assembly, Extend Cylinder
21	8760115	4	Connector, Straight, SAE 10-10, male JIC 37° x male str. thd. o-ring
22	7065632	2	Clamp
	,		
	l	ı	


GRILLE TILT, SLAVE AND FRAME TILT CIRCUITS

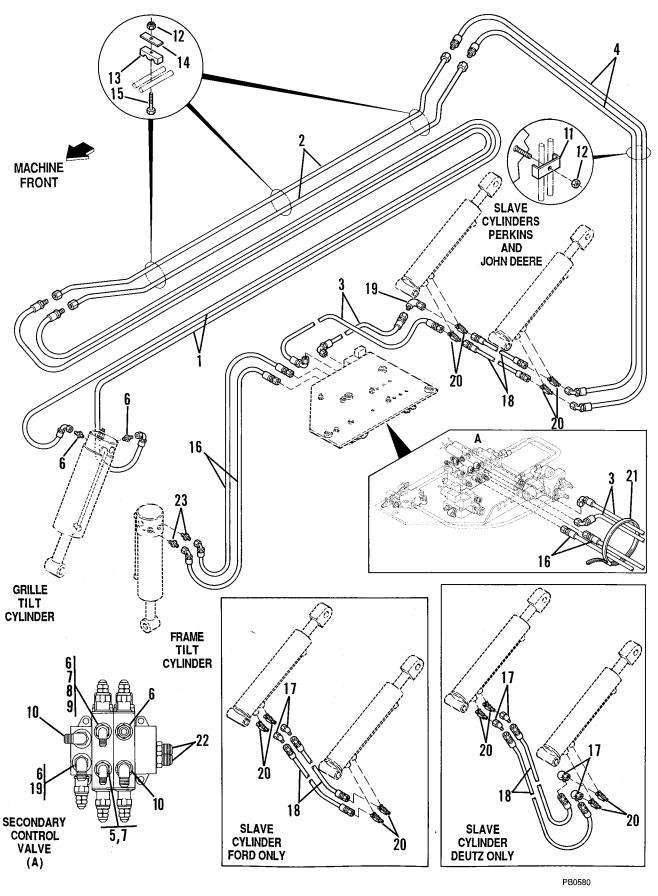

GRILLE TILT, SLAVE AND FRAME TILT CIRCUITS

1 2712242 2 7065243 2 Tube Assembly, Fork Tilt Cylinder to Boom Tubes Tube Assembly, Control Valve to Slave Cylinder Hose Assembly, Slave Cylinder to Boom Tubes Tube Assembly, Slave Cylinder to Boom Tubes Tube Assembly, Slave Cylinder to Boom Tubes Tube Assembly, Slave Cylinder to Boom Tubes Tube Assembly, Slave Cylinder to Boom Tubes Connector, Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring Tube Assembly, Slave Cylinder to Boom Tubes Connector, Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring Tube Assembly, Slave Cylinder to Boom Tubes Connector, Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring Tube Assembly, Slave Cylinder to Boom Tubes Connector, Straight, SAE 8-8, male JIC 37° x female str. thd. o-ring Tube Assembly, Sate 8-8, male JIC 37° x female str. thd. o-ring Tube Assembly, Sate 8-8, male JIC 37° x female str. thd. o-ring Tube Assembly, Sate 8-8, male JIC 37° x female str. thd. o-ring Tube Assembly, Sate 8-8, male JIC 37° x female str. thd. o-ring Tube Assembly, Sate 8-8, male JIC 37° x female JIC 37° swivel (Ford Only) Tube Assembly, Sate 8-8, male JIC 37° x female JIC 37° swivel Tube Assembly, Sate 8-8, male JIC 37° x female JIC 37° swivel Tube Assembly, Sate 8-8, male JIC 37° x female JIC 37° swivel Tube Assembly, Sate 8-8, male JIC 37° x female JIC 37° swivel Tube Assembly, Sate 8-8, male JIC 37° x female JIC 37° swivel Tube Assembly, Sate 8-8, male JIC 37° x female JIC 37° swivel Tube Assembly, Sate 8-8, male JIC 37° x female JIC 37° swivel Tube Assembly, Sate 8-8, male JIC 37° x female JIC 37° x male str. thd. o-ring Tube Assembly, Sate 8-8, male JIC 37° x male str. thd. o-ring Tube Assembly Sate Sate 8-8, male JIC 37° x male str. thd. o-ring Tube Assembly Sate Sate 8-8, male JIC 37° x male str. thd. o-ring Tube Assembly Sate Sate 8-8, male JIC 37° x male str. thd. o-ring Tube Assembly Sate Sate 8-8, male JIC 37° x male str. thd. o-ring Tube Assembly Sate Sate Sate Sate Sate Sate Sate Sate	Item No.	Part Number	Qty.	Description
	No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22	2712242 7065243 2712582 2712552 8760110 8760107 8760268 8760458 8760407 8760303 7065632 8305626 8769122 8769123 8303746 6604962 8765205 2710632 8765205 2710632 8765204 8760479 8584002 8760108	2 2 2 2 1 5 2 1 1 2 1 4 3 3 1 2 4 2 2 2 4 1 2 2	Hose Assembly, Fork Tilt Cylinder to Boom Tubes Tube Assembly, Control Valve to Slave Cylinder Hose Assembly, Slave Cylinder to Boom Tubes Connector, Straight, SAE 6-8, male JIC 37° x male str. thd. o-ring Connector, Straight, SAE 8-8, male JIC 37° x male str. thd. swivel Reducer, SAE 8-6, male JIC 37° x tube end JIC 37° Nut, SAE 8 Elbow, 90°, SAE 8-8, male JIC 37° x male str. thd. o-ring Clamp Locknut, 5/16-18 Clamp Set, 5/8 (twin tube) Plate, Clamp Top Screw, Hex Hd Cap, 5/16-18 x 1-3/4 Hose Assembly, Control Valve to Frame Tilt Cylinder Elbow, 45°, SAE 8-8, male JIC 37° x female JIC 37° swivel (Deutz Only) Elbow, 45°, SAE 8-8, male JIC 37° x female JIC 37° swivel (Ford Only) Hose Assembly, 1/2 I.D. x 20" Elbow, 90°, SAE 8-8, male JIC 37° x male str. thd. o-ring Tie Wrap Connector, Straight, SAE 8-10, male JIC 37° x male str. thd o-ring Connector, Straight, SAE 6-4, male JIC 37° x male str. thd. o-ring

BRAKE CIRCUIT

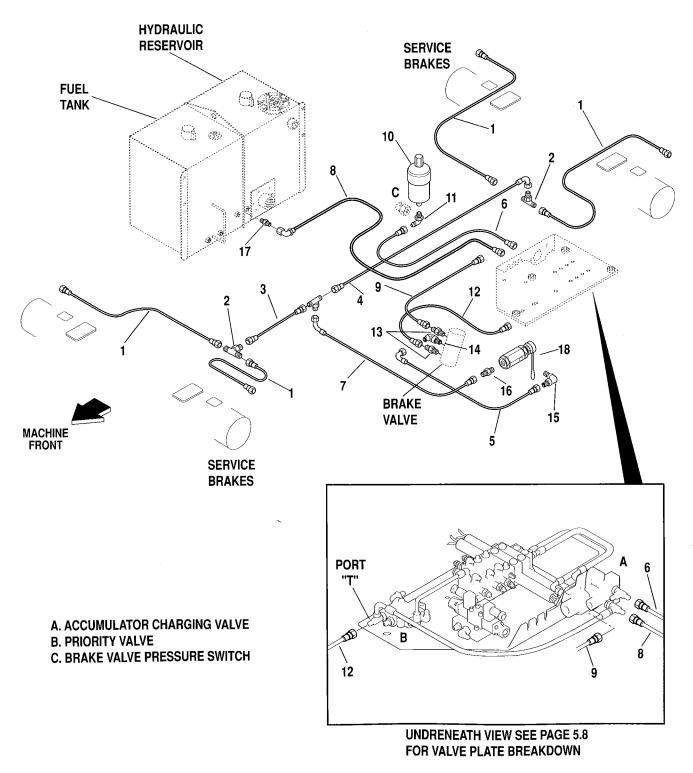


PB 0591

BRAKE CIRCUIT

Item No.	Part Number	Qty.	Description
-	2711052		
1 2	8760455	4 3	Hose Assembly, Tee to Brakes
3	2701662	1	Tee, Branch, bulkhead, SAE 6-6, male JIC 37° x male JIC 37°
4	6605772	1	Hose Assembly, Tee to Front Brake Tee
5	6605652	1 1	Hose Assembly, Tee to Rear Brake Tee
		1 1	Hose Assembly, Brake Valve to Brake Lock
6 7	2712382	1 1	Hose Assembly, Acc Chg Valve to Accumulator
	2712362	1	Hose Assembly, Brake Lock to Tee
8	6604762	1	Hose Assembly, Acc Chg Valve to Tank
9	2712182	1	Hose Assembly, Brake Valve to Acc Chg Valve
10	8742005	1	Accumulator
11	7089581	1	Elbow, 90° Special
12	2712332	1	Hose Assembly, Priority Valve to Brake Valve
13	8760110	2	Connector, Straight, SAE 6-8, male JIC 37° x male str. thd. o-ring
14	8760313	1	Elbow, 90°, SAE 6-8, male JIC 37° x male str. thd. o-ring
15	8760289	1	Elbow, 90°, SAE 6-2P, male JIC 37° x male NPT
16	8760057	1	Connector, Straight, SAE 6-2P, male JIC 37° x male NPT
17	8760036	1	Connector, Straight, SAE 6-8P, male JIC 37° x male NPT
18	8902645	1	Valve, Brake Lock (See Kits)
			<u>KITS</u>
			-
	8902647	1	Seal Kit, Brake Lock Valve
	:		
	,		

VALVE PLATE ASSEMBLY

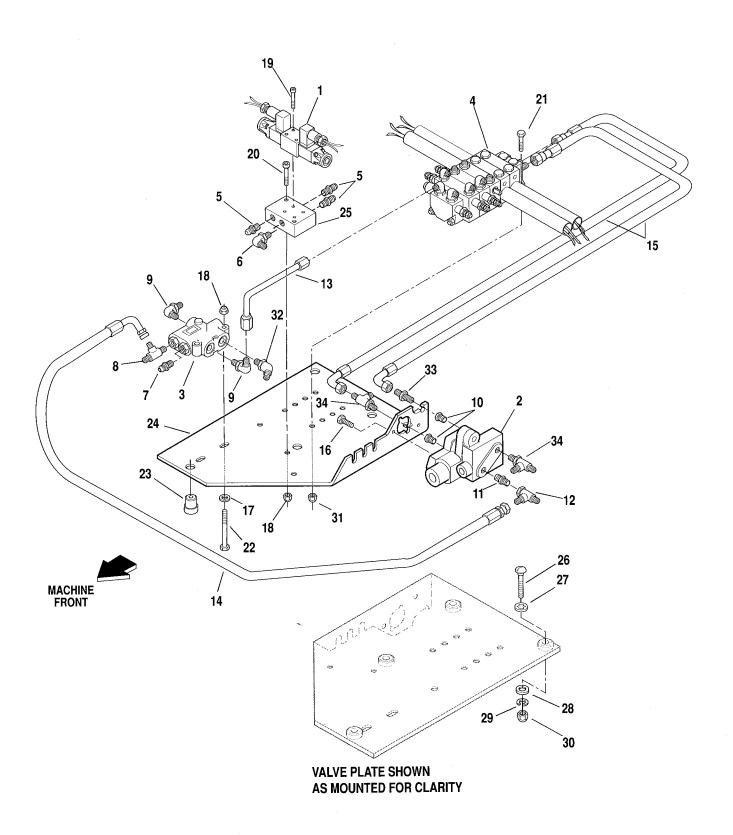


PB 0601

VALVE PLATE ASSEMBLY

Item No.	Part Number	Qty.	Description
1	8902109	1	Valve, Steering Select
2	8902229	1	Valve, Accumulator Charging
3	8902227	1	Valve, Priority
4	8902126	1	Valve, Control, Frame-Fork Tilt
	7089453	1	Valve, Control, Frame- Fork Tilt/ Auxiliary Hydraulics
	8902128	1	Valve, Frame/ Fork Tilt/ Outriggers
	8902127	1	Valve, Frame/Fork Tilt /Aux Hyd/Outriggers (Shown)
5	8760110	3	Connector, Straight, SAE 6-8, male JIC 37° x male str. thd. o-ring
6	8760313	1	Elbow, 90°, SAE 6-8, male JIC 37° x male str. thd. o-ring
7	8760113	1	Connector, Straight, SAE 4-4, male JIC 37° x male str. thd. o-ring
8	8760534	1	Tee, Run, SAE 4-4, male JIC 37° x male str. thd. o-ring
9	8760308	2	Elbow ,90°, SAE 8-10, male JIC 37° x male str. thd. o-ring
10	8760545	2	Reducer, SAE 16-8, male str. thd. o-ring x female internal o-ring boss
11	8760117	2	Connector, Straight, SAE 6-6, male JIC 37° x male str. thd. o-ring
12	8760501	1	Tee, Run, SAE 6-6, male JIC 37° x female JIC 37° swivel
13	7088692	1	Tube Assembly (S/N 9A0550 thru 0A0661)
	7091592	1	Tube Assembly (S/N 0A0662 and After)
14	2712292	1	Hose Assembly
15	6604982	2	Hose Assembly
16	8304660	2	Screw, Hex Hd Cap, 3/8-16 x 3/4
17	8307106	2	Washer, Flat, 5/16
18	8305626	4	Locknut, 5/16-18
19	8304631	4	Screw, Skt. Hd Cap, #10-24 x 2
20	8304608	2	Screw, Skt. Hd Cap, 5/16-18 x 1-1/2
21	8303621	3	Screw, Hex Hd Cap, 3/8-16 x 1-1/4
22	8303757	2	Screw, Hex Hd Cap, 5/16-18 x 2-1/2
23	8278008	4	Mount, Rubber
24	7086553	1	Plate, Valve Mounting
25	8902111	1	Body, Steer Select Valve
26	8304042	4	Bolt, Carriage, 3/8-16 x 2
27	8310070	4	Retainer, Bolt 3/8
28	8307204	4	Washer, Flat, 3/8
29	8307005	4	Lockwasher, 3/8
30	8305008	4	Nut, Hex, 3/8-16
31	8305645	3	Locknut
32	8760307	1	Elbow, 45°, SAE 8-8, male JIC 37° x male str. thd. o-ring
33	8760107	1	Connector, Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring
34	8760510	2	Tee, Run, SAE 8-8, male JIC 37° x male str. thd. o-ring
	·		

TRANSMISSION COOLING (FUNK)

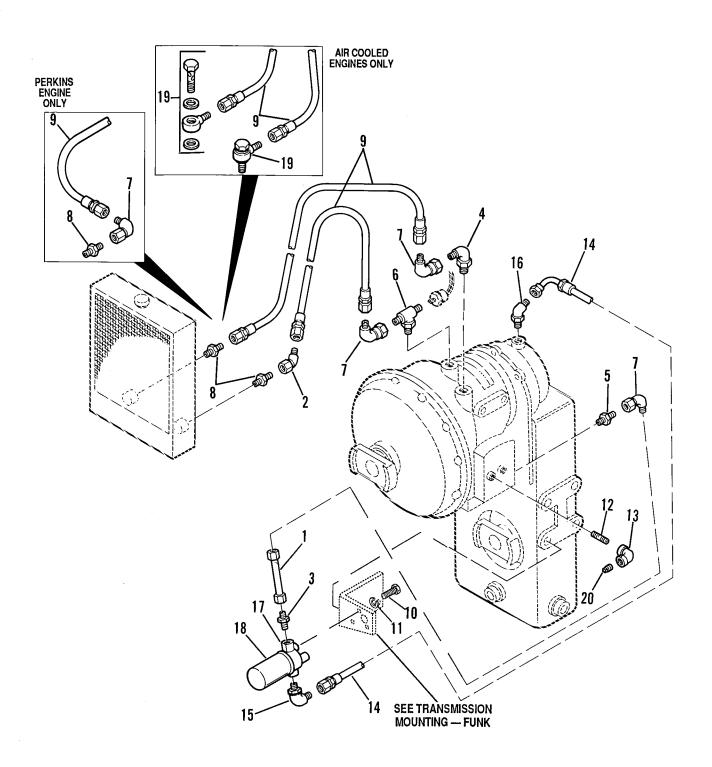

PB0610


TRANSMISSION COOLING

(FUNK)

Item No.	Part Number	Qty.	Description
1	7089472	1	Tube
2	8760286	1	Elbow, 45°, SAE 12-12, male JIC 37° x female JIC 37° swivel
			(Water Cooled Engines Only)
3	8760118	1	Connector, Straight, SAE 12-16, male JIC 37° x male str. thd. o-ring
4	8760305	1	Elbow, 90°, SAE 12-12, male JIC 37° x male str. thd, o-ring
5	8760109	1	Connector, Straight, SAE 12-12, male JIC 37° x male str. thd. o-ring
6	7089881	1	Tee, Special
7	8760254	3	Elbow, 90°, SAE 12-12, male JIC 37° x female JIC 37° swivel (4 Req'd. on Perkins Engines)
8	8760001	2	Connector, Straight, SAE 12-12P, male JIC 37° x male NPT (Water Cooled Engines Only)
9	2711042	2	Hose Assembly
10	8303670	3	Screw, Hex Hd Cap 5/16NC x 1
11	8307004	3	Lockwasher 5/16
12	8551009	1	Nipple, 1/8 NPT x 1-1/2
13	8541201	1	Elbow, 90° pipe, 1/8NPT
14	2710952	1	Hose Assembly
15	8760325	1	Elbow, 90°, SAE 12-16, male JIC 37° x male str. thd. o-ring
16	8760317	1	Elbow, 45°, SAE 12-12, male JIC 37° x male str. thd. o-ring
17	8320236	1	Head, Filter
18	8320237	1	Element, Filter
19	7074972	2	Adapter (Includes sealing rings & hollow screw) (Air Cooled Engines Only)
20	8541401	1 1	Plug, 1/8 NPT

TRANSMISSION COOLING —CLARK

(WATER COOLED ENGINES)

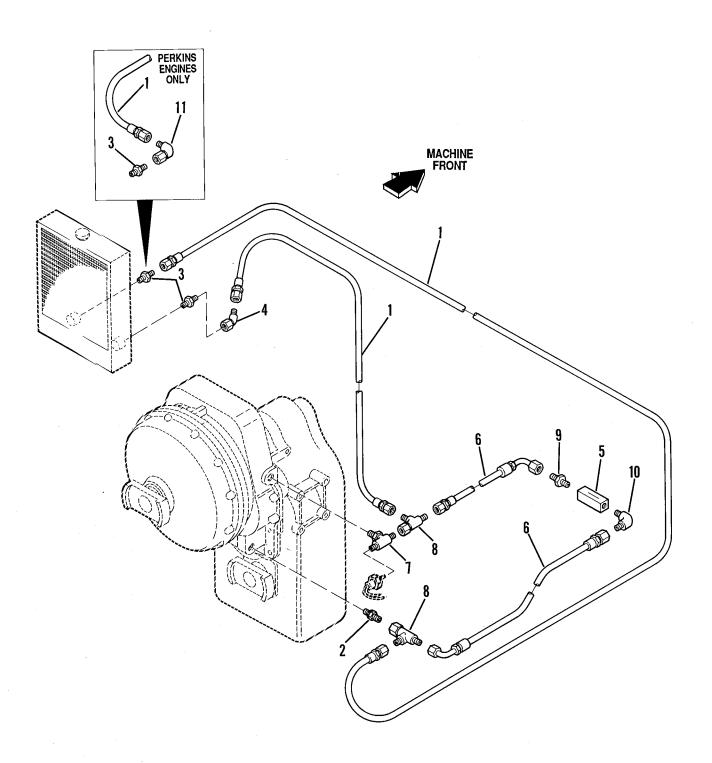

PB0620


TRANSMISSION COOLING —CLARK

(WATER COOLED ENGINES)

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11	2711042 8760109 8760001 8760286 8902653 2711802 7089881 8760482 8760020 8760229 8760254	2 1 2 1 2 1 1 1 1	Hose Assembly Connector, Straight, SAE 12-12, male JIC 37° x male str. thd. o-ring Connector, Straight, SAE 12-12P, male JIC 37° x male NPT Elbow, 45°, SAE 12-12, male JIC 37° x female JIC 37° swivel Valve, Relief (40 PSI) Hose Assembly Tee, Special Tee, Run, SAE 12-12, male JIC 37° x female JIC 37° swivel Connector, Straight, SAE 12-8P, male JIC 37° x male NPT Elbow, 90°, SAE 12-8P, male JIC 37° x male NPT Elbow, 90°, SAE 12-12, male JIC 37° x female JIC 37° swivel (Perkins Eng. Only)


TRANSMISSION COOLING — CLARK

(AIR COOLED ENGINES)

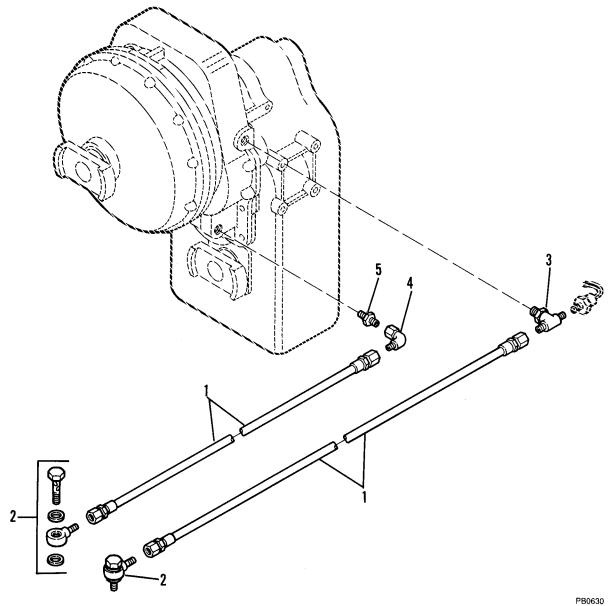

Item No.	Part Number	Qty.	Description
1 2 3 4 5	2711042 7074972 7089881 8760254 8760109	2 2 1 1	Hose Assembly Adaptor (Includes sealing rings & hollow screw) Tee, Special Elbow, 90°, SAE 12-12, male JIC 37° x female JIC 37° swivel Connector, Straight, SAE 12-12, male JIC 37° x male str. thd. o-ring

AUXILIARY HYDRAULIC CIRCUIT — OPTIONAL

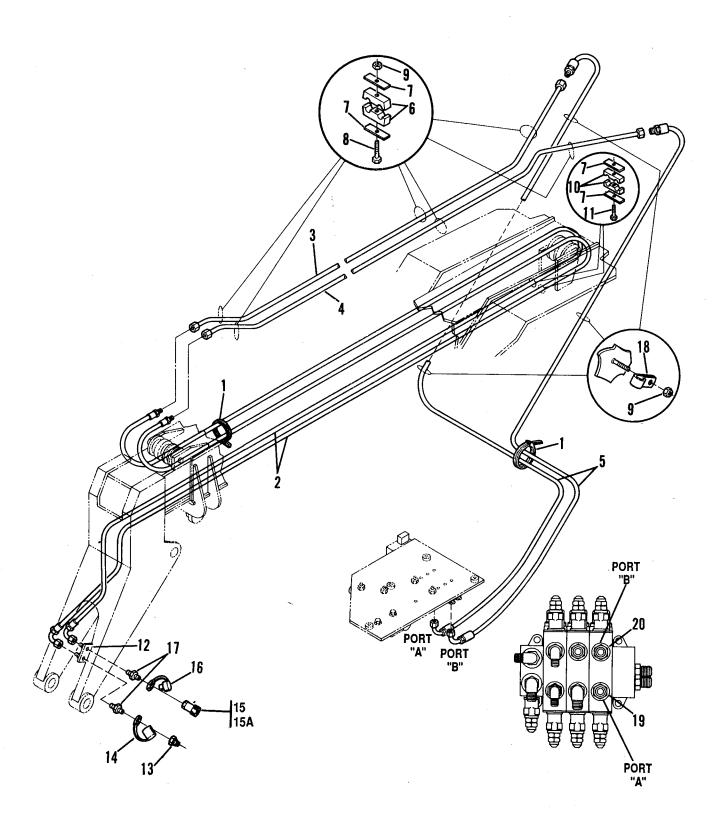


PB0640

AUXILIARY HYDRAULIC CIRCUIT — OPTIONAL

item No.	Part Number	Qty.	Description
1	8584002	2	Tie Wrap
2	2712242	2	Hose Assembly
3	7065253	1 1	Tube Assembly, R. H.
4	7065243	1 1	Tube Assembly L. H.
5	2712312	2	Hose Assembly
6	8769122	6	Clamp Set, .625 I. D.
	· ·		
7	8769123	16	Cover, Clamp
8	8310009	6	Screw, Hex Hd Cap, 5/16-18 x 2
9	8305626	9	Locknut, 5/16-18
10	8769140	2	Clamp Set .675 I. D.
11	8303715	2	Screw, Hex Hd Cap, 5/16-18 x 1-1/2
12	7085491	1	Plate, Junction
13	8420056	1	Quick Disconnect, Male 3/8 NPT
14	8420058	1	Cap, Dust
15	8420057	1	Quick Disconnect, Female 3/8 NPT (See also item 15A)
15A	8640027	1	O-Ring, Viton - For High Temp. Application of item 15
		1	
16	8420059	1	Plug, Dust
17	8540001	2	Nipple, Pipe 3/8 NPT
18	8406201	3	Clamp, Hose
19	8760107	1	Connector, Straight,SAE 8 - 8, male JIC 37° x male str. thd. o-ring
20	8760143	1	Connector, Long Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring

OUTRIGGER CIRCUIT

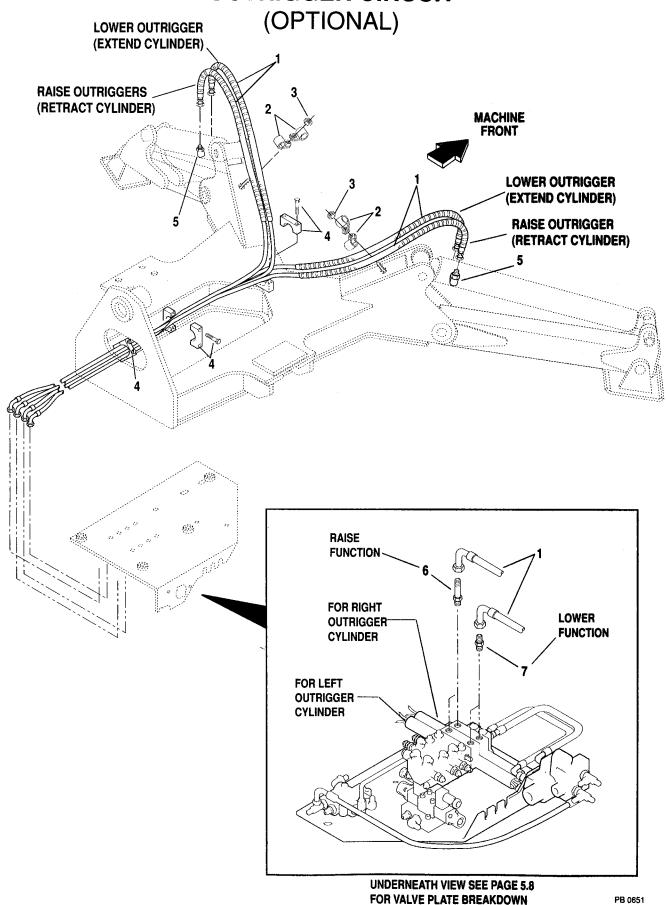

5.13


9038

OUTRIGGER CIRCUIT

(OPTIONAL)

(OPTIONAL)			
Item No.	Part Number	Qty.	Description
1	2712412	4	Hose Assembly
2 3	8406201	4	Clamp, Hose
3	8305603	2	Locknut, 3/8-16
4	8769121	3	Clamp
5	8760303	4	Elbow, 90°, SAE 8-8, male JIC 37° x male str. thd. o-ring
5 6 7	8760143	2 2	Connector, Long, Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring
7	8760107	2	Connector, Straight, SAE 8-8, male JIC 37° x male str. thd. o-ring
*			
		}	
	I	I	1

HYDRAULIC RESERVOIR

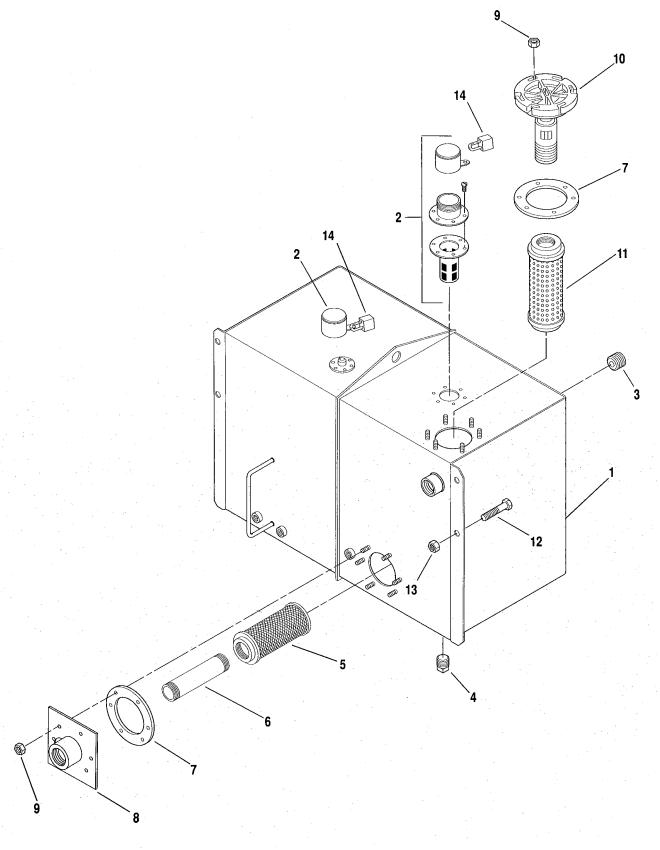


PB 0661

<u>6.1</u>

HYDRAULIC RESERVOIR

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13 14	7086664 8322022 8464009 8541409 8324014 8551811 7082901 7088802 8305626 8320256 8320257 8393632 8305643 8342801	1 1 1 1 1 2 1 12 1 4 4 2	Reservoir, Hydraulic/Fuel Filler/Breather Gauge, Sight Plug, Pipe, Square 1/2 Strainer Nipple, 2.00 x 8-1/2 Gasket Flange Assembly Locknut, 5/16-18 Cover Assembly, w/By-Pass Element Screw, Hex Hd Cap, 5/8-11 x 2-1/2 Gr 5 Locknut, 5/8-11 ESNA Padlock
		- :	

MAIN TANDEM PUMP

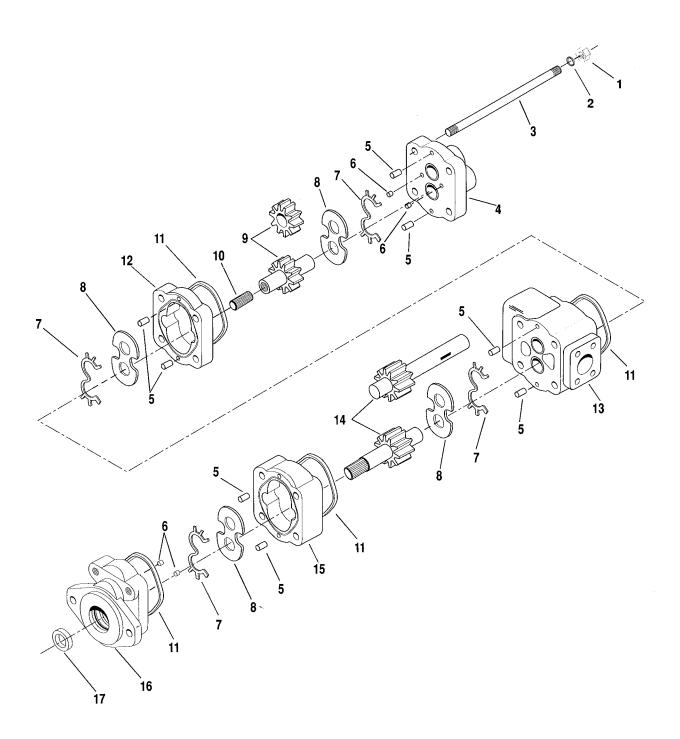


MA 0841

MAIN TANDEM PUMP

	8440215 8440211	1	
	8440211		Pump Assembly, Hydraulic (Includes Items 1 thru 17)
	8440211 I	_	— Funk Trans. (Counterclockwise)
1	0440211	1	Pump Assy, Hydraulic (Includes items 1 thru 17) — Clark Trans. (Clockwise)
1	8032804	4	Nut, Hex
2	8032802	4	Washer
3	8032803	4	Stud
4	8032796	1	Housing, PEC
5	8032810	8	Pin, Dowel
6	8032806	4	Plug
7	See Kits	4	Seal, Channel
8	8032807	4	Plate, Thrust
9	8032801	1	Gear Set
10	8032813	1	Shaft, Connecting
11	See Kits	4	Seal, Sq-R
12	8032799	1	Housing, Gear
13	8032798	1	Housing, Bearing Carrier
14	8032800	1	Gear Shaft Set
15	8032797	1	Housing, Gear
16	8032795	1	Housing, SEC
17	See Kits	1	Seal, Lip
			<u>KITS</u>
	8032811	1	Seal Kit, Hydraulic Pump (Consists of items 7,11 and 17)
	:		
į			

9038

BOOM HOIST CYLINDER

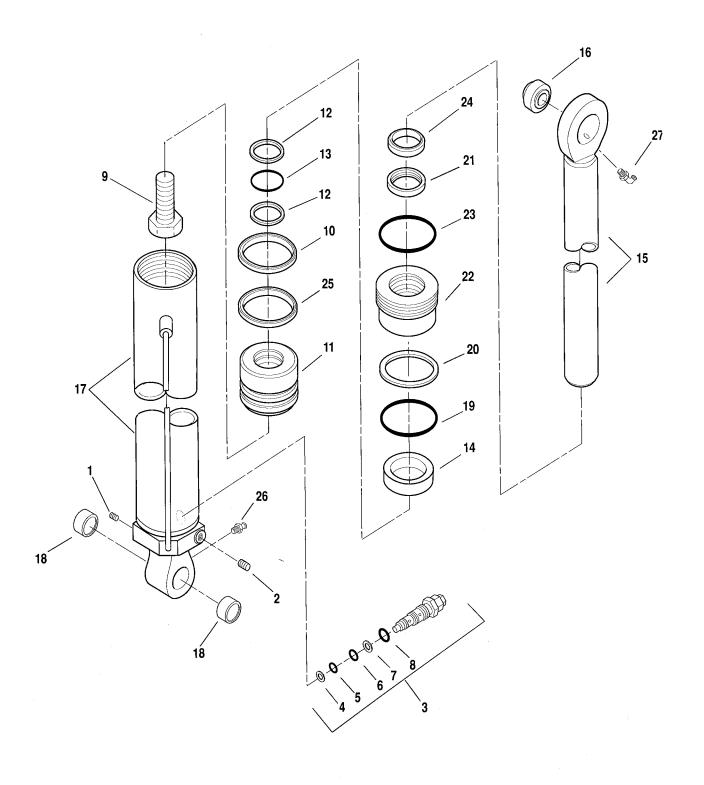

PB 0671


<u>6.3</u>

BOOM HOIST CYLINDER

Item No.	Part Number	Qty.	Description
	2711733	1	Cylinder, Boom Hoist (Includes Items 1 thru 25)
1 1	8033145	1	Plug, Sealing
2	8033426	2	Plug, Pipe
3	8903010	1	Counterbalance Valve Assembly (Includes items 4 thru 8)
4	See Kits	2	Ring, Back-up
5	See Kits	1	O-Ring
6	See Kits	1	O-Ring
7	See Kits	1	Ring, Back-up
8	See Kits	1	O-Ring
9	8033413	1	Screw, Hex Hd Cap
10	See Kits	1	Seal/Expander Assembly
11	8033415	1	Piston
12	See Kits	2	Ring, Back-up
13	See Kits	1	O-Ring
14	8033417	1	Spacer
15	8033418	1	Rod/Bushing Assembly (Includes item 16)
16	8033424	1	Bushing, Rod
17	8033419	1	Barrel/Bushing Assembly (Includes Item 17)
18	8033414	2	Bushing
19	See Kits	1	O-Ring
20	See Kits	1	Ring, Back-up
21	See Kits	1	Seal, Rod
22	8033422	1	Head
23	See Kits	1	O-Ring, Head
24	See Kits	1	Wiper, Rod
25	See Kits	1	Bearing, Piston
26	8520013	1	Fitting, Grease
27	8520021	1	Fitting, Grease 90°
			<u>KITS</u>
	8205666	1	Seal Kit, Boom Hoist Cylinder (Includes Items 4 thru 8, 10,
	8033425	2	12,13, 19, 20, 21, 23, 24 and 25)
	0033423	2	Seal Kit, Counterbalance Valve (Includes items 4 thru 8)

9038

BOOM EXTEND CYLINDER

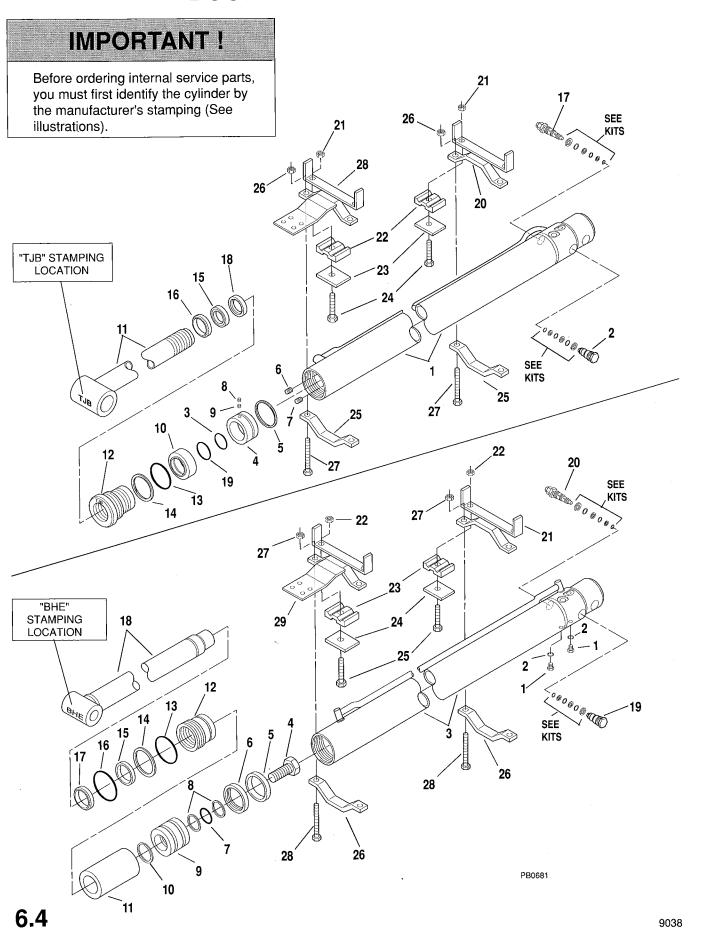


Item No.	Part Number	Qty.	Description
	2711633	1	Cylinder, Boom Extend/Retract — TJB (Includes Items 1 thru 19)
1	8032722	1	Cylinder, Weld
2	8902473	1	Valve, Counterbalance
3	See Kits		O-Ring
			Piston
4	8032734		
5	See Kits	1]	Seal, Piston
6	8032738	1	Plug
7	8032750	1	Plug, Orifice .070
8	See Kits	1	Set Screw, Nylon
9	See Kits	1	Set Screw
10	8032736	1	Tube, Stop
11	8032740	1	Rod
12	8032732	1	Gland
13	See Kits	1	O-Ring
14	See Kits	1	Seal, Par-Bak
15	See Kits	;	Seal, Rod
	1	1	
16	See Kits	1	Wiper, Rod
17	8032737]]	Valve, Pilot Check
18	See Kits	1	Seal, Step
19	See Kits	1	O-Ring
20	7079112	1	Bracket
21	8305602	2	Nut, Lock 5/16-18
22	8769122	1	Clamp Set (Both Halves)
23	8769123	2	Clamp, Cover
24	8303746	2	Screw, Hex Hd Cap, 5/16-18 x 1-3/4
25	7079122	2	Clamp
26	8305604	4	Nut, Lock 1/2-13 IFI
27	8303782	4	Screw, Hex Hd Cap, 1/2 -13 x 4"
	,	1 1	Bracket
28	7087942	'	Diduket
			LUTO
			KITS
	8205659	1	Seal Kit, Boom Extend/Retract Cylinder (Includes Items 3, 5,
		İ	8, 9, 13 thru 16, 18 and 19)
	8205656	2	Seal Kit, Counterbalance & Pilot Check Valve (Includes 3 O-Rings
			& 3 Back-Up Rings)
		1	
		ł	
		1	
	`		
		1	
		1	
	<u>'</u>	1	
		1	
	1		

BOOM EXTEND CYLINDER


Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9	2711633 8033427 See Kits 8033428 8033129 See Kits See Kits See Kits See Kits	1 2 2 1 1 1 1 2	Cylinder, Boom Extend /Retract — BHE (Includes Items 1 thru 20), Plug O-Ring Barrel, Weldment Screw, Hex Hd Cap Bearing, Piston Seal/Expander Assembly O-Ring Ring, Back-up Piston
10 11 12 13 14 15 16 17 18	8033123 8033122 8033115 See Kits See Kits See Kits See Kits See Kits 8033429 8032737	1 1 1 1 1 1 1	Ring, Snap Spacer Head O-Ring Ring, Back-up Seal, Rod O-Ring, Head Wiper, Rod Rod/Eye Weldment Valve, Pilot Check
20 21 22 23 24 25 26 27 28 29	8902473 7079112 8305602 8769122 8769123 8303746 7079122 8305604 8303782 7087942	1 1 2 1 2 2 2 4 4	Valve, Counterbalance Bracket Nut, Lock 5/16-18 Clamp Set (Both Halves) Clamp, Cover Screw, Hex Hd Cap, 5/16-18 x 1-3/4 Clamp Nut, Lock 1/2-13 IFI Screw, Hex Hd Cap, 1/2 -13 x 4" Bracket
	8205667	1	KITS Seal Kit, Boom Extend/Retract Cylinder (Includes Items 2, 5 thru 8 and
	8205656	2	13 thru 17) Seal Kit, Pilot Check & CounterbalanceValve Cartridges (Includes 3 O-Rings & 3 Backup Rings)

SLAVE CYLINDER

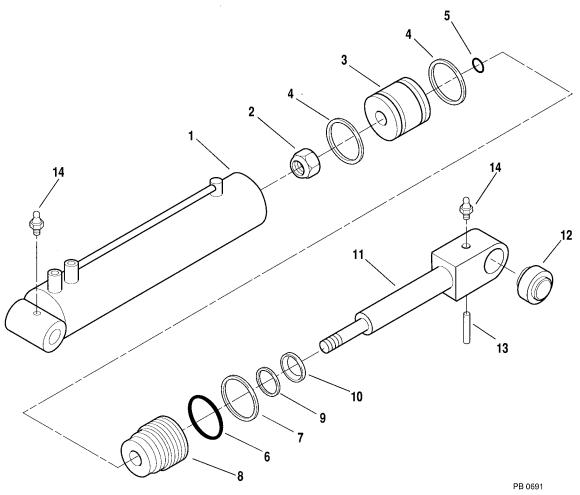

Item No.	Part Number	Qty.	Description
	2711683	2	Cylinder, Slave (Includes Items 1 thru 13)
1	8205503	1	Tube, Cylinder
2	8205507	1	Nut
3	8205505	1	Piston
4	See Kit	2	Seal, Piston
5	See Kit	1	O-Ring
6	See Kit	1	O-Ring
7	See Kit	1	Ring, Back-up
8	8205506	1	Gland
9	See Kit	1	Seal, Rod
10	See Kit	1	Wiper, Rod
11	8205542	1	Rod Assembly (Includes items 12 & 13)
12	8065634	1	Bushing, Self Aligning
13	8302141	1	Pin, Roll
14	8520013	2	Fitting, Grease
			<u>KITS</u>
	8205640	1	Seal Kit, Slave Cylinder (Includes Items 4 thru 7, 9 & 10)

GRILLE TILT CYLINDER

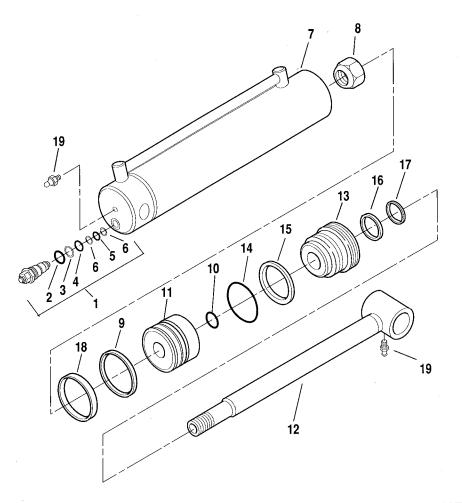


PB 0701

Item No.	Part Number	Qty.	Description	
	2711743	1	Cylinder, Grille Tilt (Includes Items 1 thru 18)	
1	8902527	1	Counterbalance Valve Assembly (Includes items 2 thru 6)	
2	See Kits	1	O-Ring	
3	See Kits	1	Ring, Back-up	
4	See Kits	1	O-Ring	
5	See Kits	1	O-Ring	
6	See Kits	2	Ring, Back-up	
7	8033416	1	Barrel/Cap Weldment	
8.	8205524	1	Nut	
9	See Kits	1	Seal/Expander Assembly	
10	See Kits	1	O-Ring	
11	8033420	1	Piston	
12	8033421	1	Rod/Eye Weldment	
13	8033423	1	Gland	
14	See Kits	1	O-Ring	
15	See Kits	1 1	Ring, Back-up	
16	See Kits	1	Seal, Rod	
17	See Kits	1	Wiper, Rod	
18	See Kits	1	Bearing, Piston	
19	8520013	2	Fitting, Grease, 1/8 Self Tap	
1			<u>KITS</u>	
	8205665	1	Seal Kit, Grille Tilt Cylinder (Includes Items 2 thru 6, 9, 10 and 14 thru 18)	
	8033425	1	Seal Kit, Counterbalance Valve (Includes 3 O-Rings and 3 Back-up Rings)	

<u>6.6</u>

FRAME TILT CYLINDER

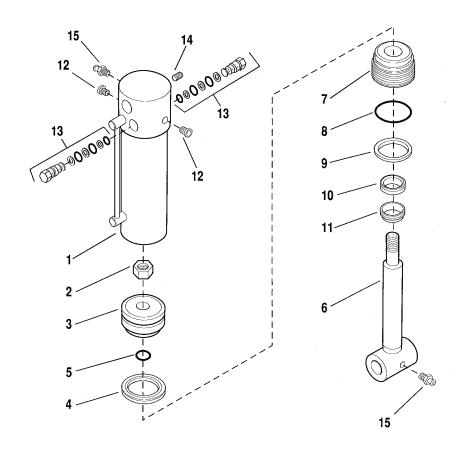


PB 0711

Item No.	Part Number	Qty.	Description
	2711643	1	Cylinder, Frame Tilt (Includes Items 1 thru 14)
1 1	8032708	1 1	Tube, Cylinder
2	8032702	1	Nut
3	8032709	1	Piston
4	See Kits	1	Seal, Piston
5	See Kits	1	O-Ring
6	8032721	1	Rod
7	8032704	1	Gland
8	See Kits	1	O-Ring
.9	See Kits	1	Ring, Back-up
10	See Kits	1	Seal, Rod
11	See Kits	1	Wiper, Rod
12	8032712	2	Plug
13	8902511	2	Valve, Pilot Check
14	8032749	2	Plug, Orifice .078
15	8520013	2	Fitting, Grease
			KITS
	8032707	1	Seal Kit, Frame Tilt Cylinder (Includes Items 4,5 and 8 thru 11)
	8205655	2	Seal Kit, Pilot Check Valve (Includes 3 O-Rings & 3 Back-up Rings)

9038

STEERING CYLINDER

(S/N 9N0648 AND BEFORE ONLY)

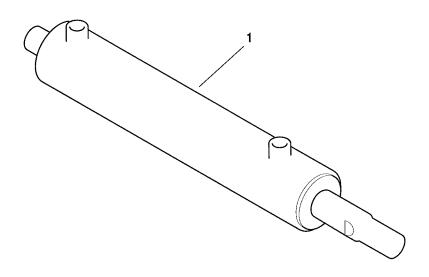


PB 0721

Item No.	Part Number	Qty.	Description
1	2711663	4	Cylinder Assembly, Steering

STEERING CYLINDER


(S/N 9N0649 AND AFTER ONLY)

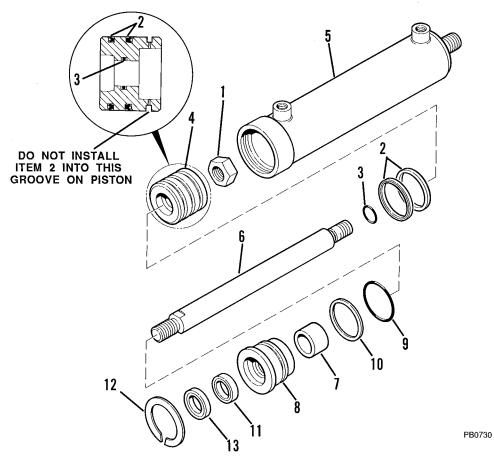

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13	2712613 8033431 See Kit See Kit 8033433 8033434 8033435 8033436 8033437 See Kit See Kit See Kit See Kit	4 1 2 1 1 1 1 1 1 1	Cylinder Assembly, Steering (Includes items 1 thru 13) Nut Seal, Piston O-Ring Piston Tube, Cylinder Rod Bushing, Bronze Gland O-Ring Ring, Backup Seal, Rod Ring, Retaining Wiper, Canned
	8205669	1	KITS Seal Kit, Steering Cylinder (Includes items 3, 4 and 10 thru 13)

6.8.1


OUTRIGGER CYLINDER — (OPTIONAL)

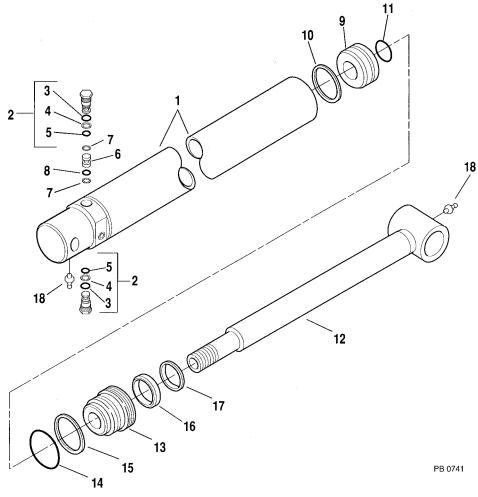

Item No.	Part Number	Qty	Description
	2711623	2	Cylinder, Outrigger (Includes Items 1 thru 17)
1	8032696	1	Cylinder, Weldment
2	8032697	2	Valve, Check (Includes Items 3 thru 5)
3	See Kits	1	O-Ring
4	See Kits	1	Ring, Back-up
5	See Kits	1	O-Ring
6	8032698	1	Piston -
7	See Kits	2	Ring, Back-up
8	See Kits	1	O- Ring
9	8032699	1	Piston
10	See Kits	1	Seal, Piston
11	See Kits	1	O-Ring
12	8032711	1	Rod
13	8032741	1	Gland
14	See Kits	1	O-Ring
15	See Kits	1	Ring, Back-up
16	See Kits	1	Poly Pak
17	See Kits	1	Wiper, Rod
18	8520013	4	Fitting, Grease 1/8 NPT
			<u>KITS</u>
1	8205659	1	Seal Kit, Outrigger Cylinder (Includes Items 10,11 and 14 thru 17)
	8205662	2	Seal Kit, Check Valve (Includes Items 3 thru 5, 7 and 8)

<u>6.9</u>


SIDE TILT CARRIAGE CYLINDER

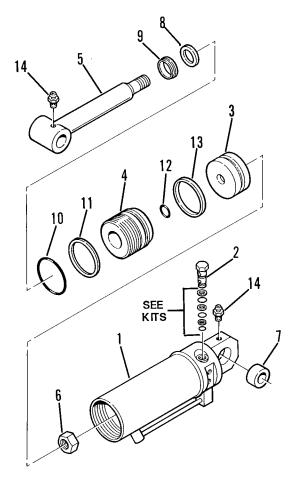

PA 0672

Item No.	Part Number	Qty.	Description
	2711613	1	Side Tilt Carriage Cylinder (Includes Items 1 thru 13)
1	8205543	1	Barrel, Cylinder
2	8902511	2	Valve, Check (See Kits)
3	8205545	1	Piston
4	8205546	1	Gland
5	8205547	1	Rod
6	8205548	1	Nut, Piston
7	8205514	1	Bearing, Self-Aligning
8	See Kits	1	Seal, Rod
9	See Kits	1	Wiper
10	See Kits	1	O-Ring
11	See Kits	1	Ring, Back-Up
12	See Kits	1	O-Ring
13	See Kits	1	Seal, Piston
14	8520013	2	Fitting, Grease
	8205661 8205655	1	KITS Seal Kit, Side Tilt Carriage Cylinder (Includes Items 8 thru 13) Seal Kit, Check Valve (Includes 3 O-Rings & 3 Backup Rings)

MAIN CONTROL VALVE — CABLE CONTROLLED

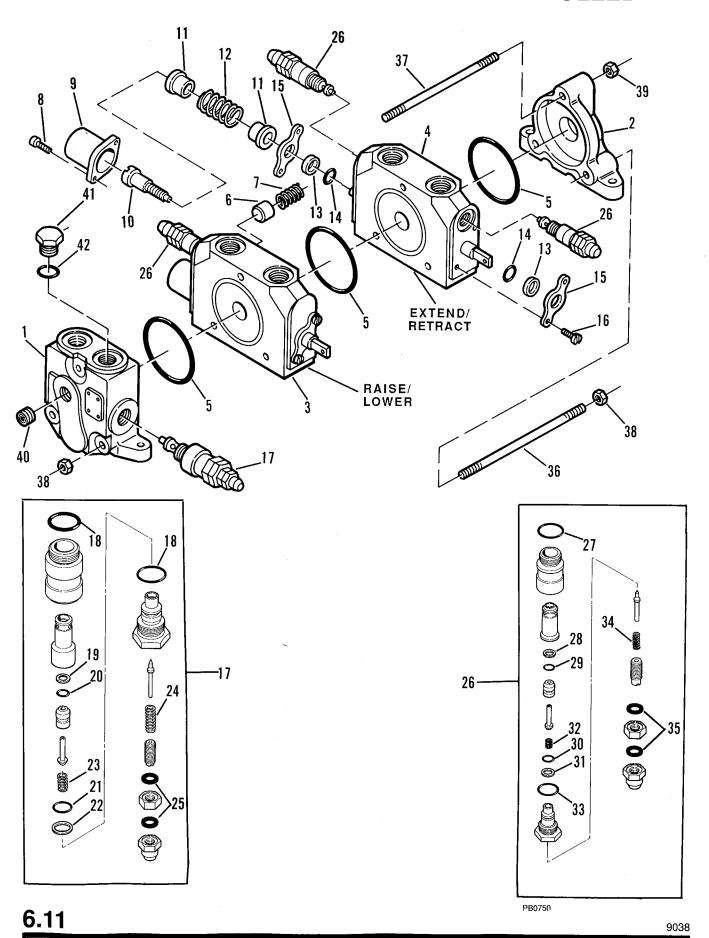

Origin 2/90


MAIN CONTROL VALVE — CABLE CONTROLLED

Item No.	Part Number	Qty.	Description
	8902129	1	Main Control Valve (Includes Items 1 thru 42)
1 1	8902504	1	Section, Inlet (Includes one of item 5)
2	8033215	1	Section, Outlet
3	8033158	1	Section, Boom Raise/Lower (Includes Items 5 thru 16)
4	8033159	li	Section, Boom Extend/Retract (Includes Items 5 thru 16)
5	See Kits	i	O-Ring
6	See Kits	;	
7	See Kits		Poppet, C.V.
		1	Spring
8	See Kits	2	Screw, Soc Hd Cap
9	See Kits	1 1	Cap, Spool
10	See Kits	1	End, Spool
11	See Kits	2	Seat, Spring
12	8033161	1	Spring
13	See Kits	2	Wiper
14	See Kits	2	O-Ring
15	See Kits	2	Plate, Seal
16	See Kits	2	Screw, Machine Rd. Hd.
17	8033216	1 1	Relief Valve, Main (Includes Items 18 thru 25)
18	See Kits	2	O-Ring
19	See Kits	1 1	Ring, Backup
20	See Kits	li	O-Ring
21	See Kits	;	O-Ring ·
22	See Kits	l	1
		1	Ring, Backup
23	See Kits	1	Spring
24	See Kits	1	Spring
25	See Kits	2	O-Ring
26	8902493	3	Relief Valve, Port (Includes Items 27 thru 35)
27	See Kits	1	O-Ring
28	See Kits	1	Ring, Backup
29	See Kits	1	O-Ring
30	See Kits	1	O-Ring
31	See Kits	1	Ring, Backup
32	See Kits	1	Spring
33	See Kits	1	O-Ring
34	See Kits	1	Spring
35	See Kits	2	O-Ring
36	See Kits	2	Rod, Tie
37	See Kits	1	Rod, Tie
38	See Kits	4	Nut, Special
39	See Kits	2	Nut, Special
40	See Kits	1	Plug Assembly, SAE
41	See Kits	1	Plug
42	See Kits	1	O-Ring
			<u>KITS</u>
	8033154	1	Rebuild Kit for items 3 and 4 (Includes 3 of item 5, listed quantities
	0000040	,	of items 6 thru 16 and 40, 41 & 42)
	8033218	1	Seal & Spring Kit for Main Relief Valve Item 17(Includes items 18 thru 25)
	8902495	3	Spring & Seal Kit for Port Relief Valve item 26 (Includes items 27 thru 35)
	8903011	1	Tie Rod kit (Includes Items 36 thru 39)

MAIN CONTROL VALVE — ELECTRONIC CONTROLLED

No.	Part Number	Qty.	Description
	8902121	1	Main Control Valve (Includes Items 1 thru 78)
1	8033255	1	Outlet Section (Includes Items 2 & 3)
2		1	Body, End Cover
3		2	Plug, SAE
4	8033256	1 1	Tie Rod Kit (Includes Items 5, 6 & 7)
5		4	Rod, Tie
6		4	Nut, Hex
7 8	8033257	3	Nut, Jam Seal Plate Kit (Includes Items 9 thru 15)
9	0033237	1 1	Plate, Seal
10		2	O-Ring
11		<u>1</u>	O-Ring
12		1 1	O-Ring
13		2	O-Ring
14		1	O-Ring
15		1	Ball, 3/16"
16	8033258	2	Plug, SAE
17	8033278	1	Bypass Compensating Inlet Valve Assembly (Includes Items 16, 18-21, 30, 41-48 and 51)
18	8033279	1	Spool, Bypass
19	8033280	1 1	Plug, SAÉ
20	8033281 8033282	1	Washer, Spring
21 22	8033284	1 1	Spring, Compression
23	0033204		Bypass Compensating O-Ring Kit (Includes Items 23 thru 29) O-Ring
24			Ring, Backup
25		li	O-Ring
26		1	O-Ring
27		3	O-Ring, Plug (Not Shown)
28		2	O-Ring, Plug (Not Shown)
29		1	O-Ring, Plug (Not Shown)
30	8033285	1	Compensator Adjustment Kit (Includes Items 31 thru 40)
31		1	Seat
32		1	O-Ring
33		1	Ring, Backup
34		1	O-Ring
35		1	Cone, Poppet
36 37		1 1	Spring, Pressure Limiter Compression Nut, Lock
38		li	Plug, Adjustment
39		li	Screw, Set
40		Ιi	Plug, SAE
41	8033286	i i	Screw, Orifice
42	8033287	1	Spool, Pilot Reducing
43	8033288	1	Ball, Valve
44	8033289	1	Guide, Spring
45	8033290	1	Spring, Compression
46	8033291	4	Shim, Pilot
47	8033292	2	Plug,SAE
48	8033295	1 1	Bypass Pilot Filter Kit (Includes Items 49 & 50)
49		1	O-Ring
50	9033303	1	Filter
51 52	8033293 8033259		Plug, SAE Hoist Working Section Valve Assembly (Includes Spool)
53	8033260		Extend Working Section Valve Assembly (Includes Spool)
54	8033261	Ιί	End Plug Kit (Includes Items 55 thru 60)
55	0000201	Ιi	O-Ring
56		i	Ring, Retaining
57		i	l Plug
58		1	Plug
59		1	Ring, Retaining
60		1	O-Ring
61	8903009	1	Solenoid Cartridge w/ Weather Pack Connector
62	8033263	1 1	O-Ring
63	8033264	1 1	Plug, Compensator
64	8033265	1	Compensator Shim Kit (Includes Items 65,66 and 67)
65		100	Shim, Regulator
66	I	100	Shim, Regulator

MAIN CONTROL VALVE ELECTRONIC CONTROLLED

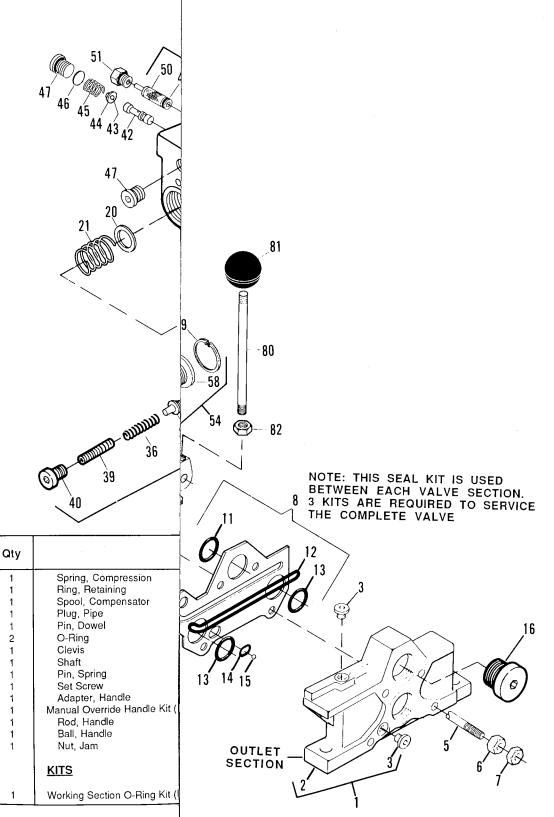


Item

Ñο.

Part Number

Origin 2/90

SECONDARY CONTROL VALVE — FRAME AND GRILLE TILT

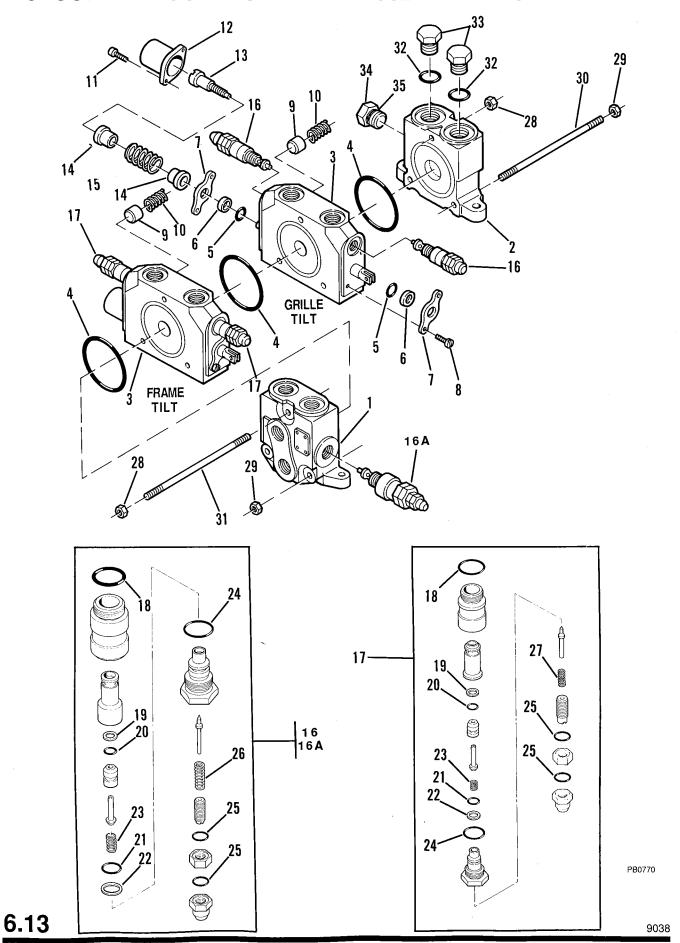

SECONDARY CONTROL VALVE — FRAME AND GRILLE TILT

Item No.	Part Number	Qty.	Description
	8902126	1	Control Valve Assembly, Frame and Grille Tilt
			(Includes items 1 thru 35)
1	8033410	1	Section, Inlet (Includes 1 of item 4)
2	8033411	1	Section, Outlet
3	8033236	2	Section, Frame/Grille Tilt (Includes items 4 thru 15)
4	See Kits	1 .	O-Ring
5	See Kits	2	O-Ring
6	See Kits	2	Wiper
7	See Kits	2	Plate, Seal
8	See Kits	2	Screw, Rd Hd Mach
9	See Kits	1	Poppet, C V
10	See Kits	1	Spring
11	See Kits	2	Screw, Soc Hd Cap
12	See Kits	1	Cap, Spool
13	See Kits	1	End, Spool
14	See Kits	2	Seat, Spring
15	See Kits	1	Spring
16	8033165	2	Relief Valve Assembly - Preset at 3250 \pm 50 psi (Includes items 18 thru 26)
16A	8033164	1	Main Relief Valve - Preset at 2650 \pm 50 psi (Includes items 18 thru 26)
17	8033150	2	Relief Valve Assembly - Preset at 1200 \pm 50 psi
	_		(Includes items 18 thru 25 & 27)
18	See Kits	1	O-Ring
19	See Kits	1	Ring, Back-Up
20	See Kits	1	O-Ring
21	See kits	1	O-Ring
22	See Kits	1	Ring, Back-Up
23	See Kits	1	Spring
24	See Kits	1	O-Ring
25	See Kits	2	O-Ring
26	See Kits	1 1	Spring (Used on Item 16 & 16A only)
27	See Kits	1	Spring (Used on Item 17 only)
28	See Kits	2	Nut, Special
29	See Kits	4	Nut, Special
30	See Kits	2	Tie Rod
31 32	See Kits	1	Tie Rod
33	See Kits	2	O-Ring
34	See Kits See Kits	2	Plug, SAE
35	See Kits	1 1	Plug Assembly, Shut-Off
33	See Kits	1	Seal, Special
			<u>KITS</u>
.	8033155	AR	Rebuild Kit for individual service of item 3 (Includes 4 of item 4 and listed quantities of items 5 thru 15)
	8902495	1	Seal & Spring Kit for Relief Valve item 16 & 16A (Includes items 18 thru 26)
	8033219	1.	Seal & Spring Kit for Relief Valve item 17 (Includes items 18 thru 25 & 27)
	8902094		Tie Rod Kit (Includes items 28 thru 31)
	3002007	'	The Free Fat (Infolded Refine to and or)


<u>6.13</u>


SECONDARY CONTROL VALVE—FRAME/GRILLE TILT, AUXILIARY HYDRAULICS AND OUTRIGGERS (S/N 9A0550 THRU S/N 0B0675)

Item No.	Part Number	Qty.	Description
	7089453	1	Control Valve Assembly, Frame/Grille Tilt and
			Aux. Hyd. (Includes items 1, 2, 3, 4, 6 thru 17 and 19 thru 38)
	8902128	1	Control Valve Assembly, Frame/Grille Tilt and Outriggers (Includes
			items 1, 2, 3, 5 and 6 thru 38)
	8902127	1	Control Valve Assembly, Frame/Grille Tilt, Aux. Hyd & Outriggers
.	0000110		(Includes items 1 thru 38)
1	8033410	1	Section, Inlet (Includes 1 of item 6)
2	8033411	1	Section, Outlet
3	8033236	2	Section, Frame/Grille Tilt (Includes items 6 thru 17)
4 5	8902115 8033409	1 2	Section, Auxiliary Hydraulics (Includes items 6 thru 17) Section, Outriggers (Includes items 6, 11, 12 and 18)
6	See Kits	1	O-Ring
7	See Kits	2	O-Ring
8	See Kits	2	Wiper
9	See Kits	2	Plate, Seal
10	See Kits	2	Screw, Rd Hd Mach
11	See Kits	1	Poppet, C V
12	See Kits	1	Spring
13	See Kits	2	Screw, Soc Hd Cap
14	See Kits	1	Cap, Spool
15	See Kits	1	End, Spool
16	See Kits	2	Seat, Spring
17	See Kits	1	Spring
18	8033163	2	Solenoid Assembly
19	8033165	2	Relief Valve Assembly - Preset at 3250 ± 50 psi (Includes items 21 thru 29)
19A	8033164	1	Main Relief Valve - Preset at 2650 ± 50 psi (Includes items 21 thru 29)
20	8033150	2	Relief Valve Assembly - Preset at 1200 ± 50 psi
21	See Kits	4	(Includes items 21 thru 28 & 30) O-Ring
22	See Kits	1 1	Ring, Back-Up
23	See Kits		O-Ring
24	See Kits	li	O-Ring
25	See Kits	1	Ring, Back-Up
26	See Kits	1	Spring
27	See Kits	1	O-Ring
28	See Kits	2	O-Ring O-Ring
29	See Kits	1	Spring (Used on Item 19 & 19A Only)
30	See Kits	1	Spring (Used on Item 20 Only)
31	See Kits	2	Nut, Special
32	See Kits	4	Nut, Special
33	See Kits	2	Tie Rod
34 35	See Kits See Kits	1 2	Tie Rod O-Ring
36	See Kits	2	Plug, SAE
37	See Kits	1	Plug, Shut-Off
38	See Kits	1	Seal, Special
00	000 1110	'	
			<u>KITS</u>
	8033237	AR	Rebuild Kit for individual service of items 3, 4 or 5 (Includes 6 of item 6 and listed
			quantities of items 7 thru 17)
	8902495	1	Seal & Spring Kit for Relief Valve item 19 & 19A (Includes items 21 thru 29)
	8033219	1	Seal & Spring Kit for Relief Valve item 20 (Includes items 21thru 28 & 30)
	8902095	1 1	Tie Rod Kit — 3 Section Valve (Includes items 31 thru 34)
	8902096	1 1	Tie Rod Kit — 4 Section Valve (Includes items 31 thru 34)
	8902131	.1	Tie Rod Kit — 5 Section Valve (Includes items 31 thru 34)
	l	1	

SECONDARY CONTROL VALVE — FRAME /GRILLE TILT, AUXILIARY **HYDRAULICS AND OUTRIGGERS**

(S/N 9A0550 THRU S/N 0B0675)



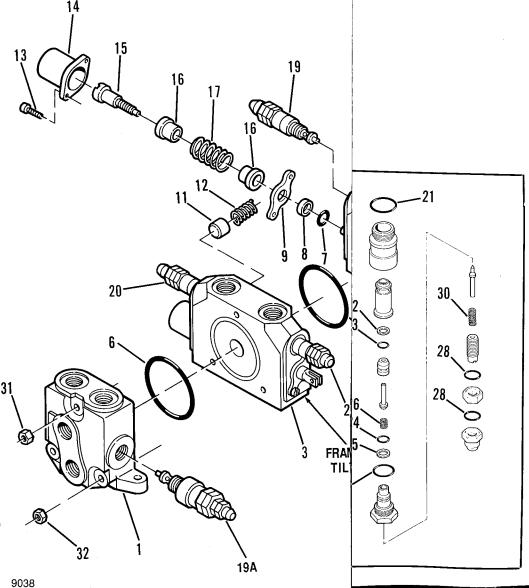

PB 0780

<u>6.14</u>

SECONDARY CONTROL VALVE — FRAME/GRILLE TILT, AUXILIARY HYDRAULICS AND OUTRIGGERS (S/N 0B0676 AND AFTER)


Item No.	Part Number	Qty.	Description
	7092343	1	Control Valve Assembly, Frame/Grille Tilt and
	8902128	1	Aux. Hyd. (Includes İtems 1, 2, 3, 4, 6 thru 17 and 19 thru 38) Control Valve Assembly, Frame/Grille Tilt and Outriggers (Includes
	8904034	1	items 1, 2, 3, 5 and 6 thru 38) Control Valve Assembly, Frame/Grille Tilt, Aux. Hyd & Outriggers
1	8033410	1	(Includes items 1 thru 38) Section, Inlet (Includes 1 of item 6)
2 3	8033411	1	Section, Outlet
3	8033236	2	Section, Frame/Grille Tilt (Includes items 6 thru 17)
4 5	8033236 8033409	1 2	Section, Auxiliary Hydraulics (Includes items 6 thru 17) Section, Outriggers (Includes items 6, 11, 12 and 18)
6	See Kits	1	O-Ring
7	See Kits		O-Ring
8	See Kits	2 2 2 2	Wiper
9	See Kits	2	Plate, Seal
10	See Kits		Screw, Rd Hd Mach
11 12	See Kits See Kits	1	Poppet, C V
13	See Kits See Kits	1 2	Spring Screw, Soc Hd Cap
14	See Kits	1 1	Cap, Spool
15	See Kits	1	End, Spool
16	See Kits	2	Seat, Spring
17	See Kits	1 1	Spring
18	8033163	2	Solenoid Assembly
19 19A	8033165 8033164	4	Relief Valve Assembly - Preset at 3250 ± 50 psi (Includes items 21 thru 29) Main Relief Valve - Preset at 2650 ± 50 psi (Includes items 21 thru 29)
20	8033150	2	Relief Valve Assembly - Preset at 1200 ± 50 psi (Includes items 21 thru 28 & 30)
21	See Kits	1	O-Ring
22	See Kits	1	Ring, Back-Up
23	See Kits	1	O-Ring
24	See Kits	1 1	O-Ring
25	See Kits	1	Ring, Back-Up
26 27	See Kits See Kits	1 1	Spring O-Ring
28	See Kits	2	O-Ring
29	See Kits	1	Spring (Used on Item 19 & 19A Only)
30	See Kits	1	Spring (Used on Item 20 Only)
31	See Kits	2	Nut, Special
32 33	See Kits See Kits	4 2	Nut, Special Tie Rod
34	See Kits	1	Tie Rod
35	See Kits	2	O-Ring
36	See Kits	2	Plug, ŠAE
37	See Kits	1	Plug, Shut-Off
38	See Kits	1	Seal, Special
	i		<u>KITS</u>
	8033237	AR	Rebuild Kit for individual service of items 3, 4 or 5 (Includes 6 of item 6 and listed
			quantities of items 7 thru 17)
	8902495	1 1	Seal & Spring Kit for Relief Valve item 19 & 19A (Includes items 21 thru 29)
	8033219	1 1	Seal & Spring Kit for Relief Valve item 20 (Includes items 21thru 28 & 30)
	8902095 8902096	1 1	Tie Rod Kit — 3 Section Valve (Includes items 31 thru 34) Tie Rod Kit — 4 Section Valve (Includes items 31 thru 34)
	8902096	Ιί	Tie Rod Kit — 4 Section Valve (Includes items 31 thru 34) Tie Rod Kit — 5 Section Valve (Includes items 31 thru 34)
]		
]		
1		İ	
		l	

6.14.1

SECONDARY CONTROL VALVE — FRAME /GRILLE TILT, AUXILIARY HYDRAULICS AND OUTRIGGERS

(S/N 0B0676 AND AFTER)


32

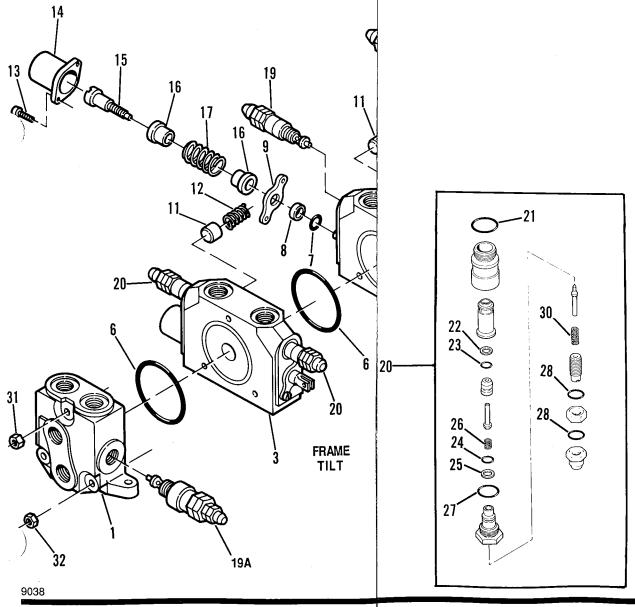



PB 0970


6.14.1

DIRECTIONAL CONTROL VALVES

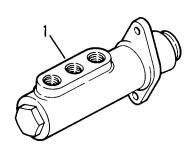

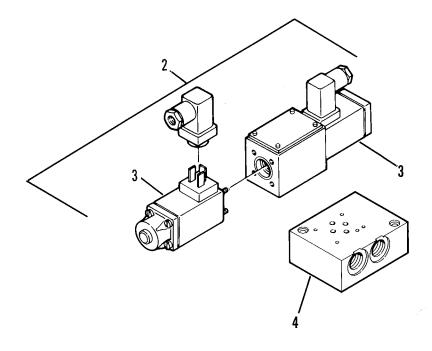

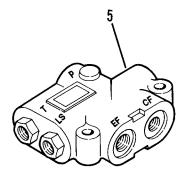

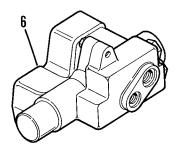


PB0790

DIRECTIONAL CONTROL VALVES


Item No.	Part Number	Qty.	Description
1 2 3 4 5 6	8902228 8902109 8032756 8902111 8902227 8902229	1 1 2 1 1	Brake Valve Assembly (See Kits) Valve, Steer Select (Includes Item 3) Solenoid Body, Steer Select Valve Valve, Priority Valve, Accumulator Charging (See Kits)
	8032812 8032814	1 1	KITS Repair Kit, Brake Valve (Item 1) Repair Kit, Acc. Charging Valve (Item 6)

ELECTRICAL SYSTEM — CAB HARNESS

Item No.	Part Number	Qty.	Description
1	7089114	1	Harness, Cab (For Deutz only see item 42)
2	8033102	1	Motor, Windshield Wiper
3	8033201	1	Switch, Windshield Washer/ Wiper
4	8223442	1 1	Switch, Test
5	8580312	i	Boot, Test Switch
6	8223405	1	Button, Horn
7	8580311	1	Boot, Horn Button
8	8464212		Gauge, Fuel
9	8466305	i	Gauge, Warning Lights
10	8467014	;	Hourmeter
11	8223001	;	Switch, Steer Select
12	8580309	;	Boot, Toggle Switch
13	8220050	2	Terminal, Male
14	8160413	1	Switch, Reverse
15	8033065		Washer Reservoir Assembly
16			Switch, Ignition (w / keys)
	8223436		, , , ,
17	8223438	1	Key, Ignition (Not Shown)
18	8033078	1	Fan, Circulation
19	8229215	2	Circuit Breaker, 6 Amp (3 Required on Closed Cab)
20	7047041	1 1	Wire Assembly (Closed Cab Only)
21	8229218	1	Bracket, Cricuit Breaker
22	8305004	2	Nut, Hex, 1/4-20
23	8307109	2	Washer, Flat 1/4
24	8229216	1 1	Circuit Breaker, 10 Amp
25	8229226	1 1	Circuit Breaker, 40 Amp
26	8223024	1	Switch Kit, Heater
27	7071342	AR	Socket, Light (2 on Funk - 1 on Clark)
28	8469012	AR	Lens, Red (2 on Funk - 1 on Clark)
29	8580314	1 1	Plug (Clark Trans. Only)
30	8220060	AR	Adapter (2 on Funk - 1 on Clark)
31	7084241	1	Diode Assembly (2 Required on Deutz Engines)
32	8223507	1	Switch, Brake Pressure
33	8551001	1	Nipple, 1/8 Closed
34	8307004	2	Lockwasher, 5/16
			Items 35 Thru 44 Used On Deutz Engines Only
35	7089162	1	Harness, Console (Deutz Engine Only)
36	8229229		Breaker, Circuit 25 Amp (Deutz Engine Only)
37	8462014		Gauge, Oil Temperature (Deutz Engine Only)
38	8460025		Gauge, Oil Pressure (Deutz Engine Only)
39	7075432		Wire Assembly (Deutz Engine Only)
40	4		Socket, Light Red (Deutz Engine Only)
40	8469032	2	Bulb (Deutz Engine Only)
41	8469033	1	Harness, Cab - Rework (Deutz Engine Only)
1	7090362		Wire Assembly (Deutz Engine Only)
43 44	7092932	1 1	Socket, Light - Amber (Deutz Engine Only)
44	8469034	'	Socker, Light - Amber (Dedtz Engine Only)
		<u></u>	

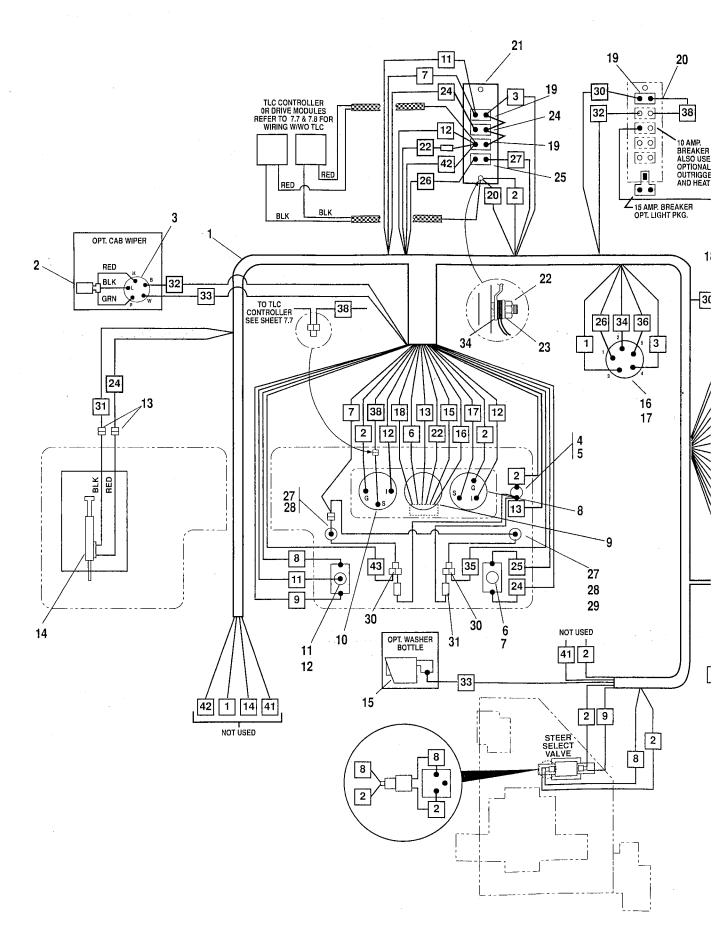


ELECTRICAL SYSTEM CAB HARNESS

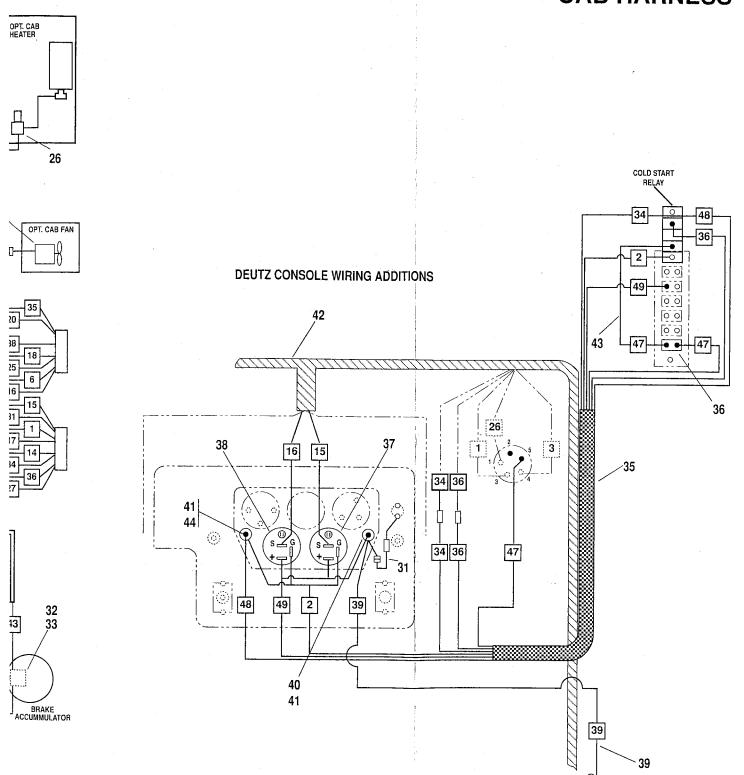

PB0280

LIGHTING SYSTEM — OPTIONAL

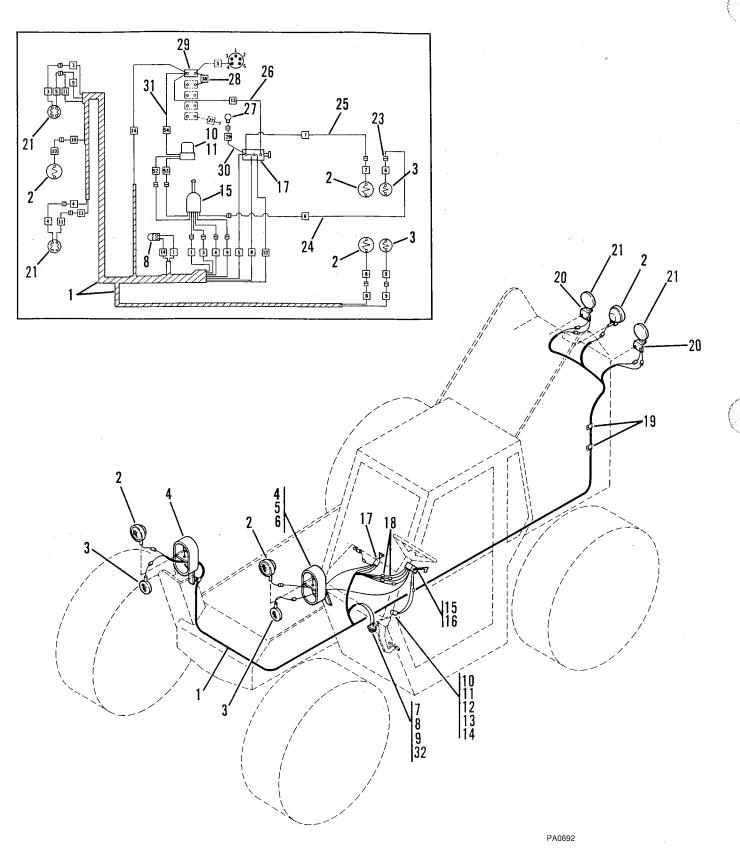


LIGHTING SYSTEM — OPTIONAL

Item No.	Part Number	Qty.	Description
	7085783 7047421 7069851 7069743 8305645 8303620 8580209 8223025 7085751 7047371 8500201 8303837 8305627 8307111 8223419 8221011-0120 8223016 8220051 8406002 7085732 7015531 8584003 8220050 7085821 7085801 7085791 7058372 7047041 8229227 7085831 7087411 8305405	Qty. 1 3 2 2 2 2 1 1 1 2 2 2 1 1 1 7 2 2 2 5 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Light, Head Lamp Light, Turn Signal Bracket, Front Locknut, 3/8 NC Screw, Hex Hd Cap 3/8NC x 1.0 Grommet Switch, Momentary Brake Light Plate, Actuator Mount, Flasher Flasher Screw, Rd Hd Mach #10-24 x 3/4 Locknut, #10-24 Washer, Flat #10 Switch, Turn Signal Conduit, 1/2 ID x 12.0 (Not Shown) Switch, Head Lights Terminal, Female, 1/4 Spade Clamp, Hose, 3/8 Bracket, Tail Light Light, Stop, Tail Tie, Plastic, 4.0 Dia. (Not Shown) Terminal, Male, 1/4 Spade Wire Assembly Wire Assembly Wire Assembly Wire Assembly Breaker, 15 AMP Wire Assembly

. ~	


ELECTRICAL SYSTEM — ENGINE HARNESS (DEUTZ)

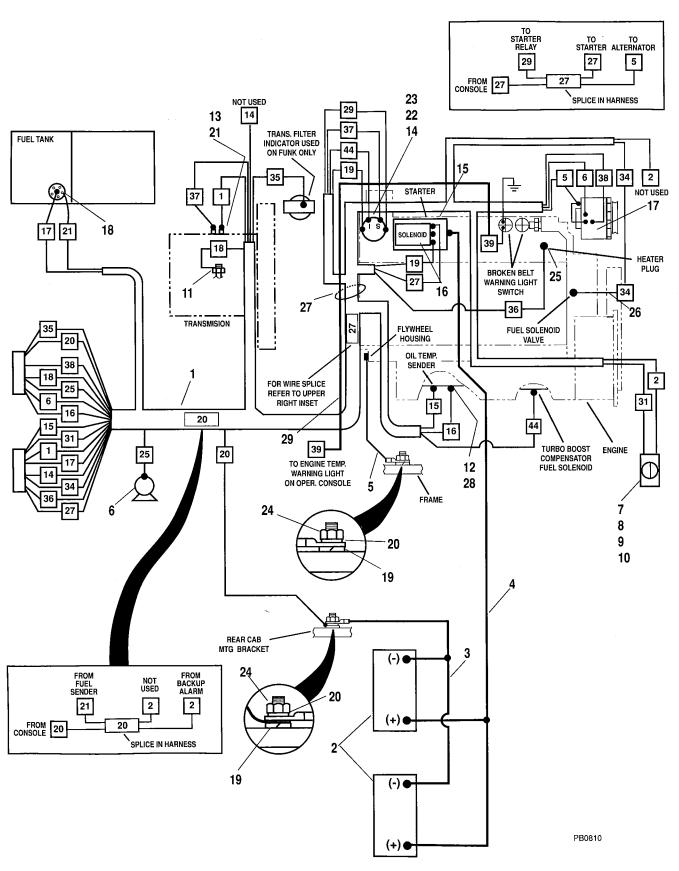

(DEUTZ)

Item No.	Part Number	Qty.	Description
1	7089124	1	Harness, Engine
2	8270014	2	Battery, 12 Volt
3	7084212	1	Cable, Battery-Negative
4	7089332		Cable, Battery-Positive
5	7068651	1	Cable, Starter Ground
6	8270602	1	Horn
7	8270617	1	Alarm, Backup
8	8303615	2	Screw, Cap, Hex Hd, 1/4-20 x 1-1/4 Gr 5
9	8305004	2	Nut, Hex 1/4-20
10	8307002	2 2	Lockwasher, 1/4
11	8223216	1	Switch, Transmission Oil Temperature
12	8468021	1	Sensor, Low Oil Pressure
13	8032677	1	Switch, Neutral Start (Clark Transmission Only)
	CFF91001	1	Switch, Neutral Start (Funk Transmission Only)
14	8277065	1	Relay, Starter
15	8033444	1 1	Starter
16	8033445	1 1	Solenoid, Starter
17	8033443	1	Alternator
18	7088792	1 1	Sender, Fuel Level
19	8307005	2	Lockwasher,3/8
20	8307106	2	Washer, Flat 5/16
21	8303987	2	Screw, Rd Hd Mach #8-32 x 1/4
22	8307003	1	Lockwasher, #10
23	8305003	1 1	Nut, Hex #10-32
24	8305006	2	Nut, Hex, 5/16-18
25	8220012	1	Terminal, Ring
26	7089201	1	Wire Assembly, Fuel Solenoid
27	8406201	1	Clamp
28	8277099	1	Adapter, Oil Pressure Sender
29	7075432	1	Wire Assembly
			· · · · · · · · · · · · · · · · · · ·
1			
	·		
		1	
		·	
1			·
		1	
		1	

(JOHN DEERE)

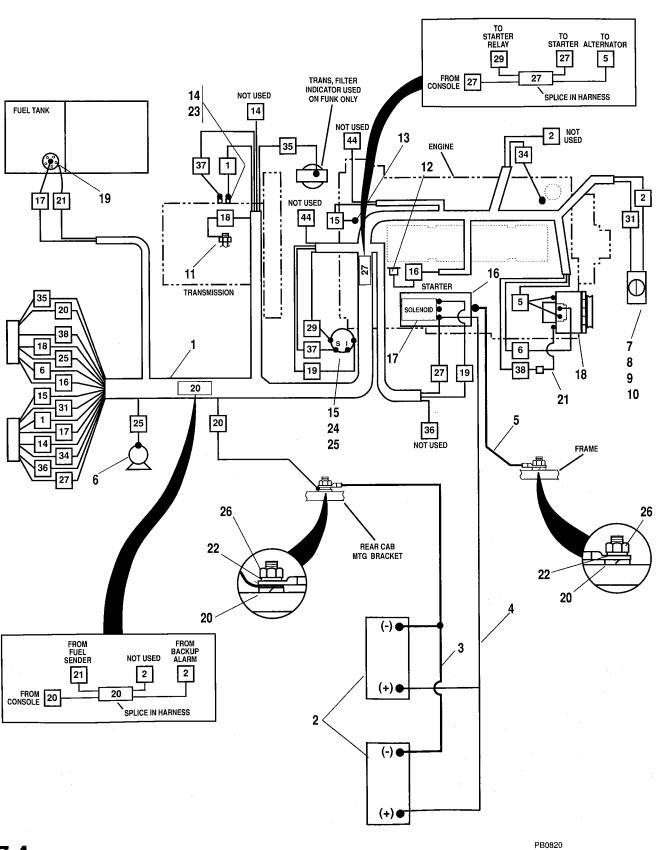


7.4

9038

(JOHN DEERE)


Item No.	Part Number	Qty.	Description
1	7089124	1	Harness, Engine
2	8270014	2	Battery, 12 Volt
3	7084212	1	Cable, Battery-Negative
4	7080192	1	Cable, Battery-Positive
5	7068651	1	Cable, Starter Ground
6	8270602	1	Horn
7	8270617	1	Alarm, Backup
8	8303615	2	Screw, Cap, Hex Hd, 1/4-20 x 1-1/4 Gr 5
9	8305004	2 2 2	Nut, Hex 1/4-20
10	8307002		Lockwasher, 1/4
11	8223216	1	Switch, Transmission Oil Temperature
12	8223510	1	Sensor, Low Oil Pressure
13	8223217	1	Switch, Water Temperature
14	8032677	1	Switch, Neutral Start (Clark Transmission Only)
1 ,_	CFF91001	1	Switch, Neutral Start (Funk Transmission Only)
15	8277065	1	Relay, Starter
16	8033439	1	Starter
17	8033440	1	Solenoid, Starter
18	8033438	1 1	Alternator
19	7088792	1	Sender, Fuel Level
20	8307005	2	Lockwasher, 3/8
21	7082261	1	Wire Assembly
22	8307106	2	Washer, Flat 5/16
23 24	8303987 8307003	2	Screw, Rd Hd Mach #8-32 x 1/4
25	8305003		Lockwasher, #10 Nut, Hex #10-32
26	8305006	2	Nut, Hex, 5/16-18
27	8220012	1	Terminal, Ring #10 x 12 - 12W
	0220012	l ' i	Torrindal, Filling #10 X 12 - 12 VV
			•
.			
		ı	

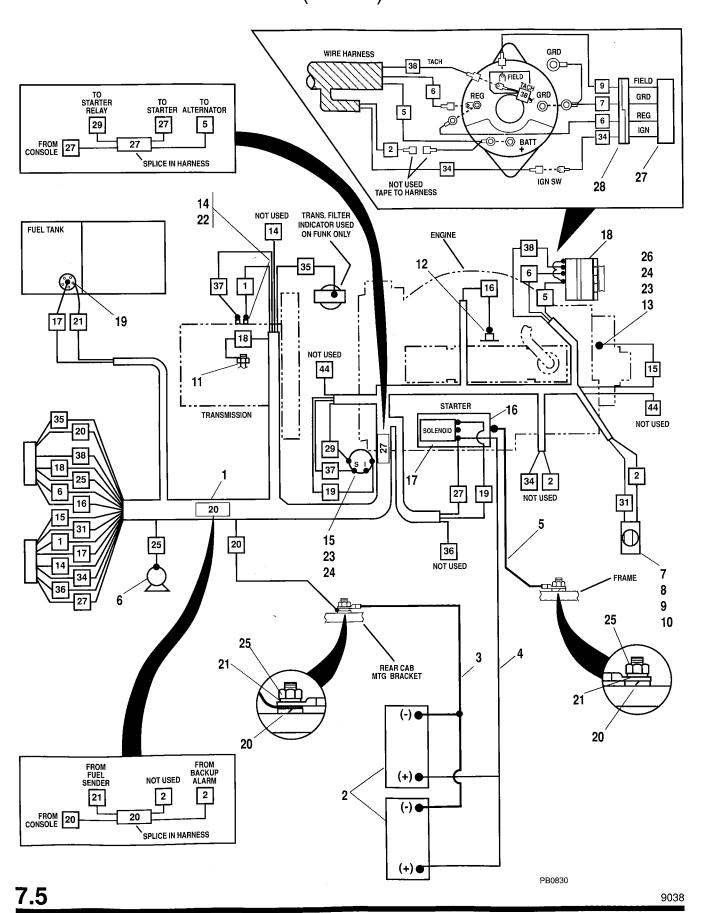

(FORD)

Item No.	Part Number	Qty.	Description
1	7089124	1	Harness, Engine
2	8270014	2	Battery, 12 Volt
3	7084212	1	Cable, Battery-Negative
4	7080192	1	Cable, Battery-Positive
5	7068651	1	Cable, Starter Ground
6	8270602	1	Horn
7	8270617	1	Alarm, Backup
8	8303615	2 2	Screw, Cap, Hex Hd, 1/4-20 x 1-1/4 Gr 5
9	8305004	2	Nut, Hex 1/4-20
10	8307002	2	Lockwasher, 1/4
11	8223216	1	Switch, Transmission Oil Temperature
12	8223510	1	Sensor, Low Oil Pressure
13	8223215	1	Switch, Water Temperature
14	8032677	1	Switch, Neutral Start (Clark Transmission Only)
	CFF91001	1	Switch, Neutral Start (Funk Transmission Only)
15	8277065	1	Relay, Starter
16	8033468	1	Starter
17	8033469	1	Solenoid, Starter
18	8270213	1	Alternator
19	7088792	1	Sender, Fuel Level
20	8307005	2	Lockwasher, 3/8
21	8307106	2	Washer, Flat 5/16
22	8303987	2	Screw, Rd Hd Mach #8-32 x 1/4
23	8307003	2	Lockwasher, #10
24	8305003	2	Nut, Hex #10-32
25	8305006	2	Nut, Hex, 5/16-18
26	8540076	1	Reducer, Bushing, 3/8 NPT x 1/8 NPT
27	8022023	1	Regulator, Voltage
28	7090182	1	Wire Assembly
	:		

ELECTRICAL SYSTEM — ENGINE HARNESS (PERKINS)

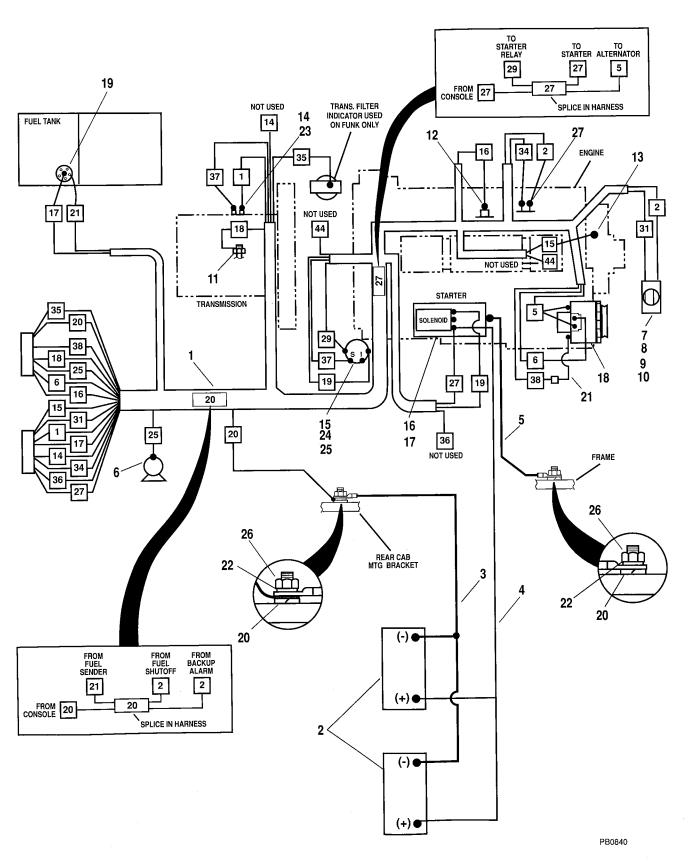


(PERKINS)


1	Item No.	Part Number	Qty.	Description
3 7084212 1 Cable, Battery-Negative Cable, Battery-Positive Cable, Starter Ground Horn Alarm, Backup Screw, Cap, Hex Hd, 1/4-20 x 1-1/4 Gr 5 Nut, Hex 1/4-20 Nut, Hex 1/4-				
4 7080192 1 5 7068651 1 6 8270602 1 7 8270617 1 8 8303615 2 9 3305004 2 10 8307002 2 11 8223216 1 12 8223510 1 13 8223217 1 14 8032677 1 15 9277065 1 16 8270411 1 17 8270412 1 18 8270219 1 19 7088792 1 20 8307005 2 21 7082261 1 22 8307106 2 23 8303987 2 24 8307003 1 25 8305003 1 26 8305006 2 27 8274401 1 1 1 1 1 1 1 2 1 2 1 2 1 2 1 2 1 2 1 3 1		•		
5 7068851 1 Cable, Starter Ground 7 8270617 1 Alarm, Backup 8 8303615 2 Nut, Hex 1/4-20 x 1-1/4 Gr 5 9 8305004 2 Nut, Hex 1/4-20 x 1-1/4 Gr 5 10 8307002 2 Lockwasher 1/4 Switch, Ivalur Iransmission Oil Temperature 11 8223216 1 Switch, Water Temperature Sonsor, Low Oil Pressure 13 8223217 1 Switch, Water Temperature 14 8032677 1 Switch, Neutral Start (Clark Transmission Only) 15 8277065 1 Relay, Starter 16 8270411 1 Starter 17 8270412 1 Alternator 18 8270219 1 Alternator 20 8307005 2 Lockwasher 3/8 21 708261 1 Wire Assembly 22 8307106 2 Washer, Flat 5/16 23 830500a 1 Lockwasher #10 </td <td></td> <td>7084212</td> <td></td> <td></td>		7084212		
6 8270602 1 Horn 7 8270817 1 Alarm, Backup 8 3303615 2 Screw, Cap, Hex Hd, 1/4-20 x 1-1/4 Gr 5 10 8307002 2 Nut, Hex 1/4-20 11 8223216 1 Switch, Transmission Oil Temperature 12 8223510 1 Switch, Water Temperature 13 8223217 1 Switch, Water Temperature 14 8032677 1 Switch, Neutral Start (Clark Transmission Only) 15 8270619 1 Switch, Neutral Start (Funk Transmission Only) 16 8270411 1 Starter 18 8270219 1 Alarmator 19 7088792 1 Alarmator 20 8307005 2 Lockwasher 3/8 21 7082261 1 Washer, Flat 5/16 23 8303987 2 Screw, Rd Hd Mach #8-32 x 1/4 24 8307003 1 Nut, Hex #10-32 26 8305006 2 Nut, Hex, 5/16-18 27 8274401 1 <		7080192	1	Cable, Battery-Positive
7		7068651	1	Cable, Starter Ground
8 8303615 2 Screw, Cap, Hex Hd, 1/4-20 x 1-1/4 Gr 5 Nut, Hex 1/4-20 Lockwasher 1/4 Switch, Transmission Oil Temperature Sensor, Low Oil Pressure Switch, Neutral Start (Clark Transmission Only) Switch, Neutral Start (Funk Transmission Only) Switch, Neutral Start (Funk Transmission Only) Switch, Neutral Start (Funk Transmission Only) Relay, Starter Starter Solenoid, Starter Alternator Sender, Fuel Level Lockwasher 3/8 Wire Assembly Washer, Flat 5/16 Screw, Cap, Hex Hd, 1/4-20 x 1-1/4 Gr 5 Nut, Hex 1/4-20 Lockwasher 1/4 Switch, Neutral Start (Clark Transmission Only) Switch, Neutral Start (Funk Transmission Only) Switch, Neutral Start (Funk Transmission Only) Relay, Starter Solenoid, Starter Alternator Sender, Fuel Level Lockwasher 3/8 Wire Assembly Washer, Flat 5/16 Screw, Cap, Hex Hd, 1/4-20 x 1-1/4 Gr 5 Nut, Hex 3/4-20 Lockwasher 3/9 Nut, Hex 3/4-20 Lockwasher 3/10 Nut, Hex 410-32 Nut, Hex 5/16-18 Solenoid, Fuel Run	6	8270602	1	
8 8303615 2 Screw, Cap, Hex Hd, 1/4-20 x 1-1/4 Gr 5 9 8305004 2 Nut, Hex 1/4-20 10 8307002 2 Lockwasher 1/4 11 8232316 1 Switch, Transmission Oil Temperature 13 8223217 1 Switch, Nater Temperature 14 8032677 1 Switch, Neutral Start (Clark Transmission Only) 15 8270411 1 Switch, Neutral Start (Funk Transmission Only) 16 8270411 1 Solenoid, Starter 18 8270219 1 Alternator 19 7088792 1 Alternator 20 8307005 2 Lockwasher 3/8 21 7082261 1 Wire Assembly 22 8307003 1 Lockwasher #10 25 8305006 2 Nut, Hex #10-32 26 8305006 2 Nut, Hex, 5/16-18 27 8274401 1 Solenoid, Fuel Run	7	8270617	1	Alarm, Backup
9 8305004 2 Lockwasher 1/4 11 8223216 1 12 8223217 1 13 8223217 1 14 8032677 1 15 8277065 1 16 8270411 1 17 8270412 1 18 8270219 1 19 708261 1 19 708261 1 22 8305006 2 23 8305006 2 26 R374401 1 1 S230503 1 26 8305006 2 27 8274401 1 1 S230503 2 2 Lockwasher 1/4 2 Lockwasher 1/4 2 Lockwasher 1/4 2 Lockwasher 1/4 2 Lockwasher 1/4 2 Lockwasher 1/4 2 Lockwasher 1/4 2 Lockwasher 1/4 2 Lockwasher 1/4 2 Solenoid, Pressure 2 Switch, Neutral Start (Clark Transmission Only) 3 Switch, Neutral Start (Funk Transmission Only) 3 Relay, Starter 3 Starter 3 Starter 3 Solenoid, Starter 4 Alternator 4 Sender, Fuel Level 4 Lockwasher 3/8 4 Wire Assembly 5 Sorew, Rd Hd Mach #8-32 x 1/4 5 Lockwasher #10 5 Nut, Hex #10-32 5 Nut, Hex, #10-32 5 Nut, H	8	8303615	2	
10 8307002 2 Lockwasher 1/4 11 8223216 1 Switch, Transmission Oil Temperature 13 8223217 1 Sensor, Low Oil Pressure 14 8032677 1 Switch, Water Temperature 15 8277065 1 Switch, Neutral Start (Clark Transmission Only) 16 8270411 1 Sure Temperature 17 8270219 1 Starter 18 8270219 1 Solenoid, Starter 18 8270219 1 Alternator 19 7088792 1 Sender, Fuel Level 20 8307005 2 Lockwasher 3/8 21 7082261 1 Wire Assembly 22 8307106 2 Washer, Flat 5/16 23 8303987 2 Screw, Rd Hd Mach #8-32 x 1/4 24 8307003 1 Lockwasher #10 25 8305006 2 Nut, Hex #10-32 8274401 1 Solenoid, Fuel Run	9	8305004	2	
11	10	8307002	2	
12 8223510 1 Sensor, Low Oil Pressure 13 8223217 1 Switch, Water Temperature 14 8032677 1 Switch, Neutral Start (Clark Transmission Only) 15 827065 1 Switch, Neutral Start (Funk Transmission Only) 16 8270411 1 Starter 17 8270412 1 Solenoid, Starter 18 8270219 1 Alternator 20 8307005 2 Lockwasher 3/8 21 7082261 1 Wire Assembly 22 8307106 2 Screw, Rd Hd Mach #8-32 x 1/4 24 8305003 1 Nut, Hex #10-32 26 8305006 2 Nut, Hex, 5/16-18 27 8274401 1 Solenoid, Fuel Run	11	8223216		
13 8223217 1 Switch, Water Temperature 14 8032677 1 Switch, Neutral Start (Clark Transmission Only) 15 8277065 1 Switch, Neutral Start (Funk Transmission Only) 16 8270411 1 Helay, Starter 17 8270412 1 Alternator 18 8270219 1 Alternator 19 7088792 1 Sender, Fuel Level 20 8307005 2 Lockwasher 3/8 21 7082261 1 Wire Assembly 22 8307106 2 Washer, Flat 5/16 23 8305003 1 Screw, Rd Hd Mach #8-32 x 1/4 24 8305003 1 Nut, Hex, #10-32 26 8305006 2 Nut, Hex, #10-32 27 8274401 1 Solenoid, Fuel Run				
14 8032677 1 Switch, Neutral Start (Clark Transmission Only) 15 8277065 1 Switch, Neutral Start (Funk Transmission Only) 16 8270411 1 Selay, Starter 17 8270412 1 Solenoid, Starter 18 8270219 1 Alternator 20 8307005 2 Lockwasher 3/8 21 7082261 1 Wire Assembly 22 8307106 2 Washer, Flat 5/16 23 8303987 2 Screw, Rd Hd Mach #8-32 x 1/4 24 8307003 1 Nut, Hex #10-32 26 8305006 2 Nut, Hex, 5/16-18 27 8274401 1 Solenoid, Fuel Run				
CFF91001 1 8277065 1 1 8277065 1 1 8277065 1 1 8270412 1 Solenoid, Starter Starter Starter Starter Starter 17 8270219 1 Alternator Sender, Fuel Level Lockwasher 3/8 21 7082261 1 Wire Assembly 22 8307106 2 Washer, Flat 5/16 Screw, Rd Hd Mach #8-32 x 1/4 Lockwasher #10 25 8305003 1 Nut, Hex #10-32 8274401 1 Solenoid, Fuel Run				
15 8277065 1 1 Selay, Starter Starter Solenoid, Starter Solenoid, Starter Solenoid, Starter Solenoid, Starter Solenoid, Starter Solenoid, Starter Alternator Sender, Fuel Level Lockwasher 3/8 Wire Assembly Washer, Flat 5/16 Screw, Rd Hd Mach #8-32 x 1/4 Lockwasher #10 Nut, Hex #10-32 Nut, Hex, 5/16-18 Solenoid, Fuel Run				
16 8270411 1 Starter 17 8270412 1 Solenoid, Starter 18 8270219 1 Alternator 19 7088792 1 Sender, Fuel Level 20 8307005 2 Lockwasher 3/8 21 7082261 1 Wire Assembly 22 8303987 2 Screw, Rd Hd Mach #8-32 x 1/4 24 8307003 1 Lockwasher #10 25 8305003 1 Nut, Hex #10-32 26 8305006 2 Nut, Hex, 5/16-18 27 8274401 1 Solenoid, Fuel Run	15			
17 8270412 1 Solenoid, Starter 18 8270219 1 Alternator 19 7088792 1 Sender, Fuel Level 20 8307005 2 Lockwasher 3/8 21 7082261 1 Wire Assembly 22 8307106 2 Washer, Flat 5/16 23 8303987 2 Screw, Rd Hd Mach #8-32 x 1/4 24 8305003 1 Lockwasher #10 Nut, Hex #10-32 Nut, Hex, 5/16-18 27 8274401 1 Solenoid, Fuel Run				
18 8270219 1 Alternator 19 7088792 1 Sender, Fuel Level 20 8307005 2 Lockwasher 3/8 21 7082261 1 Wire Assembly 22 8307106 2 Washer, Flat 5/16 23 8303987 2 Screw, Rd Hd Mach #8-32 x 1/4 24 8307003 1 Lockwasher #10 25 8305006 2 Nut, Hex #10-32 26 8305006 2 Nut, Hex, 5/16-18 27 8274401 1 Solenoid, Fuel Run				
19				
20 8307005 2 Lockwasher 3/8 21 7082261 1 Wire Assembly 22 8307106 2 Screw, Rd Hd Mach #8-32 x 1/4 24 8307003 1 Lockwasher #10 25 8305006 2 Nut, Hex #10-32 27 8274401 1 Solenoid, Fuel Run				
21 7082261 1 Wire Assembly 22 8307106 2 Washer, Flat 5/16 23 8307003 1 Lockwasher #10 24 8307003 1 Nut, Hex #10-32 26 8305006 2 Nut, Hex, 5/16-18 27 8274401 1 Solenoid, Fuel Run				
22 8307106 2 Washer, Flat 5/16 Screw, Rd Hd Mach #8-32 x 1/4 Lockwasher #10 Nut, Hex #10-32 Nut, Hex, 5/16-18 Solenoid, Fuel Run				
23				
24 8307003 1 Lockwasher #10 Nut, Hex #10-32 Nut, Hex, 5/16-18 Solenoid, Fuel Run			2	
25				
26 8305006 2 Nut, Hex, 5/16-18 Solenoid, Fuel Run				
27 8274401 1 Solenoid, Fuel Run				
	27	8274401	1	Solenoid, Fuel Run
	1			
1 1 1		•		
1 1 1				
1 1 1				
		*		
		·		

TLC WIRING


Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11	7086772 8220060 7088232 7088212 7088222 7088122 7088202 7090051 7090041 7090072 7090191 7090901	1 1 1 1 1 1 2 1 2 1	Harness, Wire Adapter Sensor, Vehicle Attitude Sensor, Boom Length Sensor, Boom Angle Display Unit Horn, Signal Diode Assembly (See Kits) Diode Assembly (See Kits Controller, Electronic Diode Assembly (See Kits) Diode Assembly (See Kits)
	7090141 7090922 7091871 7091881	1 1 1	Kit, TLC Diodes (Includes Items 8 & 9) Kit, TLC Diodes w/Optional Enclosed Cab Only (Includes Items 11 & 12) Kit, Test Cable for Pulsar Solenoid Valve Kit, Test Cable for TLC Sensors

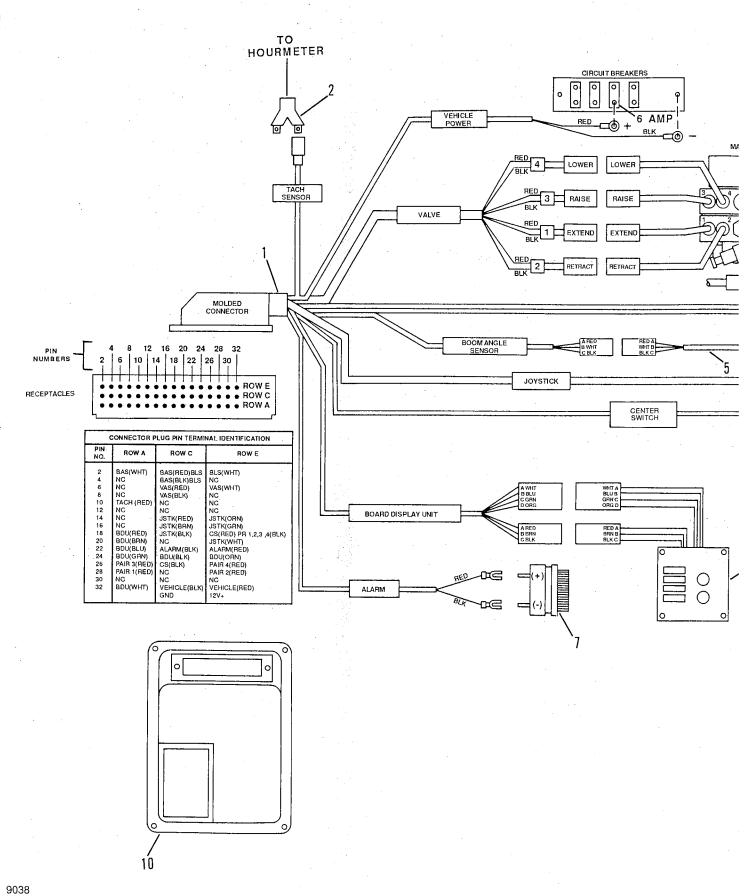


STEER VALVE SUPPRESSION INSTALLATION

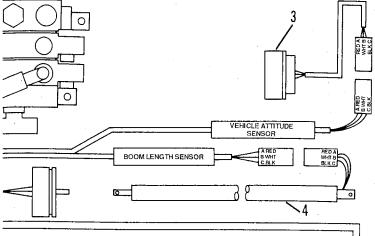

VTROL VALVE

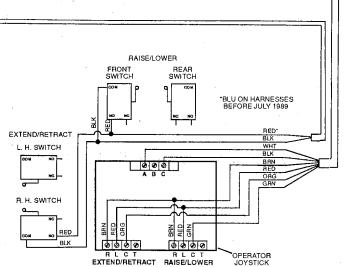

TLC WIRING

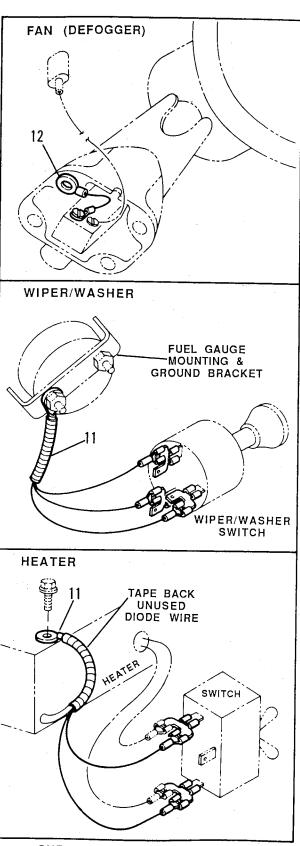


SUPPRESSION INSTALLATIONS FOR OPTIONAL ENCLOSED CAB ONLY

PA 1131

	*		


ELECTRONIC JOYSTICK WIRING W/o TLC

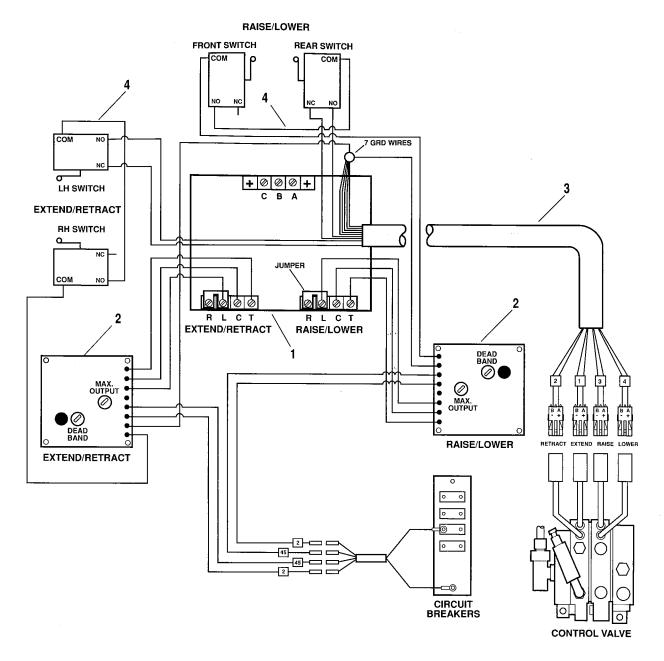

PA1122

Item No.	Part Number	Qty.	Description
1 2 3 4	7087383 8224016 7086762 7086752 7087361	1 1 2 1 2	Electronic Joystick Assembly (Includes Items 1 thru 4) Joystick, Electronic 50° Module, Driver Harness, Wiring Wire Assembly
	7091871	1	KITS Kit, Test Cable For Pulsar Solenoid Valve

ELECTRONIC JOYSTICK ASSEMBLY

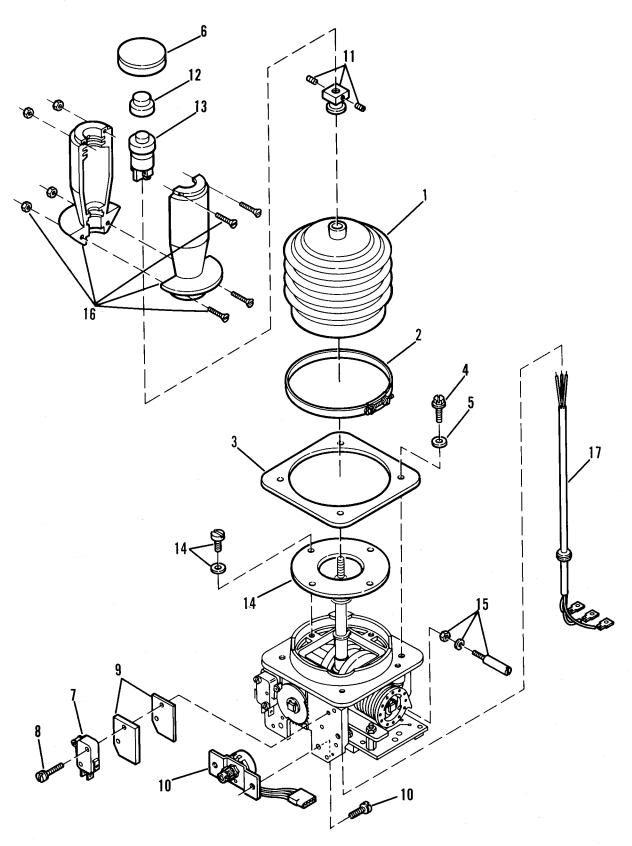


PA1121

ELECTRONIC JOYSTICK ASSEMBLY

Item No.	Part Number	Qty.	Description
	8224016 8033389 8033390 8033391 8033392 8033394 8033395 8033396 8033397 8033398 8033399 8033400 8033401 8033402 8033403 8033404 8033405	Qty. 1 1 1 4 4 8 4 2 1 1 1 1 1 1 1 1	Joystick Assembly (Includes Items 1 thru 17) Boot Clamp Boot Gasket, Mounting Screw, M 5 x 10 Washer, Nylon #10 Boot, Pushbutton Microswitch V3L - 139 - D8 Screw #4 - 40 x 7/8 Insulator Kit Pot Plate Assembly Coupling, Shaft w/Screws Button, Actuating Switch, Pushbutton Gate, Special Stop, Return Spring w/Nut & Lockwasher Handle Section w/Gaskets (Both Halves) Wire, 3 Conductor, 24 " Long


OUTRIGGER WIRING

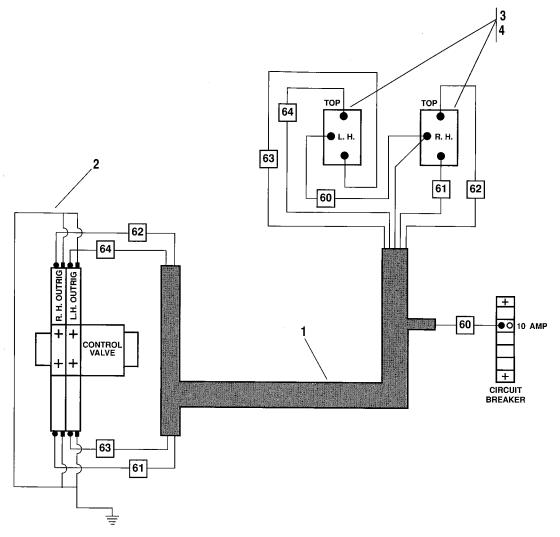

PB 0851

Item No.	Part Number	Qty.	Description
1	7089662	1	Harness, Wiring
2	7089671	1	Wire Ground
3	8223002	2	Switch, Toggle
4	8580309	2	Boot, Toggle Switch

DECALS AND PAINT

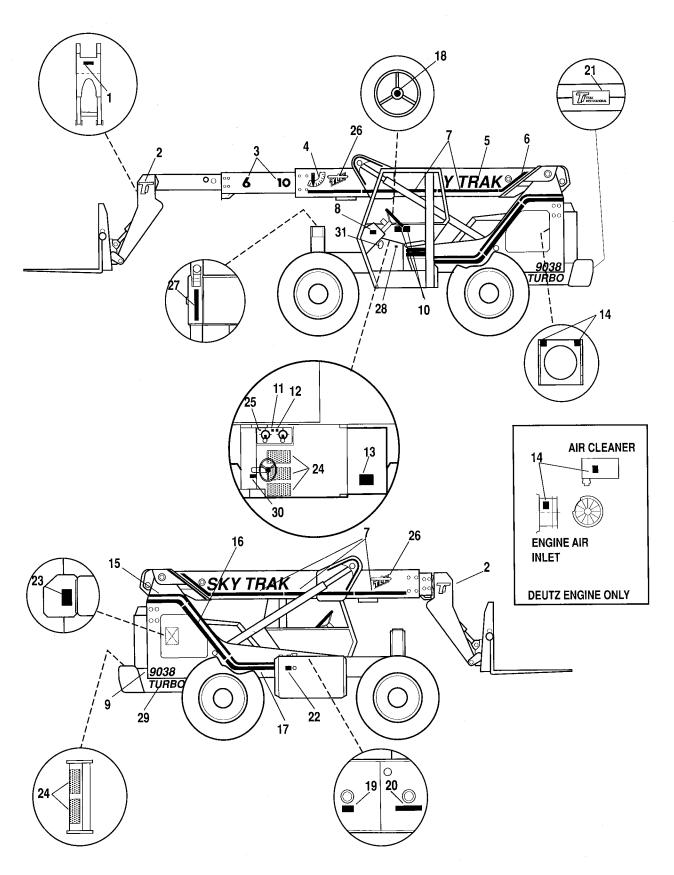


PB 0861

DECALS AND PAINT

Item No.	Part Number	Qty.	Description
1	4106551	1	Decal, Handle Mat'l Only
2	4106781	2	Decal, "T I" Logo
3	4106092	1 1	Decal, Boom, Extend Numbers
4	4105262	1	Decal, Boom Angle
5	4105841	2	Decal, Skytrak
6	4106512	2	Decal, Elbow Boom Stripe
7	4105861	6	Decal, Front Boom Stripe
8	4103992	1	Decal, Electrocution
9	4105951	2	Decal, "9038" Numbers
10	4105543	1	Chart, Load Rating, w/Std. Counterweight
	4105323	1	Chart, Load Rating, w/Outriggers
	4106893	1	Chart, Load Rating, w/8' Mast
11	4106101	1	Decal, Boom Control
12	4106111	1	Decal, Frame / Fork
13	4105392	1	Decal, Jump Start
14	4105501	2	Decal, Warning Fan
15	4106833	2	Decal, Upper Stripe
16	4106492	2	Decal, Side Stripe
17	4106823	2	Decal, Lower Stripe
18	4106681	1	Decal, Steering Wheel Logo
19	4100181	1 1	Decal, Hydraulic Oil
20	6603622		Decal, Diesel Fuel
21	4106872	1	Decal, TRAK Logo
22	4104291	1	Decal, Hydraulic Oil Level
23	4106863	1	Decal, "9038" Lube Chart
24	7010491	5	Safety Walk, 6 x 12
25	4106741	1 1	Decal, TLC Thumbswitch (w/TLC option only)
26	4106852	2	Decal, TLC Logo (w/TLC option only)
27	4105961	1	Decal, Koehring Name
28	4105061	1	Decal, Brake Warning
29	4105831	2	Decal, Turbo
30	4106801	1	Decal, Park Lock
31	4102321	1	Ring, Key
	8528033	1 gal	Paint, Orange, Hi-Solids Alkyd (Service Repaint)
	8528034	1 can	Paint, Orange, Hi-Solids Alkyd (16 oz spray - touchup)
	8528036	1 can	Paint, Black, Gloss Enamel "Transport" (16 oz spray - touchup)
	8528040	1 can	Paint, White, Gloss Enamel (16 oz spray - touchup)
			<u>KITS</u>
	7091961	AR	Kit, Complete Machine Decal
	7091961	AR	Kit, Complete Machine Decal

OUTER BOOM

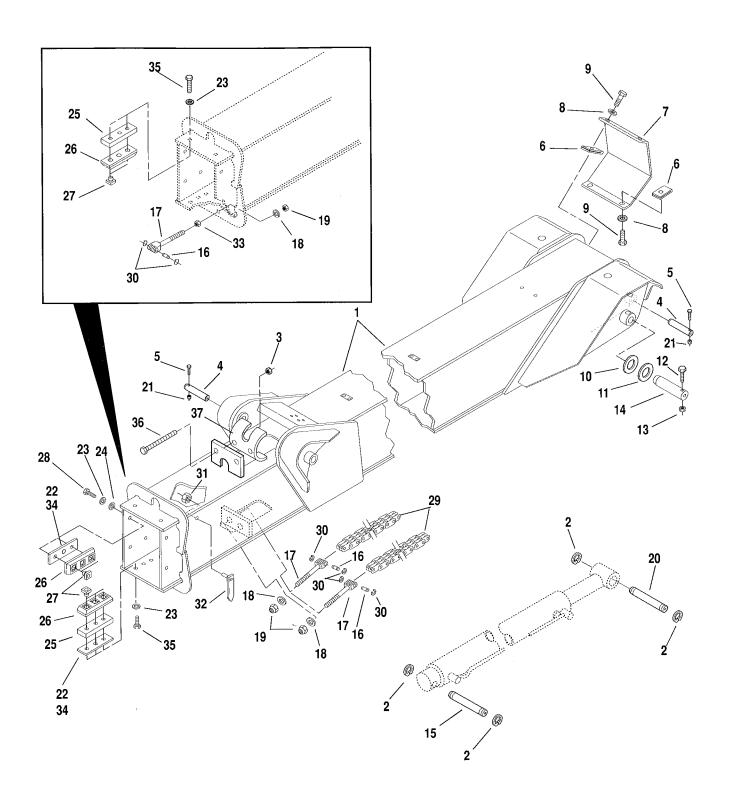


PB 0871

OUTER BOOM

Item No.	Part Number	Qty.	Description
	7087724 8642234 8305012 7075651 8303770 8305906 7088003 8307106 8303679 8307910 8307911 8303655 8305643 7077432 7063922 8124126 7063472 8307104 8305646 7063912 8305645 7082362 8307005 8037204 7082332 7079572	Qty. 1 4 2 4 4 4 1 4 4 2 2 2 2 2 1 3 3 3 1 4 AR 18 8 4 8	Outer Boom Ring, Snap Nut, Lock, 1/2-13 Pin, Rod End, Slave Cylinder & Hoist Cylinder Screw, Cap, Hex Hd, 3/8-16 x 2-3/4 Nut, Retaining, 5/16-18 Cover, Rear Boom Washer, Flat, 5/16 Screw, Cap, Hex Hd, 5/16-18 x 3/4 Washer, Spacer, 1/16 Washer, Spacer, 1/8 Screw, Cap, Hex Hd, 5/8-11 x 4-1/2 Nut, Lock, 5/8-11 Pin, Boom Pivot Pin, Base End, Extend Cylinder Pin Clevis, Chain Washer, Flat, 3/4 Nut, Lock, 3/4-16 Pin, Rod End, Extend Cylinder Nut, Lock, 3/8-16 Shim, Wear Pad, #10 Ga Lockwasher, 3/8 Washer, Flat, 3/8 Spacer, Wear Pad - 1" Wear Pad
30 31 32 33 34 35 36 37	8642237 8305647 7075611 8305018 7082342 8303622 7080731 7088111	6 1 1 AR 10 2 1	Ring, Retaining Locknut Pointer Nut, Standard 3/4-16 Shim, Wear Pad #14 Ga Screw, Hex Hd Cap, 3/8-16 x 2 Bolt, Tensioner Bracket, Tensioner

INTERMEDIATE BOOM

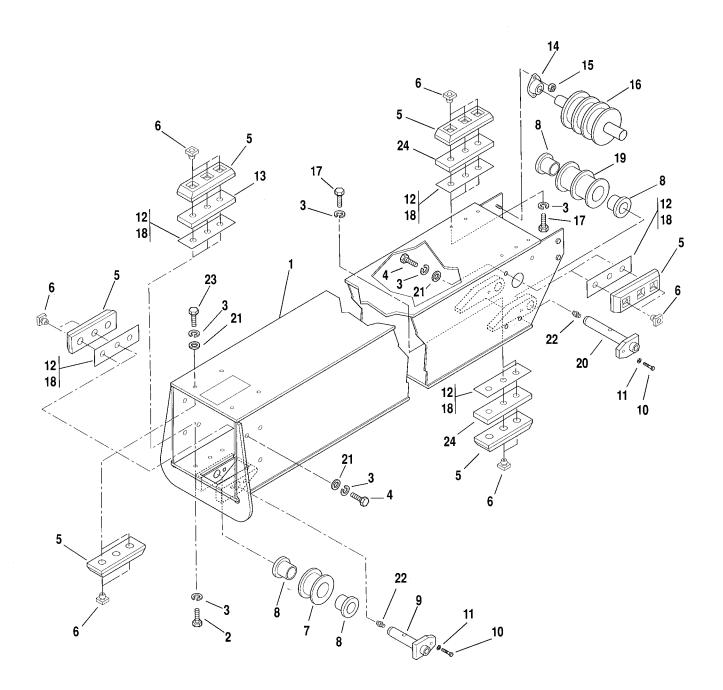


PB 0881

INTERMEDIATE BOOM

Item No.	Part Number	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24	7087834 8303679 8307005 8303681 7079572 7082311 7063462 5906392 7063422 8303624 8307007 7082362 7088831 8065213 8305626 7087892 8303622 7063452 7063452 7063432 8307204 8520003 8303620 7082332	1 6 32 14 32 1 4 1 2 2 R 2 2 4 1 10 R 1 1 16 2 4 4	Intermediate Boom Screw, Cap, Hex Hd, 3/8-16 x 1-3/4 Lockwasher, 3/8 Screw, Cap, Hex Hd, 3/8-16 x 3/4 Wear Pad Insert, Wear Pad Sheave, Retract Chain Bushing, Flange Pin, Chain Sheave Screw, Cap, Hex Hd, 1/2-13 x 1.0 Lockwasher, 1/2 Shim, Wear Pad, #10 Ga Spacer, Wear Pad - 3/4" Bearing Locknut, 5/16-18 Pulley, Hose Screw, Cap, Hex Hd, 3/8-16 x 2 Shim, Wear Pad, #14 Ga Sheave, Extend Chain Pin, Chain Sheave Washer, Flat, 3/8 Fitting, Lube Screw, Hex Hd Cap 3/8 - 16 x 1 Spacer, Wear Pad - 1"

INNER BOOM

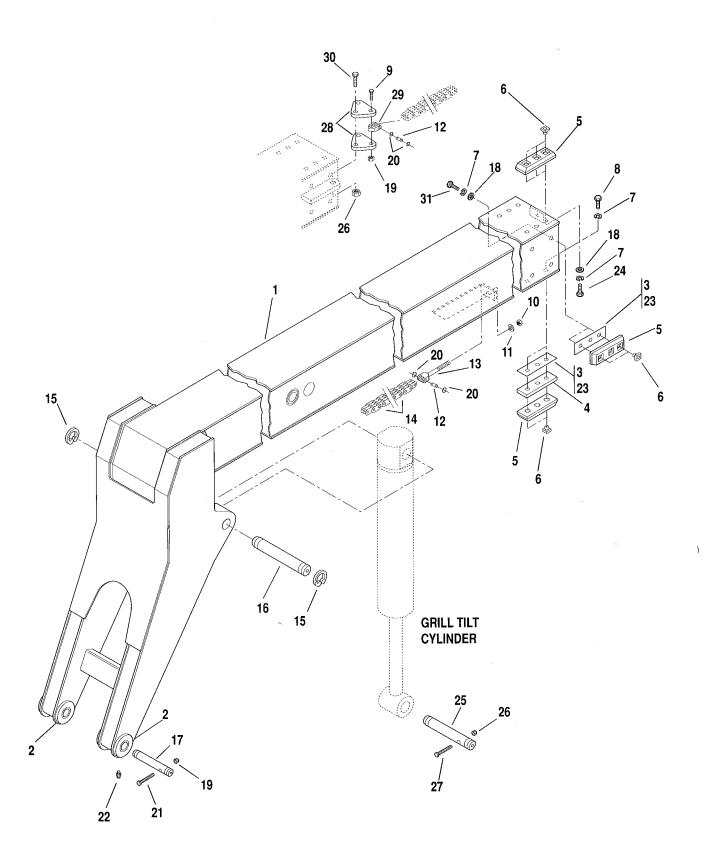


PB 0891

INNER BOOM


Item No.	Part Number	Qty.	Description
No. 1 2 3 4 5 6 7 8 9 10 11 12 13	7086314 7077222 7082362 7088831 7079572 7082311 8307005 8303679 8310019 8305646 8307104 8124126 7063472	1 4 AR 2 6 14 14 4 2 1 1 3	Inner Boom (Includes Item 2) Bushing Shim, Wear Pad, #10 Ga Spacer, Wear Pad - 3/4" Wear Pad Insert, Wear Pad Lockwasher, 3/8 Screw, Cap, Hex Hd, 3/8-16 x 1-3/4 Bolt, Socket Hd Shoulder, 3/8-16 x 1-1/2 Locknut, 3/4-16 ESNA Washer, Flat, 3/4 Pin Clevis, Chain
14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31	8127002 8642234 7086692 7086351 8307204 8305645 8642237 8303770 8520013 7082342 8303620 7086361 8305644 8303683 7089781 7063482 8310020 8303681	1 2 1 2 10 4 6 2 2 AR 4 1 2 2 1 4	Chain Ring, Retaining Pin, Base End, Grille Tilt Cylinder Pin, Pivot, Quick Attach Washer, Flat, 3/8 Locknut, 3/8-16 Ring, Retaining Screw, Hex Hd Cap, 3/8-16 x 2-3/4 Fitting, Lube 1/8 Self Tap Shim, Wear Pad #14 Ga Screw, Hex Hd Cap, 3/8-16 x 1 Pin, Grille Tilt Cylinder Rod End Nut, Lock 1/2-13 Screw, Hex Hd Cap, 1/2-13 x 3-1/2 Yoke, Chain Clevis, Chain Screw, Socket Hd, 1/2-13 x 1-1/2 Screw, Hex Hd Cap, 3/8-16 x 3/4

QUICK ATTACH

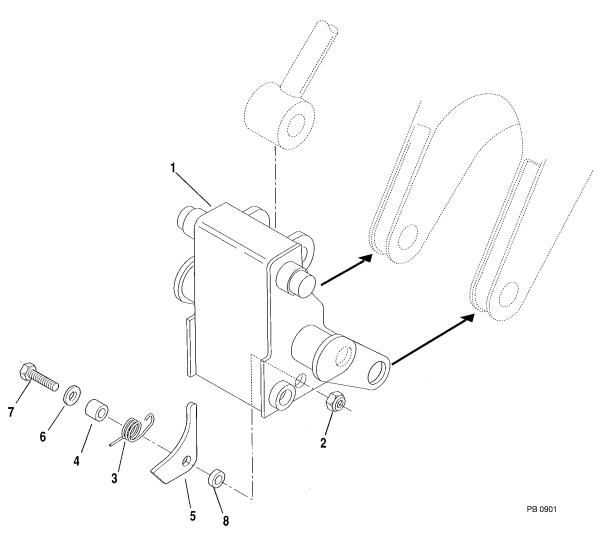


Item No.	Part Number	Qty.	Description
No. 1 2 3 4 5 6 7 8	7086204 8305619 7085552 7085571 7085562 8307104 8303640 7087781	1 1 1 1 1 1 1	Quick Attach Locknut, 3/4-10 Spring, Torsion Spacer Latch Washer, Flat 3/4 Screw, Cap, Hex Hd, 3/4-10 x 3-1/4 Spacer

CARRIAGE 48"

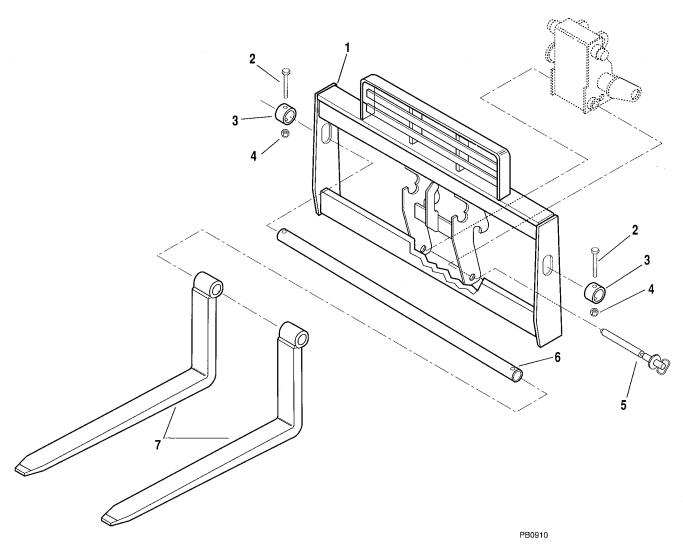

Item No.	Part Number	Qty.	Description
1	7083054	1	Carriage, 48 inch
2	8303634	2	Screw, Cap Hex Hd, 5/8-11 x 4
3	7086471	2	Hub, Lock
4	8305643	2	Locknut, 5/8-11
5	7087002	1	Pin, Lock
6	7083912	1	Shaft
7	7090063	2	Fork, Pallet 48 x 4
	7082703	2	Fork, Lumber 60 x 7 (Not Shown)
	7085073	6	Fork, Block (Not Shown)
-			


CARRIAGE 60" (OPTIONAL)

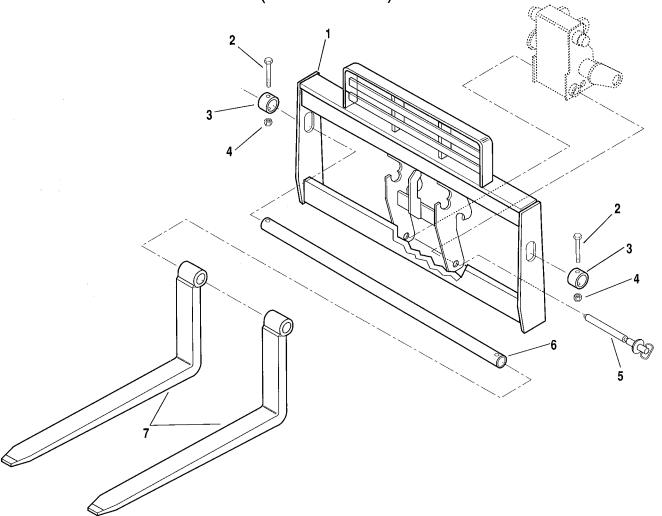

Р	B09	10

Item No.	Part Number	Qty.	Description				
1 2 3 4 5 6	7086304 8303634 7086471 8305643 7087002 7084972 7090063	1 2 2 2 1 1	Carriage, 60 inch Screw, Cap Hex Hd, 5/8-11 x 4 Hub, Lock Locknut, 5/8-11 Pin, Lock Shaft Fork, Pallet 48 x 4				
	7082703 7082703 7085073	2 6	Fork, Lumber 60 x 7 (Not Shown) Fork, Block (Not Shown)				


CARRIAGE 72" (OPTIONAL)

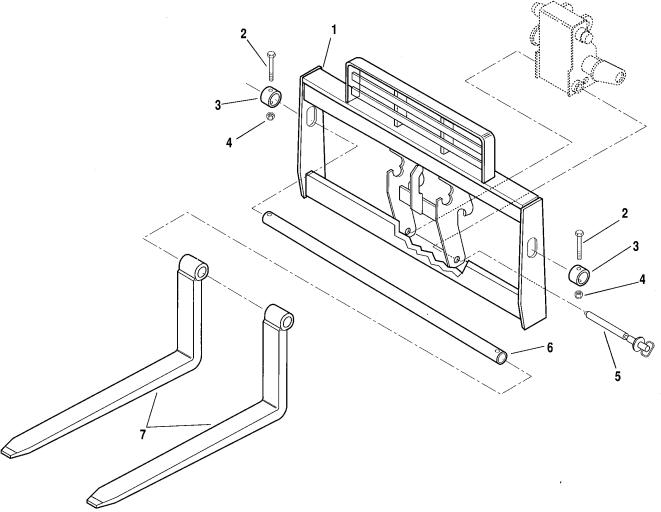

Р	BC	19	10


Item No.	Part Number	Qty.	Description
1	7086794	1	Carriage, 72 inch
2	8303634	2	Screw, Cap Hex Hd, 5/8-11 x 4
3	7086471	2	Hub, Lock
4	8305643	2	Locknut, 5/8-11
5	7087002	1	Pin, Lock
6	7084942	1	Shaft
7	7090063	2	Fork, Pallet 48 x 4
	7082703	2	Fork, Lumber 60 x 7 (Not Shown)
	7085073	6	Fork, Block (Not Shown)
			·

UTILITY BUCKET (OPTIONAL)

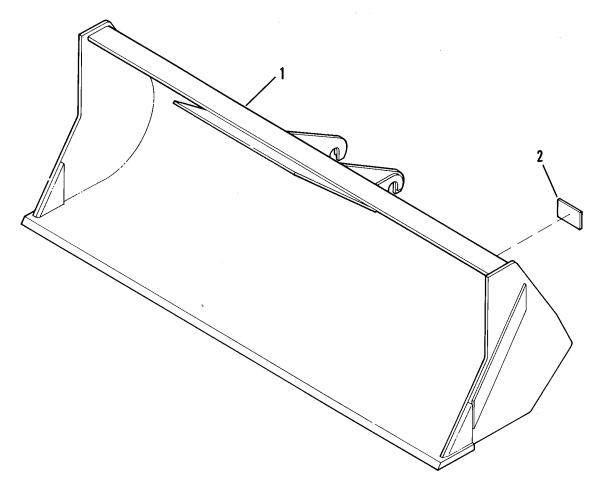


PA0782

Item No.	Part Number	Qty.	Description
1 2	7085065 4106561	1 1	Bucket, Utility, 1-1/8 cu yd (Includes Item 2) Plate, Capacity

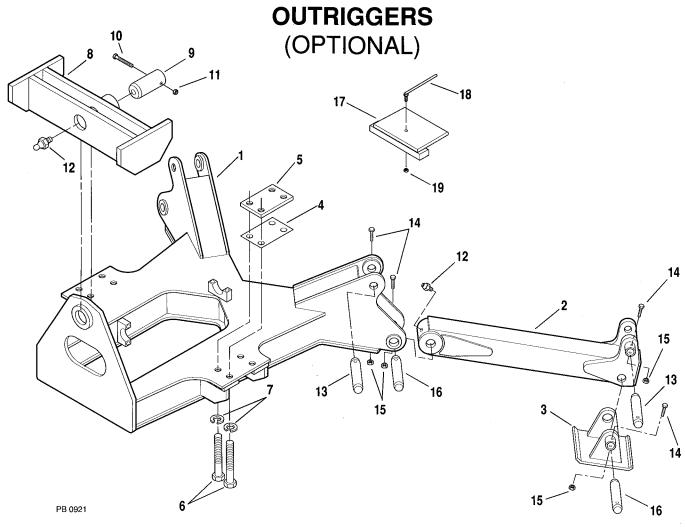

Item No.	Part Number	Qty.	Description
1	7077625	1	Frame, Outrigger
2	7071463	2	Leg Assembly
3	7071692	2	Pad Assembly
4	7077631	2	Spacer, .06 THK
5	7077641	2	Spacer, 1.25 THK
6	8303526	8	Screw, Hex Hd. Cap, 3/4 NC x 9.5
7	8307010	8	Lockwasher, 3/4
8	7071443	1	Bracket
9	7075751	1	Pin, Frame Pivot
10	8303655	1	Screw, Hex Hd. Cap, 5/8 NC x 4 1/2
11	8305643	1 -	Locknut, 5/8 NC ESNA
12	8520001	3	Fitting, Grease 1/8 NPT
13	7071701	4	Pin, Cylinder Pivots
14	8303683	8	Screw, Hex Hd. Cap, 1/2 NC x 3.5
15	8305644	8	Locknut, 1/2 NC ESNA
16	7071711	4	Pin-Pad, Leg Pivots
17	7077161	1	Stop, Boom
18	7077181	1	Screw, Mount
19	8305619	1	Locknut, 3/4 NC ESNA
		:	


(S/N 9A0550 THRU 9F0599)

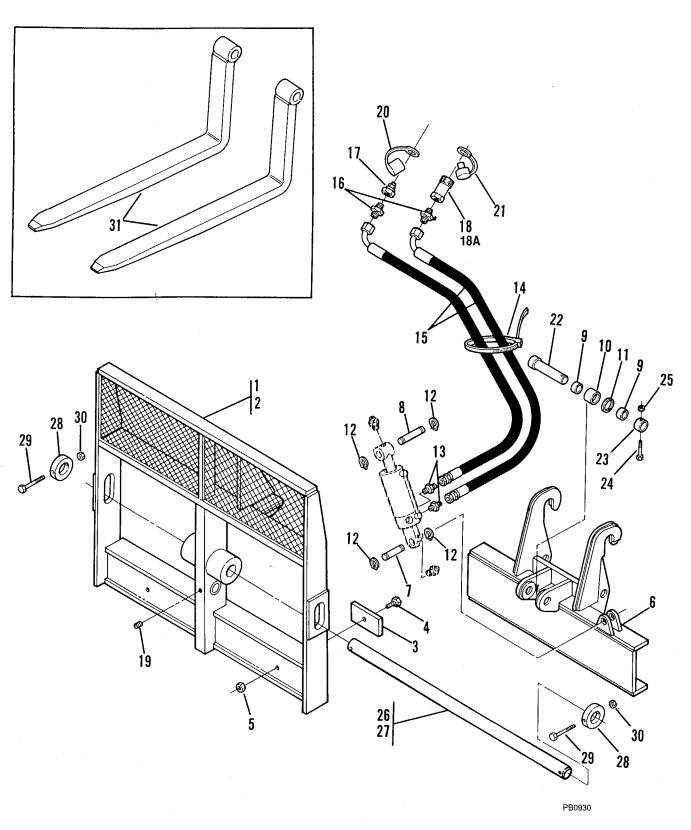

(S/N 9A0550 THRU 9F0599)

No.	(S/IN 9AUSSU ITAU 9FUS99)						
	Part Number	Qty.	Description				
2 7 3 4 8 5 8 7 7 7 8 7 9 7 10 8 11 12 8 13 14 8 15 16 17 18 18 18 18 18 18 19 20 8 21 22 23 7 24 25 26 7 27 28 29 30 31 7	Part Number 7077344 7077444 7065482 8303739 8305602 7085154 7077501 7077511 7077481 8065634 8642001 8642235 8760117 8584001 2711992 8760030 8420056 8420057 86440027 8541433 8420058 8420059 7085411 7085501 8303770 8303645 7075942 7075952 7079251 8303629 8305644 7069093 7077333 7070623	Qty. 1 1 2 2 1 1 1 2 2 1 1 1 1 1 1 1 1 2 2 2 2 6	Carriage, Side Tilt - 48" (Includes Items 3 thru 5) Carriage, Side Tilt - 60" (Includes Items 3 thru 5) Pad Wear Screw, Hex Hd Cap 5/16NC x 1-1/4Gr 5 Locknut, 5/16NC Base, Pivot Pin, Cyl. Base Pin, Cyl. Rod Spacer Bushing, Self Align Ring, Snap Ring, Snap Conn, Str Thr'd Tie Wrap Hose Assembly Conn, Male Quick Disconnect, Male 3/8 NPT Quick Disconnect, Female 3/8 NPT (See also item 18A) O-Ring, Viton - For High Temp. Application of item 18 Plug, Pipe Hex Skt 1/8 Cap, Dust Pin, Pivot Collar, Pin Locking Screw, Hex Hd Cap 3/8-16 x 2-3/4 Locknut, 3/8-16 ESNA Shatt, Fork Pivot 48" Shaft, Fork Pivot 60" Collar, Locking Screw, Hex Hd Cap, 1/2-13 x 4-1/2 Locknut, 1/2-13 Fork, Pallet 48 x 4 Fork, Lumber 60 x 5 (Not Shown) Fork, Blocking (Not Shown)				

(S/N 9F0600 AND AFTER)

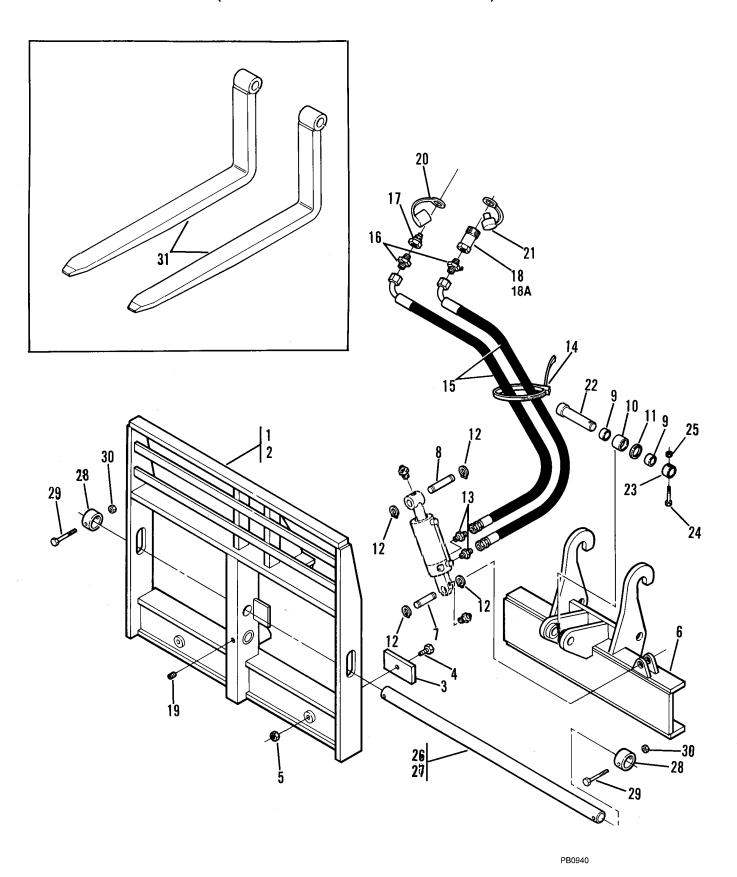


9.10.1

(S/N 9F0600 AND AFTER)

Γ.	(5/N 9F0600 AND AFTER)								
Item No.	Part Number	Qty.	Description						
	7089044 7089054 7065482 8303739 8305602 7085154 7077501 7077511 7077481 8065634 8642001 8642235 8760117 8584001 2711992 8760030 8420056 8420057 8640027 8541433 8420058 8420059 7085411 7085501 8303770 8305645 7083912 7089972 7086471 8303634 8305643 7090063 7082703 7085073	Qty. 1 1 2 2 2 1 1 1 2 2 1 1 1 1 1 1 1 1 1	Carriage, Side Tilt - 48" (Includes Items 3 thru 5) Carriage, Side Tilt - 60" (Includes Items 3 thru 5) Pad Wear Screw, Hex Hd Cap 5/16NC x 1-1/4Gr 5 Locknut, 5/16NC Base, Pivot Pin, Cyl. Base Pin, Cyl. Base Pin, Cyl. Rod Spacer Bushing, Self Align Ring, Snap Ring, Snap Ring, Snap Ronn, Str Thr'd Tie Wrap Hose Assembly Conn, Male Quick Disconnect, Male 3/8 NPT Quick Disconnect, Female 3/8 NPT (See also item 18A) O-Ring, Viton - For High Temp. Application of item 18 Plug, Pipe Hex Skt 1/8 Cap, Dust Plug, Pipe Hex Skt 1/8 Cap, Dust Pin, Pivot Collar, Pin Locking Screw, Hex Hd Cap 3/8-16 x 2-3/4 Locknut, 3/8-16 ESNA Shaft, Fork Pivot 48" Shaft, Fork Pivot 48" Shaft, Fork Pivot 60" Hub, Lock Screw, Hex Hd Cap, 5/8-11 x 4 Locknut, 5/8-11 Fork, Pallet 48 x 4 Fork, Lumber 60 x 7 (Not Shown) Fork, Blocking (Not Shown)						

8 FOOT MAST

(OPTIONAL)

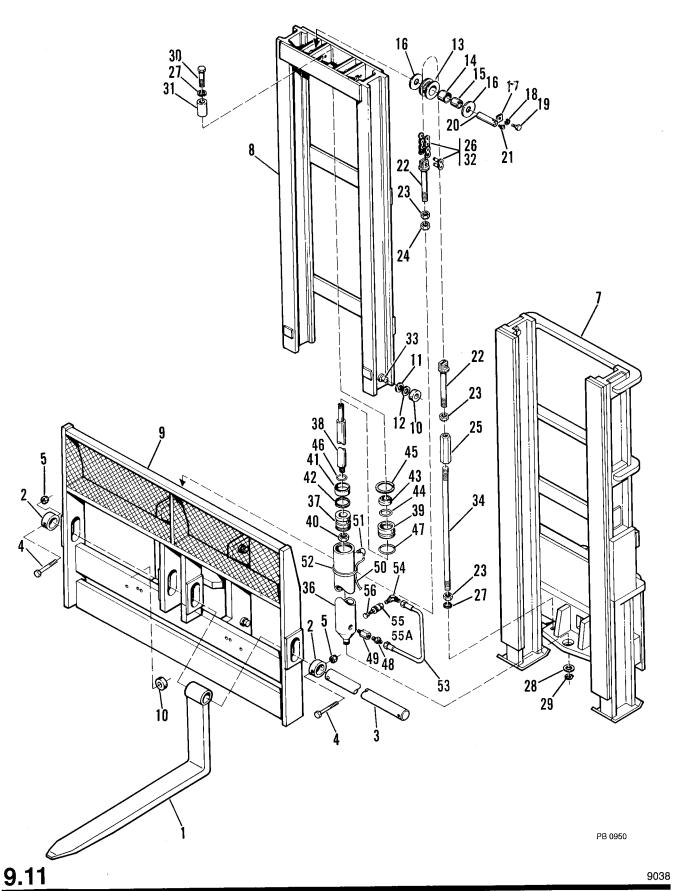

8 FOOT MAST

(OPTIONAL)

Item	5		(OI HONAL)
No.	Part Number	Qty.	Description
1	7069093	2 2	Fork, Pallet 4 x 48
2	7079251	2	Collar, Locking
3	7075952	1	Shaft, Fork Pivot
4 5	8303772	2 2	Screw, Hex Hd Cap, 1/2-13 x 5 Gr 5
6	8305644 7090353	1	Locknut, 1/2
7	Consult Factory		Mast Assembly - Complete (Includes Items 7 thru 56) Outer Rail Assembly
8	8381151	i	Inner Rail Assembly
9	8381152	i	Carriage Assembly 60"
10	8381117	10	Roller, Load
11	8381118	AR	Shim ,030
12	8381119	AR	Shim .060
13	8381120	2	Wheel, Chain
14	8381121	2	Bearing
15	8381122	2	Race, Bearing
16 17	8381123	4	Washer, Thrust
18	8381124 8381125	2 2	Lock, Shaft
19	8381126	2	Lockwasher Bolt
20	8381127	2 2	Shaft, Chain Wheel
21	8381128	2	Fitting, Grease
22	8381129	4	Chain End
23	8381130	6	Nut, Jam
24	8381131	2 2	Locknut
25	8381132	2	Turnbuckle
26	8381133	4	Master Link Set
27	8381134	3	Lockwasher
28 29	8381135	1	Washer, Flat
30	8381136 8381138	1	Ring, Retaining Bolt
31	8381140	1	Bushing
32	8381153	2	Chain
33	8381149	8	Support, Roller
34	8381154	2	Rod, Connecting
35	8381146	1	Cylinder Assembly, Mast - Complete (Includes Items 36 thru 47)
36	8381147	1	Tube, Cylinder
37	8381156	1	Piston
38	8381148	1	Rod, Cylinder
39	8381157	1	Gland
40 41	NSS See Kits	1	Nut Bing Booring
42	See Kits	1	Ring, Bearing Ring, Seal
43	See Kits	i	Wiper
44	See Kits	i	O-Ring
45	See Kits	1	O-Ring
46	See Kits	1	O-Ring
47	NSS	1	Retainer
48	8760108	1	Connector, Male, 1/2 JIC x 7/8 Str. Thread
49 50	8205474	1	Regulator, Flow
50	8582005-0680 8424213	1	Line, Vent Elbow, 90° 3/8 ID Hose x 1/2 NPT Male
52	8584002	4	Tie, Cable
53	8381159	1	Hose Assembly
54	8760202	i	Elbow, 90° Male, 3/8NPT x 1/2JIC
55	8420057	1	Quick Disconnect, Female 3/8NPT (See also item 55A)
55A	8640027	1	O-Ring, Viton - For High Temp. Application of item 55
56	8420059	1	Cap, Dust
			<u>KITS</u>
	8381158	1	Seal Kit, Mast Cylinder (Includes Items 41 thru 46)
	0001100	'	ocal fat, mast cyllinder (molddes items 41 tillu 40)

9.11

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
2701662	5.7	4105262		7054902	5.2,	7070703	4.3
2710632		4105323				7070832	4.7
2710952		4105392		7057141	4.1,	7071132	2.13
2711042		4105501		***************************************	4.2,	7071202	4.3
	,	4105543	8.1		4.3	7071232	4.3
	,	4105621	2.18	7058372	7.2	7071342	2.5.
2711052		4105831	8.1	7058602	4.1		
2711242		4105841	8.1	7063422	9.2		,
	•	4105861	8.1	7063432		7071443	
2711613		4105951		7063452		7071463	
2711623		4105961	8.1	7063462		7071692	
		4106092		7063472		7071701	
2711633		4106101		, , , , , , , , , , , , , , , , , , , ,		7071711	
2711643		4106111		7063482		7072392	
2711663		4106492		7063912		7072403	
2711683		4106512		7063912		7072733	
2711733		4106551		7065243			
2711743		4106561			•	7072772	
2711802				7005050		7073612	
2711872	5.2,	4106681		7065253	,	7073632	_
	5.3	4106741			,	7073802	
2711962	5.1	4106781				7074721	
2711972	5.1	4106801		7065482		7074972	
2711992	9.10.	4106823				•	
	9.10.1	4106833		7065632		7075172	
2712012	5.1	4106852			5.5,	7075211	
2712122		4106863				7075432	7.1,
	,	4106872		7065651			
	,	4106893		7066882	4.5,	7075611	
2712142		5906392	9.2		4.6,	7075651	9.1
2712182		6603622	8.1	***************************************		7075751	9.9
2712192		6604592	5.2,	7067522		7075942	9.10
			5.3	7068422	3.15	7075952	9.10,
2712232		6604762		7068502	3.15	***************************************	9.11
	,		5.7	7068651	7.3,	7076663	
2712242		6604962	5.6	***************************************	7.4.	7076711	4.14
		6604982	5.8	*****************************	7.5,	7076721	
2712282		6605062	5.2,	***************************************	7.6 [°]	7076842	
2/12202	5.∠, 5.3			7068711		7076851	
0710000		6605652		7068812		7077003	_
2712292		6605772		7068822		7077113	
2712312		7010491		7068832		7077152	
2712332		7015531		7069093		7077161	
2712362		7047041				7077181	
2712372			,	7069202		7077222	
2712382		7047371			,	7077333	
2712402		7047421			,	7077344	
		7054351		7069683		7077432	
2712412		7004001	•				
2712552				7069743		7077444	
2712582	5.6		•	7069851		7077481	
2712592	5.1			7070383		7077504	
2712613	6.8.1	•••••	•	7070392		7077501	,
		***************************************	4.4	7070402			
4100181	8.1						
4100181 4102321		7054632	4.1,	7070552		7077511	
	8.1	7054632	4.1, 4.2,	7070552 7070572	4.2,		9.10.1
4102321	8.1 8.1	7054632	4.1, 4.2, 4.4	7070552	4.2, 4.3		9.10.1 9.9

Index 1

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
7077641	9.9	7080942	2.12	7084882		7087361	,
7077661	1.1	7081031	2.14	7084902	2.5	***************************************	
7077671		7082261	7.4,	7084942	9.7	7087383	
7077692			7.6	7084972	9.6		
7077782		7082292	2.5	7085065	9.8	7087411	7.2
7077813		7082311	9.1.	7085073	9.5,	7087724	9.1
7077842		.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			9.6,	7087781	9.4
7077873			· · · · · · · · · · · · · · · · · · ·		9.7,	7087834	9.2
7077913		7082332	9.1.		9.10.1	7087892	9.2
7077962				7085154		7087942	
7078143		7082342				7088003	
7078162				7085282		7088042	
7078413				7085403		7088052	
7078453		7082362		7085411		7088062	
-						7088081	
7078482				7085452		7088092	
7078492		700070		7085462		7088111	
7078502		7082372					
7078903		7082602		7085491		7088122	
7078952		7082703		7085501			
7078972	1.1					7088161	
7079012	4.11			7085552		7088202	
7079112	6.4		9.10.1	7085562		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
7079122	6.4	7082901	6.1	7085571	9.4	7088212	
7079142		7082971	2.1	7085732	7.2		
		7083054		7085751	7.2	7088222	2.10,
7079152		7083661		7085783	7.2	***************************************	7.7
		7083912		7085791	7.2	7088232	2.10,
7079251				7085801	7.2	***************************************	7.7
		7083963		7085821		7088242	
7079304		7084092		7085831		7088252	
		7084142		7086204		7088262	
		7084142		7086304		7088533	
				7086314			
7079313		7084172		7086351		7088653	
7079332		7084181					
7079342		7084191		7086361		7088692	
7079352		7084212		7086471		7088732	
7079364						7088742	
7079442	1.1					7088773	
7079523	4.2		7 <i>.</i> 6			7088792	4.13,
7079533	4.2	7084241		7086553			
7079543	4.1	7084272	4.8	7086664			4.15,
7079572		7084302	1.1		4.14,		4.16,
		7084323	1.2		4.15,	***************************************	7.3,
		7084331			4.16,	,	7.4,
7080063		7084361			6.1		7.5,
7080192		7084392		7086692	9.3		
		7084412		7086752		7088802	6.1
		7084422				7088831	
700045		7084432		7086762			
7080215		7084461				7088942	
				7086772		7088952	
7080562		7084482					
7080731		7084501		7000704		7088964	
7080843		7084515		7086794		7088974	
7080853		7084543		7087002		7089044	
7080891		7084692	2.1			7089054	
7080932	1.1				9./	7089114	/.1

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
7089124		7091881	7.7	8032546	3.7	8032617	3.9.
		7091892	2.13	8032547	3.7		,
		7091961	8.1	8032548	3.7	8032620	3.8.
		7091992	3.25	8032549			
7089162		7092343		8032550		***************************************	
7089173	2.6	7092882		8032551		8032622	
7089182	2.6	7092921		8032552		8032623	
7089192	2.6	7092932		8032553		8032624	
7089201	7.3	7772035-0008		8032554		8032625	
7089292				8032555			
7089322		8022023		8032556		8032626	,
7089332							
7089453				8032558		8032627	
	,	8022062		8032559		8032628	
7089472		8022069		8032560		***************************************	
		8022074		8032561		8032629	
7089523		8022076			3.8,	8032631	3.9
7089581		8030128			3.12,	8032632	3.9
7089641		8030943				8032633	3.9
7089662	· · · · · · · · · · · ·	8032500	3.7	8032562	3.8	8032634	3.9
7089671		8032501	3.7	8032563	3.8	8032635	
7089781		8032502	3.7	8032564	3.8	8032637	
7089802	4.5	8032503	3.7.	8032565		8032638	
7089812	4.6			8032566		8032639	
7089881	5.9,					8032640	
***************************************	5.10.	8032504		8032567		8032641	
	,	8032505		8032568			
7089922		8032506				8032642	
7089972			•	8032573		8032643	
7090041				8032574			
7090051				8032578		8032644	
7090063		8032508		8032579		8032645	
	,	8032509		8032580		8032646	
	,	8032510		8032581		8032647	
		8032511		8032582	3.8	8032648	3.9
7090072		8032515		8032583	3.8	8032649	3.9
		8032516	3.7	8032584	3.8	8032650	3.9
7090091		8032517	3.7	8032585	3.8	8032651	3.9
7090141		8032518	3.7	8032586	3.8	8032652	
7090162	2.13	8032519	3.7	8032587		0002002	3.10
7090172	4.1	8032520		8032588		8032653	
7090182	4.1,	8032521		8032589		8032654	
	,	8032522		8032592		8032655	
7090191		8032523		8032593		8032656	
7090312		8032526		8032594			
7090353		8032528				8032657	
7090362				8032595		8032658	
7090432		8032532		8032597		8032659	
		8032535		8032604		8032661	
7090461		8032536		8032605		8032663	3.11
7090641		8032537		8032608	3.10	8032665	3.11
7090751		8032538		8032609		8032666	3.12
7090781		8032539		8032611	3.10,	8032667	3.12
7090901		8032541	3.7,		•	8032668	
7090922		***************************************	3.8	8032614		8032669	
7091151	4.13	8032542		8032615		8032670	
7091323						8032671	
7091592		8032543		8032616		8032672	
7091871		8032545		0032010	,	8032673	
	,		•		3. IU	0032073	3.12
			ა.შ				

Index 3

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
8032674	3.12	8032810	6.2	8033078	2.2,	8033201	2.5,
8032675	3.12	8032811					,
8032676	3.12	8032812	6.15	8033079	2.2		
8032677	3.12,	8032813		8033081	2.2	8033206	
**************************	7.3,	8032814		8033082		8033207	
***************************************	7.4,	8032816		8033083	2.2	8033208	3.13
***************************************	7.5,	8032959		8033084		8033209	
		8033010		8033085		8033210	
8032678		8033011	2.3	8033086		8033211	
8032679		8033013		8033087		8033212	3.13
8032680		8033014		8033088		8033213	
8032681		8033015	2.3	8033089		8033214	3.13
8032682	3.12	8033016		8033101		8033215	6.11
8032696		8033018		8033102		8033216	
8032697		8033019		8033104		8033217	
8032698		8033020		8033107		8033218	
8032699	6.9	8033021		8033110		8033219	
8032702	6.7	8033022	2.1	8033115	6.4		
8032704	6.7	8033023	2.3	8033119			
8032707	6.7	8033024	2.3	8033122		8033223	
8032708	6.7	8033026	2.3	8033123	6.4	8033224	3.13
8032709	6.7	8033027	2.1	8033128		8033227	
8032711	6.9	8033028		8033129		8033236	
8032712	6.7	8033029	2.3	8033145	6.3		
8032721	6.7	8033030	2.3	8033150	6.13,	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
8032722	6.4	8033031	2.1			8033237	6.14,
8032732	6.4	8033032	2.3		6.14.1		6.14.1
8032734	6.4	8033033	2.3	8033154	6.11	8033240	
8032736	6.4	8033036	2.2	8033155	6.13	8033241	
8032737	6.4	8033044		8033158			
8032738	6.4	8033045	2.16	8033159	6.11	8033242	
8032740	6.4	8033047	2.2	8033161	6.11		2.8
8032741	6.9	8033048	2.16	8033163		8033243	
8032749	6.7	8033049	2.16		6.14.1	8033244	2.8
8032750		8033050	2.1	8033164	6.13,	8033245	2.8
8032756	6.15	8033051	2.1			8033246	
8032762		8033052	2.1		6.14.1	8033255	
	4.10,	8033053	2.1	8033165	6.13,	8033256	
	4.11,	8033055	2.2		6.14,	8033257	6.12
		8033058	2.1,	,,		8033258	
8032764			2.2,	8033178	2.13	8033259	6.12
	4.10,		2.10,	8033188	3.7	8033260	6.12
			2.11	8033189	3.7	8033261	6.12
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		8033059	2.2	8033190	3.8	8033263	6.12
8032795		8033060	2.3	8033191	3.8	8033264	6.12
8032796	6.2	8033061	2.1	8033192	3.8	8033265	6.12
8032797		8033062	2.1	8033193	3.7	8033266	6.12
8032798		8033064	2.2	8033194	3.8	8033267	6.12
8032799		8033065	2.16,	8033195	3.8	8033268	6.12
8032800			7.1	8033196	3.8	8033269	6:12
8032801		8033069	2.2	8033197	3.8	8033270	6.12
8032802		8033070		8033198	3.7,	8033271	6.12
8032803		8033072				8033272	6.12
8032804		8033075		8033199		8033273	6.12
8032806		8033076			•	8033274	6.12
8032807		8033077				8033275	6.12

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
8033276	6.12	8033336	3.23	8033398	7.9	8033468	_
8033277		8033337	3.23	8033399			,
8033278		8033344	3.11	8033400		8033469	
8033279		8033345	3.11	8033401			
8033280		8033346	3.11	8033402		8033470	
8033281	6.12	8033347	3,11	8033403		8033471	
8033282	6.12	8033350	3.10	8033404		8033472	
8033284	6.12	8033351	3.10	8033405			•
8033285	6.12	8033352		8033409		8033473	
8033286	6.12	8033353	3.10				-
8033287	6.12	8033355		8033410		8033474	
8033288	6.12	8033356			,	8033475	
8033289	6.12	8033357				8033476	
8033290	6,12	8033358		8033411		8033835	
8033291		8033359				8037204	
8033292	6.12	8033360			,	8040235	
8033293		8033361		8033413		8040477	
8033294		8033362		8033414	6.3		
8033295		8033363		8033415		8040622	
8033296		8033364				8040623	
8033297		8033365		8033416		8040624	
8033298		8033366		8033417		8040625	
8033299		8033367		8033418		8040626	
8033300	-	8033368		8033419		8040628	. ,
8033301				8033420			
8033302		8033369		8033421		8040629	
8033303		8033370		8033422		8040630	
8033304		8033371		8033423		8040631	
8033305			3.13	8033424		8040632	
		8033372		8033425		8040633	
8033306			3.13			8040634	
8033307		8033373		8033426		8040635	
8033308				8033427		8040636	
8033309		8033374		8033428		8040637	
8033310		8033375		8033429		8040638	3.20
8033311		8033376		8033431		8040639	
8033312		8033377		8033433		8040640	
8033313		8033378		8033434	6.8.1	8040651	3.20
8033314		8033379		8033435		8040652	3.20
8033315		8033380		8033436		8040654	3.20
8033316		8033381		8033437		8040655	3.20
8033317		8033382		8033438	4.3,	8040656	3.20
8033319						8040657	3.20
8033320		8033383	3.10	8033439	4.3,	8040658	3.23
8033321		8033384				8040659	
8033322	3.22	8033385	3.8	8033440	4.3,	8040660	
8033323		8033386	3.8		7.4	8040661	
8033324	3.20	8033387	3.11	8033441	4.3	8040662	
8033326	3.23	8033389	7.9	8033442	4.3	8040663	
8033327	3.23	8033390		8033443			
8033328	3.23	8033391	7.9		,		
8033329	3.23	8033392	7.9	8033444		8040664	
8033330	3.23	8033393				8040665	
8033331	3.23	8033394		8033445		8040666	
8033332		8033395				8040667	
8033334		8033396		8033446	ΔΛ	8040668	
8033335		8033397		8033467		8040669	
. = =				3000707	···· -1 . I	0040003	3.20

Index 5

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
8040670	3.20	8082113		8205669		8262118	
8040671	3.20	8102012	3.23	8220008	2.17	8262309	
8040672		8102406	3.3	8220012	7.3,	8270014	,
8040673		8102407					•
8040674		8102611		8220050	,		
8040675		8124126					
8040676				8220051		8270213	
8040677		8127002		8220060		8270219	
8040678							
8040679		8160037				8270411	
8040682		8160042		8220073			
8040683				8221011-0120		8270412	
8040684		8160046		8221020-0125			
8040685		8160053		8221022-0050		8270602	,
8040686		8160059		8221022-0110			•
8040687		8160060		8221022-0260			,
8040688		8160406		8223001			
8040689		8160411			,	8270617	
8040690		8160413					,
8040691		8160417		8223002		·····	
8040692		8160419		8223016			
8040693				8223024		8272005	
8040694		8160420				8273013	,
8040695		8160610		8223025			
8040696		8160615		8223215			,
8040697		8160617		8223216			
8040698						8273117	
8040700		8162003		***************************************	,	8273118	
8040701		8162206				8273119	
8040702		8180306		8223217	,	8273237	•
8040703							,
8040706	3.21		4.3	8223405			,
8040707	3.21	8205474			,		
8040708		8205503				8273238	,
8040709	3.21	8205505		8223419			
8040710		8205506		8223436			
8040711	3.21	8205507		8223438			
8040712		8205514	6.10	8223442	2.5,	8273239	
8040716	3.21	8205524				8273240	
8040717	3.21	8205542					
8040720	3.21	8205543	6.10	8223507	7.1		
8040722	3.21	8205545		8223510			
8040732	3.21	8205546				8273241	•
8040733	3.21	8205547	6.10				
8040734	3.21	8205548		8224016	2.10,	8273243	•
8040735	3.21	8205640	6.5		2.11,		
8040736	3.21	8205655			,	8273262	•
8040737	3.20						,
8040738	3.20	8205656		8229215			
8042543		8205659		8229216		8273269	
8065213	9.2			8229218		8273272	
8065634		8205661		8229226			
		8205662	6.9	8229227	7.2		
		8205665	6.6	8229229			
8065635		8205666		8262112		8274012	
8065639		8205667	6.4	8262116	4.3	8274013	
8080023	4.2					8274014	4.16

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
8274015	4.16	8303116	3.18,	8303634	9.5.	8303729	4.1,
8274016	4.16		3.19			***************************************	4.2,
8274209	4.14	8303118	2.1	8303634			•
8274210		8303119				8303739	
8274211			,	8303638			•
8274212		8303264		8303639			,
8274401		8303510			•	8303746	
8275201		8303516				0000740	
8275212		8303519					,
					,		
	· · · · · · · · · · · · · · · · · · ·	8303526			•		,
		8303527				8303757	
8275213		8303534	,			8303758	
8275233				8303640	9.4		
8276014			2.14	8303655	1.1,	8303766	2.8,
8277065	4.1,	8303540	2.7		9.1.		2.15
	4.2,	8303551	4.4	***************************************	•	8303770	1.1.
	4.3.	8303553		8303658			
	4 4	***************************************	,	8303670			•
	.,	***************************************					,
	,	8303554					,
	•			8303675			
	,	8303602	,	8303677		8303771	
				8303679	,	8303772	
8277090		8303604	,	***************************************	4.7,	8303776	
8277094	4.2			***************************************	9.1,	8303782	
8277099	7.3	8303615	1.2,	***************************************	9.2.	8303837	2.13,
8277103	4.1		2.10,		9.3 [°]		4.1,
8277138	4.3	***************************************	2.14.	8303681			-
8278007			2.17.				- ,
	•		, , ,		·····	8303839	
			. ,		,		
	,		,				,
	,		,		·····		,
		8303618		8303683		8303932	
8278008	•	8303620	,			8303981	
	4.2,		7.2,	8303692	2.9	8303987	7.3,
	4.3,		9.2,	8303697	1.2,		7.4,
	5.8		9.3		2.4,		7.5,
8301002	2.13	8303621	4.3,		,		7.6
8301004	2.15		5.8			8304014	2.1
8301210		8303622	4.1.			8304042	
8301409						8304608	
8301410			•			8304631	
8301439					,		
			,			8304660	
8301443			- ,	8303699		8305002	
					4.3		
8302141		8303624		8303703	2.10		
8302147	2.1	8303625	4.1,	8303705	4.1,		2.13,
8302470	2.12,		4.2,		4.2,		
	2.18		4.3,		4.3.	8305003	7.3,
8303004	2.13		4.5		4 4		7.4,
8303082		8303626	5.2.	8303712		1714)141111111111111111111111111111	7.5.
8303115				8303713			
	•	8303629				8305004	
		8303632		9909715	ე.ა		•
				8303715			•
0000116							,
8303116	,	8303632		8303729			•
	3.1/,		4.16		2.1,		2.9,

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
8305004(Cont)	2.10,	8305618	4.1,	8307002	2.6,	8307006	
	2.12,		4.2,	***************************************			4.13
	2.14,	8305618	4.3		2.10,	8307007	4.1,
	2.18,	8305619	3.14,		2.12,		4.2,
	7.1,		3.15,		2.13,		4.3,
	7.3,		4.1,		2.14,		4.5,
	7.4,		4.2,		2.18,		5.2,
	7.5,		4.3,		4.1,		5.3,
	7.6		4.4,		4.2,		9.2
8305005	2.12,		9.4,		4.3,	8307009	3.15,
	2.18		9.9		7.3,		4.3
8305006		8305624	2.1	***************************************	7.4,	8307010	1.1,
	2.10,	8305626	2.4,		7.5,		3.14,
	2.15.		•		7.6	***************************************	4.1,
			5.5.	8307003	2.10.		
			,		•	8307012	1.1.
	•		_ : '			,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
			,		,	8307023	
	,					8307025	
	′		. *			8307050	
		8305627	-	, , , , , , , , , , , , , , , , , , , ,			
	•	8305643			•	8307104	
	,						
						***************************************	•
8305008			,	8307004			•
							-
	,				,	8307106	'
							′
	,				,		
			,			***************************************	•
8305012	•		9.6,		•		7.5,
	9.1		9.7,		,		•
8305017	1.1,		9.9,		•		
	4.1		9.10.1		4.16,	8307107	
8305018	9.1	8305644	2.9,		5.9,	8307109	1.2,
8305021	1.1		5.2,		7.1	***************************************	2.2,
8305049	2.11		5.3,	8307005	2.1,	***************************************	2.16,
8305402	2.7,		9.3,		2.4,	***************************************	2.18,
			9.9,		2.7,		4.1,
			9.10.		2.10,		4.2,
	•	.,,,,,,,,,				.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
8305405		8305645				***************************************	
						8307111	
8305410		***************************************	,		,		
8305601						8307112	
			,				•
	,		•				
				***************************************		8307202	
	,						,
		8305646			•		
				••••	,		-
8305602	-	8305647		.,,	,		,
	•	8305906					
					•		
						8307203	•
8305603	5.13	8305916			•		•
8305604	6.4	8307002			- ,		- 1
		,	2.5.	***************************************	9.3		4.11

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
8307204	,	8340025	3.24	8403214-0100		8420201	2.17
	,	8340032		8403214-1290	4.13	8420227	4.13.
		8340033	3.24	8403214-1350	4.13,		
		8342404	1.2	••••••			,
	4.3,	8342405	2.3		· ·		•
	4.7,	8342406	1.2	8403214-1590	4.15	8420229	
	5.8,	8342801	6.1	8403217-0080		8420231	
	9.2,	8342807	1.2	8403217-0380		8420232	
	9.3	8342808	1.2.	8403217-1120		8424213	
8307206	4.5	***************************************	2.3	8403218-0180		8424233	
8307232	2.4	8342809		8403219-0200			,
8307316	5.1	8360005		8403219-1100		8424234	
8307910		8360008		8403220-1350			,
8307911		8381117		8403221		8440211	
8307912		8381118				8440215	
8307913		8381119		***************************************		8460025	
8310001		8381120		8405006			
	,	8381121			,	0400044	
		8381122		0405007		8462014	
8310002		8381123		8405007			
0310002				8405009	,	8464009	
	·····	8381124			,	8464212	
	,	8381125			,		····,
		8381126					
8310009		8381127		8405104		8466305	
8310019		8381128			,		2.6,
8310020		8381129					
8310022		8381130		8405202		8466306	
8310023		8381131		8405203		8467014	2.5,
8310026		8381132		8405209	5.2,		2.6,
		8381133	9.11	•••••			
8310027		8381134	9.11	8405301	4.9,	8468021	7.3
8310049		8381135			4.10,	8469012	2.5.
8310050	2.1	8381136	9.11		4.11,		
8310051		8381138	9.11				,
8310053	2.15	8381140	9.11	8405604	4.6	8469030	
8310070	5.8	8381146	9.11	8405605	4.7		
8310075	2.5,	8381147	9.11	8406002	72	8469032	
	2.6	8381148		8406005	2 10		 .′
8320236		8381149		8406008		8469033	
8320237	5.9	8381151		8406201			
8320238		8381152				8469034	
8320239	4.3	8381153		***************************************	,		
8320242		8381154		8406302		8500201	
8320243		8381156		8420056		8520001	
8320254		8381157					
8320256		8381158					
8320257		8381159		8420057			
8320263		8383776					
	•				- ,		
8320264		8393632			,	8520003	
		8401004-0180				8520013	•
8322022		0404004 0000		8420058			,
	•	8401004-0280		***************************************	,		
	,						
	- ,	8401012-1340		8420059			
		8402018-0030					•
8324014	6.1	8402020-0025	4.9	8420059			6.10,
				***************************************	9.11		9.3

Index 9

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
8520021	6.3	8582006-0010	4.13	8760107	5.2,	8760407	5.6
8528033	8.1	8584001	2.10,		5.3,	8760446	5.2
8528034	8.1	11474	2.11,		5.6,	8760449	
8528036		441411111111111111111111111111111111111	2.17,	•••••	5.8,	8760455	5.7
8528040		***************************************	9.10,	,	5.12,	8760458	5.6
8540001			9.10.1		5.13	8760479	5.6
8540002		8584002		8760108	5.6,	8760481	5.4,
8540023							5.5
8540048			•	8760109		8760482	
			. *	***************************************		8760486	5.5
8540076			•			8760501	5.8
8540218				8760110		8760510	
8540231		8584003				8760533	
8540263		8584018					-
8541030		8585133			,		,
8541201		8585134		8760111		8760534	
8541207		8585135			,	8760545	
		8585138		8760113			
8541260		8585139		8760115		8760550	
8541401		8585140		0700110	^		
8541409		8585141		8760117		8760552	
		8585142				8760553	
		8640027					
				8760118		8765204	
			9.10,	8760134		8765205	
		0.40.4		8760142		8769121	
8541433		9.10.1,	0.44			8769121	
			-	8760143		8769122	•
8546407	,	8640208			,		,
				070000			
8551001		8642001	,	8760202			
8551009				8760229			,
8551203		8642207		8760254		8769123	•
8551811		8642234					
8580110							-
,		8642235		8760268			,
8580111	,			8760273			•
		8642237		8760286	•	8769140	
8580115	2.2		9.3		5.10	8769141	
8580209	7.2	8700120		8760289	5.7	8769147	
8580309	2.5,	8702140	2.15	8760303	5.5,	8769545	
	2.6,	8720014	2.1			8780254	
	2.17,	8720015				8780264	
	7.1,	8721022	5.1	8760304		8786549	
	7.10	8721023	2.1			8841013	
8580311		8742005	5.7	8760305		8841017	
	2.6,	8760001	5.9,	8760307	5.8	8864034	
	7.1		5.10	8760308	5.8	8864036	
8580312	2.5,	8760020	5.10	8760309		8864037	
	2.6,	8760030	9.10,		5.3	8864038	2.1
	7.1		9.10.1	8760311	5.1	8864039	2.4
8580313		8760036		8760313	5.7,	8864040	
		8760057			5.8	8864041	
8580314		8760102		8760317		8866214	2.1
				8760322		8866215	
8580314		8760106		8760325		8866216	2.1
8580315		8760107		8760327		8866217	2.16
8582005-0680		J. J. J. J. H. H. H. H. H. H. H. H. H. H. H. H. H.	·····-··,				

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
8866218		8904034	6.14.1	CF4004839	3.5	CF4104019	3.1
8866220		8990147	2.1	CF4004952	3.3	CF4104020	
8866223		CF4000497	3.2	CF4004957	3.4,	CF4104067	
8880009	3.16,	CF4000855	3.1,	***************************************		CF4104077	
	3.17,			CF4004990		CF4145198	
	3.18,	CF4001079		CF4004993		CFF100108	
***************************************	3.19	CF4001080		CF4005006		CFF1002032	
8882005	3.16,	CF4001091		CF4005072		CFF1002036	
	3.17,	CF4001123		CF4005296		CFF1002044	
	3.18,	CF4001217		CF4005321		CFF100208	
***************************************	3.19 [°]	CF4001284		CF4005322		CFF1002520H8NP	
8902094	6.13	CF4001617		CF4005413		CFF1003020	
8902095		CF4001618			,	CFF1003028	
		CF4001899		CF4005430		CFF1003036	
8902096		CF4003091		CF4005524		CFF1003040	
		CF4003256			,	CFF1003040	
8902109		CF4003456		CF4005552			
		CF4003640				CFF1005020	
8902111				CF4006404		CFF1005024	
		CF4003680		CF4007180		CFF1005028	
8902115				054040404		CFF1005032	
8902121		CF4003778		CF4010464	-	CFF1005036	-
8902126				CF4045081		CFF1005040	
		CF4003783		CF4045236		CFF1005088	
		CF4004100		CF4045493			
8902127		CF4004111		CF4045577		CFF1007520H8	
		CF4004112		CF4045607		CFF1121810	
8902128		CF4004119		CF4045726		CFF1141412	
	•	CF4004144	,	CF4045767		CFF1300400U	
				CF4045884		CFF13005000	
8902129		CF4004161	,	CF4045887		CFF13006000	
8902131				CF4045899		CFF15003	
		CF4004184		CF4045901		CFF16202	3.2,
8902227	,	CF4004236		CF4045911	3.2		3.3
		CF4004237		CF40A1311		CFF17030516	3.6
8902228		CF4004240		CF40A1556	3.1	CFF18002	3.1
8902229		CF4004243		CF40A4009	3.1	CFF18005	3.3
		CF4004247C	3.6	CF40A4034	3.4	CFF190012	3.6
8902473		CF4004248	3.6	CF40A4046	3.6	CFF1900312	3.1
8902493	6.11	CF4004339	3.3	CF40A4148	3.3	CFF1900316	3.1
8902495	6.11,	CF4004464	3.3	CF40A4229	3.6	CFF190032	3.6
	6.13,	CF4004507	3.5	CF40A4252	3.6	CFF190034	
	6.14,	CF4004518	3.3	CF40A4254	3.3	CFF2400775	
		CF4004519	3.3	CF40A4255	3.3	CFF321006	
8902504	6.11	CF4004520	3.5	CF40A4258	3.6	CFF37010014	
8902511	6.7,	CF4004530	3.1	CF40A4259		CFF37010045	
	6.10	CF4004531		CF40A4279		CFF37020129	
8902527	6.6	CF4004534	3.3	CF40A4281		CFF37020131	
8902645		CF4004545		CF40A4282			
8902647		CF4004550		CF40A4291		CFF37020152	
8902653		CF4004551		CF40A6018		CFF37030220	
8902655		CF4004670		CF40RC7951		CFF37030231	
8903009		CF4004698			•	CFF37030231	
8903010		CF4004699		CF4101231		CFF37030242	
8903011		CF4004700		CF4104010		CFF37060916	
8904001		CF4004700 CF4004731		CF4104010			
8904001		CF4004737				CEE20000215	
		CF4004737			ა.ა	CFF39000315	
		OI 4004039	J.4,			CFF3900093	3.6

Part Number	Page	Part Number	Page	Part Number	Page	Part Number	Page
CFF39010156	3.1	CFF5503244	3.2	CFF621305K	3.1	CFF81650	3.4
CFF39010287	3.3	CFF5513650	3.2	CFF621309W	3.5	CFF81687	3.4,
CFF3901037	3.6	CFF5514458	3.1	CFF65181	3.2		3.5
CFF400855	3.4	CFF5524458	3.1	CFF65227	3.6	CFF91001	3.6,
CFF40108	3.5	CFF5531625	3.3	CFF65239	3.3	***************************************	7.3,
CFF40113	3.1	CFF5532435	3.4	CFF65257	3.3		7.4,
CFF40208S	3.2	CFF5543244	3.2	CFF65270	3.3	,	7.5,
CFF40211	3.4	CFF5551625	3.1	CFF66012S	3.1		7.6
CFF41209	3.5	CFF56870	3.6	CFF68105	3.1		
CFF41308R	3.1	CFF58047	3.3	CFF7400012D	3.6		
CFF460168	3.3	CFF58051	3.3	CFF79117G5	3.2		
CFF460268	3.2	CFF58540	3.3	CFF80100231	3.2		
CFF4903016	3.4,	CFF58544	3.3	CFF81500225	3.4		
	3.5	CFF58602	3.3	CFF81598	3.3		

The parts information in this publication is based on data available at the time it was printed. Because of continual improvement and advancing product design, your vehicle may not be identical to the parts information shown. Whenever there is a question, obtain the latest parts information available from your local dealer. JLG Industries, Inc. continually updates these publications electronically within our *OnLine Services*.



Benefits

- Available 24 hours a day, 7 days a week for your convenience.
- Prices and parts manuals are always current reduces errors and saves time.
- Improves service to your customers with quick access to valuable information.
- Reduces time required to gather information.
- Reduces processing time for warranty claims.

Program Features

- In a few easy steps you can:
- Look-up prices and availability.
- Identify parts using graphical parts manuals.
- Enter orders using part numbers, or order by selecting from graphical parts manuals.
- Review order status.
- Review invoices and credits.
- Review shipping information.
- Submit warranty claims

Visit Us at

http://www.jlg.com

Model No.	
Serial No.	



CORPORATE OFFICE JLG INDUSTRIES, INC.

1 JLG Drive McConnellsburg, PA. USA 17233-9533

Phone: (717) 485-5161 Toll Free: (877) 554-5438 Fax: (717) 485-6417

Service Direct: (717) 485-6657 Service Fax: (717) 485-6488 or (717) 485-6815 Parts Direct: (717) 485-6472 Parts Fax: (800) 733-8939 or (717) 485-6441

JLG Industries (Australia) P.O. Box 5119 11 Bolwarra Road Port Macquarie N.S.W. 2444 Australia Phone: (61) 2 65 811111 Fax: (61) 2 65 810122

JLG Latino Americana Ltda. Rua Eng. Carlos Stevenson,

80-Suite71 13092-310 Campinas-SP Brazil Phone: (55) 19 3295 0407

Phone: (55) 19 3295 0407 Fax: (55) 19 3295 1025

JLG Industries (Europe) Kilmartin Place, Tannochside Park Uddingston G71 5PH Scotland Phone: (44) 1 698 811005 Fax: (44) 1 698 811055 JLG Industries (UK)
Unit 12, Southside
Bredbury Park Industrial
Estate
Bredbury
Stockport
SK6 2sP
England
Phone: (44) 870 200 7700
Fax: (44) 870 200 7711

JLG Europe B.V. Jupiterstraat 234 2132 HJ Hoofddorp The Netherlands Phone: (31) 23 565 5665 Fax: (31) 23 557 2493

JLG Industries (Pty) Ltd. Unit 1, 24 Industrial Complex Herman Street Meadowdale Germiston South Africa Phone: (27) 11 453 1334 Fax: (27) 11 453 1342 JLG Deutschland GmbH Max Planck Strasse 21 D-27721 Ritterhude/lhlpohl Bei Bremen Germany Phone: (49) 421 693 500 Fax: (49) 421 693 5035

JLG Industries (Norge AS) Sofeimyrveien 12 N-1412 Sofienyr Norway Phone: (47) 6682 2000 Fax: (47) 6682 2001

Plataformas Elevadoras JLG Iberica, S.L. Trapadella, 2 P.I. Castellbisbal Sur 08755Castellbisbal Spain

Phone: (34) 93 77 24700 Fax: (34) 93 77 11762 JLG Industries (Italia) Via Po. 22 20010 Pregnana Milanese-MI Italy Phone: (39) 02 9359 5210 Fax: (39) 02 9359 5845

JLG Polska UI. Krolewska 00-060 Warsawa Poland Phone: (48) 91 4320 245 Fax: (48) 91 4358 200

JLG Industries (Sweden) Enkopingsvagen 150 Box 704 SE - 175 27 Jarfalla Sweden Phone: (46) 8 506 59500 Fax: (46) 8 506 59534